

Samsung GALAXY S<sup>®</sup>4 mini

## User Guide



# Table of Contents

---

Get Started .....	1
Your Phone at a Glance.....	1
Set Up Your Phone.....	1
Activate Your Phone .....	3
Complete the Setup .....	4
Set Up Voicemail .....	4
Sprint Account Information and Help.....	5
Sprint Account Passwords .....	5
Manage Your Account .....	5
Phone Basics .....	7
Your Phone's Layout.....	7
Key Functions.....	7
Turn Your Screen On and Off .....	9
Touchscreen Navigation .....	10
Features .....	17
Motions and Gestures.....	17
Smart Screen.....	18
Voice Control .....	18
Your Home Screen .....	19
Create Shortcuts.....	19
Add and Remove Primary Shortcuts.....	20
Add and Remove Widgets .....	21
Extended Home Screens .....	21
Recent Applications .....	21
Status Bar .....	22
Notification Panel .....	24
Quick Settings .....	25
Enter Text.....	26
Text Input Methods .....	26
Google Voice Typing .....	27

Samsung Keyboard .....	27
Swype.....	28
Tips for Editing Text.....	29
Phone Calls .....	30
Make Phone Calls.....	30
Call Using the Keypad .....	30
Call from Logs .....	30
Call from Contacts .....	31
Call a Number in a Text Message.....	31
Call a Number in an Email Message.....	31
Call Emergency Numbers .....	31
Receive Phone Calls.....	32
Answer an Incoming Call .....	32
Mute the Ringing Sound .....	32
Reject an Incoming Call .....	32
Reject a Call with a Text Message.....	33
Phone Call Options.....	33
Dialing Options .....	33
Caller ID .....	34
Call Waiting .....	34
3-Way Calling .....	34
Call Forwarding .....	35
In-Call Options.....	35
Speed Dials .....	36
Voicemail .....	37
Set Up Voicemail .....	37
Retrieve Your Voicemail Messages .....	37
Voicemail Notification .....	37
Visual Voicemail .....	38
Logs.....	38
View Logs.....	38
Logs Options .....	39
Clear Logs .....	39

Contacts.....	40
Get Started with Contacts .....	40
Access Contacts .....	40
Contacts Options .....	41
Add a Contact.....	42
Save a Phone Number.....	43
Edit a Contact .....	43
Add or Edit Information for a Contact.....	43
Assign a Picture to a Contact.....	44
Assign a Ringtone to a Contact.....	44
Link a Contact.....	45
Delete a Contact.....	45
Add Contacts to Your Favorites .....	45
Groups.....	46
Share a Contact.....	47
Accounts and Messaging .....	48
Gmail/Google.....	48
Create a Google Account.....	48
Sign in to Your Google Account .....	49
Access Gmail.....	49
Send a Gmail Message .....	49
Read and Reply to Gmail Messages.....	50
Samsung Account.....	50
Email .....	51
Add an Email Account .....	51
Add a Microsoft Exchange ActiveSync Account.....	51
Compose and Send Email .....	52
Reply or Forward Email .....	53
Manage Your Email Inbox.....	53
Email Settings.....	54
Delete an Email Account.....	57
Text and Multimedia Messaging.....	57
Send a Message.....	57

New Messages Notification.....	58
Managing Messages.....	59
Messaging Settings .....	60
Social Networking Accounts.....	62
Flipboard .....	62
Google+.....	62
Hangouts .....	62
YouTube.....	63
Facebook.....	63
Apps and Entertainment.....	64
Google Play Store.....	64
Find and Install an App .....	64
Create a Google Wallet Account.....	65
Open an Installed App .....	65
Uninstall an App .....	65
Google Play Books .....	66
Google Play Games.....	66
Google Play Newsstand.....	66
Movies, TV, and Media .....	67
Google Play Movies & TV .....	67
Group Play.....	67
Music .....	68
Google Play Music.....	68
Music.....	69
Navigation.....	72
Google Maps .....	72
TripAdvisor .....	72
Samsung Apps .....	73
Samsung Hub.....	73
Samsung Link.....	75
Configure Samsung Link Settings.....	76
Use Samsung Link to Share Media with Another Device .....	77
Sprint Zone .....	77

Story Album .....	77
WatchON .....	78
Web and Data .....	79
Wi-Fi .....	79
Turn Wi-Fi On and Connect to a Wi-Fi Network .....	79
Connect to a Different Wi-Fi Network.....	80
Connections Optimizer.....	81
Data Services General Information (3G and 4G Networks) .....	81
Your Data Services User Name .....	81
4G Services .....	82
Virtual Private Networks (VPN) .....	82
Prepare Your Phone for VPN Connection .....	83
Add a VPN.....	83
Connect to a VPN .....	83
Disconnect from a VPN .....	84
Chrome.....	84
Internet Browser .....	84
Lumen Toolbar.....	84
Camera and Video .....	86
Camera.....	86
Take a Picture .....	87
Record Videos .....	87
Camera Options .....	88
Quick Camera Settings.....	89
Advanced Camera Settings .....	90
Gallery .....	91
View Photos and Videos .....	92
Zoom In or Out on a Photo .....	93
Edit Photos .....	94
Share Photos and Videos .....	94
Photos .....	96
Video .....	97
Tools and Calendar.....	100

Calendar .....	100
Add an Event to the Calendar .....	100
Event Alerts .....	101
View Events .....	102
Delete Events .....	102
Clock .....	103
Calculator .....	104
Dropbox .....	104
Manually Uploading a Picture to Dropbox .....	104
Google Search .....	104
Google Settings .....	105
Help .....	105
My Files .....	105
POLARIS Office 5 .....	105
S Memo .....	106
S Translator .....	107
Voice Services .....	107
S Voice .....	108
Voice Recorder .....	108
Voice Search .....	109
Bluetooth .....	109
Turn Bluetooth On or Off .....	109
Pairing with a Bluetooth Device .....	110
Reconnect to a Bluetooth Device .....	110
Disconnect or Unpair from a Bluetooth Device .....	111
Send Information Using Bluetooth .....	111
Receive Information Using Bluetooth .....	112
Memory Card .....	113
Install a microSD Card .....	113
Remove a Memory Card .....	113
View Memory Card Usage .....	114
Format a Memory Card .....	114
Unmount a Memory Card .....	114

Transfer Files Between Your Phone and a Computer .....	114
Update Your Phone .....	115
Before Updating Your Firmware.....	115
Update Your Phone .....	116
Settings.....	117
Wi-Fi Settings .....	117
Turn Wi-Fi On or Off .....	117
Configure Wi-Fi Settings.....	118
Other Wi-Fi Settings .....	118
Wi-Fi Direct.....	119
Bluetooth Settings.....	119
Turn Bluetooth On or Off.....	120
Pairing with Other Bluetooth Devices.....	120
Data Usage.....	121
More Networks Settings.....	122
Airplane Mode .....	122
Default Messaging App.....	122
Printing .....	122
Mobile Networks .....	124
VPN Settings .....	124
NFC .....	125
Turn NFC On or Off .....	125
Android Beam.....	125
Tap and Pay .....	125
S Beam.....	125
Turn S Beam On or Off.....	126
Nearby Devices .....	126
Screen Mirroring .....	127
Lock Screen.....	127
Screen Lock.....	127
Display Settings .....	129
Wallpaper .....	129
Notification Panel Settings .....	130



Screen Mode .....	130
Brightness .....	130
Auto Rotate Screen .....	131
Screen Timeout .....	131
Daydream .....	131
Font Style .....	132
Font Size .....	132
Touch Key Light Duration .....	132
Show Battery Percentage .....	132
Edit After Screen Capture .....	132
Auto Adjust Screen Tone .....	133
LED Indicator .....	133
Sound Settings .....	133
Volume .....	133
Ringtones .....	134
Vibrations .....	134
Notifications .....	134
Vibrate When Ringing .....	134
Dialing Keypad Tone .....	135
Touch Sounds .....	135
Screen Lock Sound .....	135
Emergency Tone .....	135
Samsung Keyboard Settings .....	135
Adapt Sound .....	136
Home Screen Mode .....	136
Call Settings .....	136
Set Up Call Rejection Messages .....	136
Answering/Ending Calls .....	137
Turn Off Screen During Calls .....	137
Call Alerts .....	137
Call Accessories .....	138
Ringtones and Keypad Tones .....	138
Personalize Call Sound .....	138

Noise Reduction .....	139
Increase Volume In Pocket.....	139
US Dialing .....	139
International Dialing .....	139
TTY Mode.....	140
Hearing Aids.....	140
DTMF Tones.....	140
Voicemail Settings .....	140
Voice Privacy.....	140
Blocking Mode .....	141
Hands-free Mode .....	142
Power Saving Mode.....	142
Accessories .....	142
Accessibility .....	143
Language and Input.....	144
Choose a Default Language .....	144
Set a Default Input Method .....	145
Google Voice Typing Settings.....	145
Samsung Keyboard Settings .....	145
Swype Settings.....	147
Voice Search Settings .....	148
Text-To-Speech Options.....	149
Pointer Speed.....	149
Motions and Gestures.....	149
Smart Screen.....	150
Smart Stay.....	150
Voice Control .....	151
Accounts.....	151
Add an Account .....	151
Backup Options .....	152
Location Settings .....	153
Security.....	154
Encryption .....	154

Passwords .....	154
Device Administration .....	154
Security Update Service .....	155
Credential Storage .....	155
Application Manager .....	156
Default Applications .....	156
Battery .....	156
Storage .....	157
Date and Time .....	157
Activate This Device .....	158
System Update .....	158
About Device .....	158
Copyright Information .....	160
Index .....	161

# Get Started

---

The following topics give you all the information you need to set up your phone and Sprint Prepaid service the first time.

## Your Phone at a Glance

The following illustration outlines your phone's primary features.



## Set Up Your Phone

You must first install and charge the battery to begin setting up your phone.

1. Install the battery.

 
- Using the slot provided, gently lift the cover off the phone.



- Insert the battery, aligning the gold contacts on the battery with the gold contacts on the phone, and gently press the battery into place.



- Replace the battery compartment cover, making sure all the tabs are secure and there are no gaps around the cover.

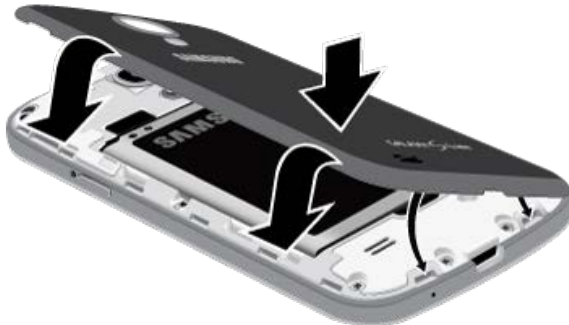

2. Plug the USB cable into the Charger/Accessory Jack on the bottom of the phone.



3. Plug the other end of the USB cable into the Charging Head, and then plug the Charging Head into an electrical outlet to charge your battery. Fully charging a battery may take up to three hours.

**Note:** Your phone's battery should have enough charge to turn the phone on and find a signal, run the setup application, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

4. Press and hold the **Power/Lock Key** to turn the phone on.
  - If your phone is activated, it will turn on, search for Sprint service, and begin the setup application.
  - If your phone is not yet activated, see [Activate Your Phone](#) for more information.

## *Activate Your Phone*

To activate your Sprint Prepaid service, you must register your phone online.

### Register Your Phone on Sprint Prepaid

1. From your computer's browser, visit [sprint.com/prepaidactivate](http://sprint.com/prepaidactivate).
2. Choose an activation option and click **Next**, and then enter your ZIP code and click **Next**.
3. When prompted, enter the serial number (MEID) printed on the label on your phone's packaging.
4. Follow the instructions to select a plan and payment method.
  - If you're swapping phones or bringing your number over from a different carrier, follow the prompts to sign in or provide additional information.
5. Continue to follow the instructions to program your phone. Once you see the "Congrats" page, your phone and plan are activated.

- To confirm activation, make a phone call. If your phone is still not activated, visit [sprint.com/prepaidsupport](http://sprint.com/prepaidsupport) for assistance. If you do not have access to the internet, call Sprint Customer Service at **1-855-639-4644** from another phone.

**Tip:** Do not press the **Power/Lock Key** while the phone is being activated. Pressing the **Power/Lock Key** cancels the activation process.

**Note:** If you are having any difficulty with activation, visit [sprint.com/prepaidsupport](http://sprint.com/prepaidsupport).

## Complete the Setup

After you turn on your phone and activate it, your phone displays a Welcome screen. From the Welcome screen follow the prompts to set up features and preferences on your phone.

**Note:** In some cases, you may be able to complete the setup process before your phone has been activated on your Sprint account.

During setup and activation, you may see Sprint Connections Optimizer notice. Read the notice and tap **I Agree** to use Sprint Connections Optimizer, or tap **Settings** and uncheck option if you do not wish to use the Sprint Connections Optimizer.


1. At the **Welcome screen**, follow the on-screen instructions to configure your phone's basic options, such as language, date and time, Wi-Fi connections, location settings, etc.
  - **Google Account:** Many of your phone's applications, such as Gmail, Google Maps, Hangouts, and the Google Play Store, require a Google Account. To use these applications, you must set up your Google Account on your phone. Complete the steps to sign in to your current Google Account, or sign up for a new Google Account.
  - **Samsung Account:** Your Samsung Account is used for access to Samsung apps and services, such as Samsung Hub, Samsung Apps, Samsung Link, and much more. Complete the steps to sign in to your current Samsung Account, or sign up for a new Samsung Account.
2. Tap **Finish** to complete setup.

## Set Up Voicemail

Your phone automatically transfers all unanswered calls to voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access.

1. Press **Home**  and tap  **Phone**.

If your screen is locked, press the **Power/Lock Key** to turn on the display and then swipe your screen in any direction. See [Turn Your Screen On and Off](#).

2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Note: Voicemail Password**—Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

## *Sprint Account Information and Help*

Find out about account passwords and information about managing your account and finding help.

### *Sprint Account Passwords*

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

#### **Account User Name and Password**

If you are the account owner, you will create an account user name and password when you sign on to [sprint.com/prepaidmysprint](http://sprint.com/prepaidmysprint). (Click **Sign in/Sign up** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [sprint.com/prepaidmysprint](http://sprint.com/prepaidmysprint).

#### **Voicemail Password**

You'll create your voicemail password when you set up your voicemail. See [Set Up Voicemail](#) for more information on your voicemail password.

#### **Data Services Password**

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [sprint.com/prepaidmysprint](http://sprint.com/prepaidmysprint).

## *Manage Your Account*

Manage your Sprint account from your computer, your Sprint phone, or any other phone.

**Online:** [sprint.com/prepaidmysprint](http://sprint.com/prepaidmysprint)



- View cash balance and/or payment date.
- Check minute usage (if not on an unlimited voice plan).
- Add a credit/debit card to set up AutoPay or make one-time payments.
- See or modify your price plan.
- Change your Account PIN.

#### **From a Phone**

- For help, dial Sprint Customer Service at 1-855-639-4644 from any phone.

#### **Reload Your Account**

- Visit [sprint.com/prepaidreload](https://sprint.com/prepaidreload) to reload your cash balance by making a one-time payment with a credit or debit card.

# Phone Basics

---

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The following topics will introduce the basic functions and features of your phone.

## Your Phone's Layout

This illustration outlines your phone's basic layout.



## Key Functions

The following list defines the features listed in the above illustrations.

- **Earpiece** lets you hear the caller and automated prompts during calls.
- **Proximity Sensor** detect the presence of objects near the phone, such as when using motion settings. For example, while talking on the phone the sensor detects when it's near your ear and turns off the screen to prevent accidental key presses.
- **Light Sensor** detects the ambient light level, such as when setting screen brightness when Automatic brightness is enabled, and when using the Camera.
- **Front Camera** allows you to take pictures and videos of yourself.

- **Power/Lock Key** lets you turn the phone on or off, turn the screen on or off, or lock the screen. Press and hold for a Device options menu, where you can turn the phone off or restart it, or for easy access to Airplane mode, and to Mute, Vibrate, and Sound modes.
- **Back Key** lets you return to the previous screen, or close a dialog box, options menu, the Notifications panel, or on-screen keyboard.
- **Home Key** returns you to the Home screen. Press and hold to open the recently used applications window, and access Task Manager and Google Search. Quickly press twice to launch the S Voice app.
- **Menu Key** allows you to access a menu from most of your phone's screens.
- **Volume Key** adjusts the volume of your phone's sounds. From the Home screen, press to adjust master volume. During calls or playback, press to adjust volume. Press to mute the ringtone of an incoming call.
- **LED indicator** displays red when charging, green when fully charged, blue when powering up, and orange when a notification has arrived.
- **Microphones** allow other callers to hear you when you are using the speakerphone, and captures sound during recording.
- **3.5 mm Headset Jack** allows you to plug in either a stereo headset or an optional headset for convenient, hands-free conversations.
- **Camera** lets you take pictures and record videos.
- **Flash** helps illuminate subjects in low-light environments when the camera is focusing and capturing a photo or video.
- **USB Charger/Accessory Port** allows you to connect the phone charger/USB cable (included) and other optional accessories (not included).
- **Speaker** plays ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
- **Cover Release** allows you to lift the cover from the back of your phone.
- **Infrared Transmitter** controls external devices such as TVs.

**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

## Turn Your Phone On and Off

Use the Power/Lock Key to turn the phone on or off.

### Turn Your Phone on or off

- Press and hold the **Power/Lock Key**.

The screen remains blank while your phone is off. If the phone is off during charging, the screen displays a charging animation.

## Turn Your Screen On and Off

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

### Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power/Lock Key**. Pressing the **Power/Lock Key** again will turn on the screen and display the lock screen.

To save battery power, the phone automatically turns off the screen (times out) if you leave it idle for a certain period of time. You will still be able to receive messages and calls while the phone's screen is off.

**Note:** For information on how to adjust the time before the screen turns off, see [Screen Timeout](#).

### Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power/Lock Key**.
2. Unlock the screen:
  - If you are using the default screen lock, swipe the screen in any direction to unlock it.
  - If you have set up a screen lock, use your screen lock. For more information, see [Screen Lock](#).

# *Touchscreen Navigation*

Your phone's touchscreen lets you control actions through a variety of touch gestures.

## Tap

When you want to type using the on-screen keyboard, select items on-screen such as application and settings icons, or press on-screen buttons, simply tap them with your finger.



## Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.



## Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



## Drag

To drag, touch and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.





## Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.



## Pinch and Spread

“Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)





**Tip:** Pinching any Home screen will let you see thumbnails of all seven Home screens. Tap a thumbnail to go straight to another Home screen.

## Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard.



**Note:** You can control screen rotation with the Auto-rotate screen setting. To make this selection, press  and tap  > **Settings** > **My device** tab > **Display** > **Auto rotate screen**. See [Auto Rotate Screen](#) for more information.

# Features

Your phone offers new features for using gestures to interact with your phone.

## Motions and Gestures

Interact with your phone using motions of the phone itself, or with gestures you make with your hands.

### Motion

Control your phone with natural movements, like putting the phone to your ear to call a contact displayed on the screen.

- **Motion:** Control your phone with natural movements, like putting the phone to your ear to call a displayed contact.
  - **Direct call:** Lift the phone to your ear while viewing a contact to call the contact.
  - **Smart alert:** Lift the phone to receive notifications of missed calls and notifications that occurred while the phone was stationary.
  - **Zoom:** Tilt the phone to zoom in or out when viewing pictures in Gallery.
  - **Move an icon:** Move the phone left or right while touching an icon to reposition it to another page.
  - **Browse an image:** Move the phone in a side-to-side motion to pan from side to side while viewing an image.
  - **Mute/pause:** Mute incoming calls and pause playback by turning the phone screen-side down.
- **Palm motion:** Control the phone by touching the screen with the palm of your hand.
  - **Mute/pause:** Mute incoming calls and pause playback by covering the screen with your hand.

### Enable Motion Gestures

- Press  and tap  > **Settings** > **My device** tab > **Motions and gestures** > **Motion**. For more information, see [Motions and Gestures](#).

## Smart Screen

Smart screen features allow you to have your phone automatically detect when you are looking at the screen.

Smart screen features include:

- **Smart stay:** The screen will not time out as long as you are looking at it.

Smart screen uses the front camera to detect when you are facing the screen. Some factors that may affect the ability of the front camera to detect your face are:

- When the phone is not docked or held upright, for example when placed on a table.
- When the front camera cannot detect your face and eyes.
- When the front camera is being used for the current application.
- When the source of light is behind you, or when using the phone in the dark.

## Configure Smart Screen

Enable Smart screen features, and learn about using them.

- Press  and tap  > **Settings** > **My device** tab > **Smart screen**.

## Voice Control

Use spoken commands to control and interact with your phone, such as:

- **Incoming calls:** When enabled, you can answer or reject calls with the voice commands “Answer” and “Reject”. When you answer a call with the voice command, the Speaker will automatically be turned on for hands-free talking.
- **Alarm:** When enabled, you can stop or snooze alarms with the voice commands “Stop” and “Snooze”.
- **Camera:** When enabled, you can take pictures with the voice commands “Smile”, “Cheese”, “Capture” and “Shoot”.
- **Music:** When enabled, you can control the music player with the voice commands “Next”, “Previous”, “Pause”, “Play”, “Volume Up”, and “Volume Down”.

## Configure Voice Control

Enable Voice control features, and learn about using them.

- Press  and tap  > **Settings** > **My device** tab > **Voice control**.

## Your Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

**Note:** You can keep swiping in one direction to move through all the home screens, back to the home screen. The small circles toward the bottom of the screen let you know your current screen position.



**Tip:** Press  to return to the main Home screen from any other screen.




## Create Shortcuts

Learn how to add, move, or remove items from the home screen.


### Add Shortcuts from the Applications Menu

1. Press  to display the main Home screen, and then navigate to the desired screen.
2. Tap  **Apps** to display applications, and then scroll to locate your desired application.
3. Touch and hold the application icon, and then drag it to a position on the home screen.
4. Release the shortcut to place it on the screen.

## Add Shortcuts from the Home Screen

1. Press  to display the main Home screen, and then navigate to the desired screen.
2. Touch and hold an empty area of the Home screen, and then tap **Apps and widgets**.
3. Touch and hold the application icon, and then drag it to a position on the home screen.
4. Release the shortcut to place it on the screen.

## Remove a Shortcut

1. Press  to display the main Home screen.
2. Touch and hold the desired shortcut to unlock it from its location on the current screen.
3. Drag the icon to the Remove icon and release it. As you place the shortcut into the Trash, both items turn red.


**Note:** Removing a shortcut does not delete the application, it simply removes the shortcut from the home screen.

## *Add and Remove Primary Shortcuts*

Primary shortcuts appear at the bottom of the main Home screen by default (Phone, Contacts, Messaging, Internet, and Apps).

You can change any of your primary shortcuts, except the Apps shortcut.


**Note:** Before replacing a primary shortcut, you must first add the replacement shortcut to the Home Screen. For more information, see [Create Shortcuts](#).

1. Press  to display the main Home screen.
2. Touch and hold the primary shortcut you want to replace and then drag it to an empty space on any Home screen.
3. Scroll the Home screen to find the shortcut you want to add as the new primary shortcut.
4. Touch and hold the new shortcut and then drag it to the empty space in the row of primary shortcuts. The new primary shortcut will now appear on all Home screens.


## Add and Remove Widgets

Widgets are self-contained applications that reside either in your Widgets tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an on-screen application. Widgets can include Contacts shortcuts, bookmarks, Gmail and email accounts, and many other types of apps.

### Add a Widget

1. Press  to display the main Home screen, and then navigate to the desired screen.
2. Touch and hold an empty area of the Home screen, and then tap **Apps and widgets > Widgets**.
3. Touch and hold a widget, and then drag it to a position on the home screen.
4. Release the widget to place it on the screen.

### Remove a Widget

1. Press  to display the main Home screen.
2. Touch and hold the desired widget. This unlocks it from its location on the current screen.
3. Drag the widget to the Remove icon and release it.

**Note:** Removing a widget does not delete the widget, it simply removes the widget from the current screen.


## Extended Home Screens

In addition to the main home screen, your phone has six extended home screens to provide more space for adding icons, widgets, and more. Touch and hold the icon or widget and then drag across the screen to move from the main screen to an extended screen.

**Note:** You can have up to seven screens, including the Main home screen.

## Recent Applications

You can access recently-used applications through a display of shortcuts to the applications themselves.














1. Press and hold  from any screen to display recently used applications.
2. Tap an application to open it.













## Status Bar

The Status bar at the top of the home screen provides phone and service status information on the right side and notification alerts on the left. To view notification alerts, touch and hold the Status bar and drag it down.

### Status Icons

 
Icon	Description
	Bluetooth is On
	Bluetooth paired
	Wi-Fi® active
	Smart screen enabled
	Vibrate
	Mute
	Speakerphone Active
	Network (full signal)
	3G service is active. When transferring data, the icon spins.
	Spark 4G LTE service is active. When transferring data, the icon spins.
	Airplane Mode
	Battery (charging)
	Battery (full charge)

### Notification Icons

Icon	Description
	Missed call
	New email
	New Gmail
	New message
	New voicemail
	Event
	USB connection
	Updates available
	Downloading
	Keyboard active

# Notification Panel

The Notification Panel displays information about connections, alerts, new messages, and more. It also has Quick settings—buttons which allow you to quickly access and change common system settings.

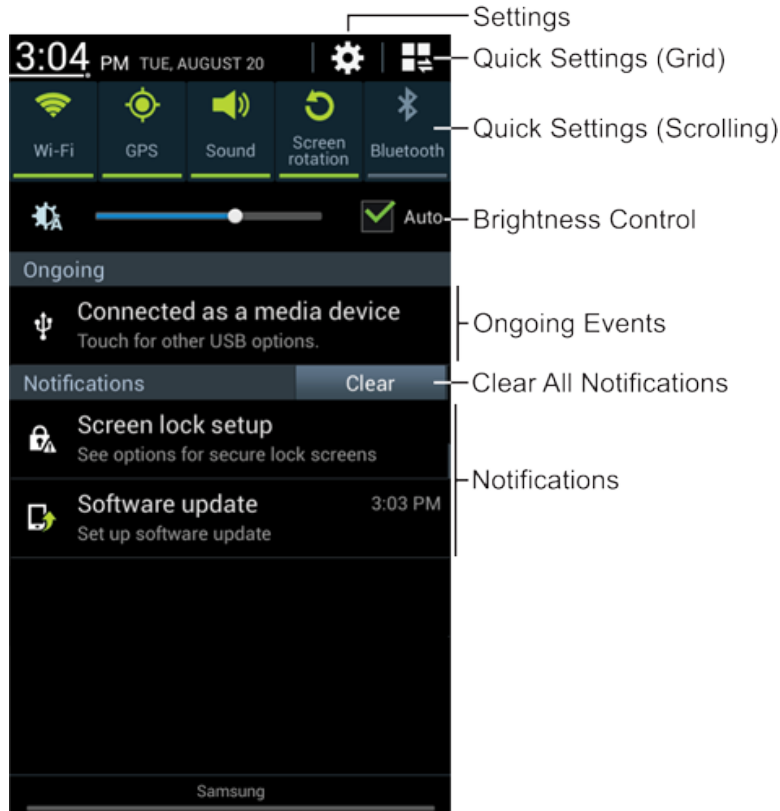

- **Settings:** Access System settings. For more information, see [Settings](#).
- **Quick Settings (Grid):** Display Quick settings in a grid.
- **Quick Settings (Scrolling):** Display Quick settings in a scrollable list.
- **Brightness Control:** Adjust the brightness of the display.
- **Ongoing Events:** Display ongoing events, such as USB connections.
- **Clear All Notifications:** Remove all notifications.
- **Notifications:** Display notifications, such as new email and software updates.

## Access the Notifications Panel

1. Touch and slide downward from the top of the screen to display the Notification Panel. Slide the Notification Panel upward to close it.
2. Tap ongoing events or notifications to view details, or to launch the related app or feature.

## Clearing Notifications


- Touch and slide an item left or right to clear it.

– or –

Tap **Clear** to remove all notifications.

## Quick Settings

Quickly enable/disable common system settings for your tablet.

1. Touch and slide downward from the top of the screen to display the Notification Panel.
2. To view all Quick settings, touch , or swipe across the Quick settings to the left.
3. Touch a Quick setting to enable (green) or disable (grey) the feature:
  - **Wi-Fi:** Enable Wi-Fi connections. For more information, see [Wi-Fi Settings](#).
  - **Location:** Enable or disable GPS services. For more information, see [Location Settings](#).
  - **Sound/Vibrate/Mute:** Control system sounds.
  - **Screen rotation:** Automatically rotate the screen from landscape to portrait and vice versa when the tablet is tilted.
  - **Bluetooth:** Activate Bluetooth. For more information, see [Bluetooth Settings](#).
  - **Blocking mode:** Disable notifications for selected features. For more information, see [Blocking Mode](#).
  - **Power saving:** Activate Power saving mode. For more information, see [Power Saving Mode](#).
  - **Screen Mirroring:** Share your phone's screen with another device, using an optional AllShare Cast accessory (not included). For more information, see [Screen Mirroring](#).
  - **S Beam:** Send or receive data by touching your phone to another NFC-capable device. For more information, see [S Beam](#).

- **NFC:** Enable NFC (Near Field Communication) to share information between your phone and another NFC device by touching the devices together, typically back-to-back. For more information, see [NFC](#).
- **Hands-free mode:** Read new notifications aloud. For more information, see [Hands-free Mode](#).
- **Smart stay:** Set the screen to stay on as long as you are looking at it. For more information, see [Smart Stay](#).
- **Sync:** Synchronize contacts, email, etc. with the network.
- **Airplane mode:** Disable all wireless connections. For more information, see [Airplane Mode](#).

**Note:** To customize Quick Settings, press , and then tap  **Menu > Settings > My device tab > Display > Notification Panel**. For more information, see [Notification Panel](#).

## Enter Text

You can type on your phone using the available touchscreen QWERTY keyboard, or by speaking your inputs.

### Text Input Methods

Your phone offers several text input methods.

- **Google voice typing** allows you to speak your entries.
- **Samsung keyboard** allows you to enter text by touching keys on a virtual QWERTY keyboard. Samsung keyboard includes optional predictive text, which matches your key touches to common words so you can select a word to insert it into your text.
- **Swype** lets you enter words by swiping across the virtual QWERTY keyboard. Instead of tapping each key, use your finger to trace over each letter of a word. You can also tap letters to enter words.

### Select a Default Text Input Method

You can select a default Text Input Method from Settings, or choose on at any time while entering text.

#### From Settings:

- Press  and tap  > **Settings > My device tab > Language and input > Default**.

#### While entering text:

1. From a screen where you can enter text, drag down from the top of the screen to open the Notifications panel.
2. Tap **Select input method**, and then choose a text entry method.

## Google Voice Typing




This feature uses Google voice recognition to convert your spoken words into text.

### Use Google Voice Typing to Enter Text

1. From a screen where you can enter text, drag down from the top of the screen to open the Notifications panel, and then tap **Select input method > Google voice typing**.
2. Speak into the microphone and watch your text being entered on-screen.
3. If the text is incorrect, tap **DELETE**.
4. Once you have completed entering your text, tap **Done**. The on-screen keyboard will reappear.

**Note:** Select a language by tapping at the bottom of the **Listening** area. Tap **Add more languages** to assign a new language via the Google voice typing menu. Removing the check mark from the **Automatic** field allows you to select additional languages.

### Configure Google Voice Typing





- Press  and tap  > **Settings** > **My device** tab > **Language and input**, and then tap  next to **Google voice typing**.

 

**Note:** For more information about Samsung Keyboard settings, see [Google Voice Typing Settings](#).

## Samsung Keyboard




With Samsung Keyboard, it's easy to enter text, symbols, and numbers.

### Use Samsung Keyboard to Enter Text

1. From a screen where you can enter text drag down from the top of the screen to open the Notifications panel, and then tap **Select input method > Samsung keyboard**.
2. Tap keys to enter text. While entering text, use these options:
  - If you make a mistake, tap  to delete incorrect characters. Touch and hold  to delete a whole word or field.
  - Tap  to change the case of the text. Tap  twice to switch to all capitals.

- Tap  to switch to a symbols keyboard, to enter symbols. There are two symbol keyboards.
- Tap  to switch to **Google Voice typing**, to enter text by speaking.

## Configure Samsung Keyboard

- Press  and tap  > **Settings** > **My device** tab > **Language and input**, and then tap  next to Samsung keyboard.





 
**Note:** For more information about Samsung Keyboard settings, see [Samsung Keyboard Settings](#).

## Swype




Swype lets you enter words by tracing over the letters on the virtual QWERTY keyboard. Instead of tapping each key, use your finger to trace over each letter of a word. You can also tap letters to enter words.

Swype provides next-letter prediction and regional error correction, which can compensate for tapping the wrong keys on the virtual QWERTY keyboards.

## Use Swype to Enter Text

1. From a screen where you can enter text drag down from the top of the screen to open the Notifications panel, and then tap **Select input method** > **Swype**.
2. Swipe your finger continuously over the letters to form a word. As you swipe over letters, words matching your pattern display at the top of the Swype keyboard. To enter a word, lift your finger, or tap a word at the top of the keyboard.
3. While entering text, use these options:
  - If you make a mistake, tap  to delete a single character. Touch and hold  to delete an entire word or field.
  - By default, Swype starts with a capital at the beginning of text. Tap  to start with a capital letter, or tap  twice to enter all capitals.
  - Tap  to switch to a symbols keyboard, and then tap keys to enter symbols.

## Configure Swype

- Press  and tap  > **Settings** > **My device** tab > **Language and input**, and then tap  next to **Swype**.







— or —

From the Swype keyboard, touch and hold .

**Note:** For more information about Swype settings, see [Swype Settings](#).

## *Tips for Editing Text*

These tips allow you to cut or copy selected text and paste it into a separate selected area.

1. In a text entry field, double-tap the text.
2. Touch and drag the sliders to highlight and select the desired text.
3. Tap an on-screen option from the Edit text menu bar. You can drag your finger along the menu bar to see all the options:
  -  **Select all:** Highlights all the text in the field.
  -  **Cut:** Removes the selected text and saves it to the clipboard.
  -  **Copy:** Copies the selected text to the clipboard.
  -  **Translate:** Launches S Translator to translate the selected text.
  -  **Paste:** Inserts the last copied or cut text into the current field.
  -  **Clipboard:** Displays the clipboard to choose previously cut or copied text.



# Phone Calls

---





With the Sprint National Network and your phone's calling features, you can enjoy clear phone calls across the country.

## Make Phone Calls

There are several convenient ways to place calls from your phone.




### Call Using the Keypad

The most "traditional" way to place a call is by using the phone's dialer screen.

1. Press  and tap  **Phone**.
2. Tap the number keys on the keypad to enter the phone number. As you enter digits, Smart Dial searches for contacts that match. If you see the number you want to dial, tap it to place the call immediately without entering the rest of the number.
3. Tap  to call the number.
4. To end the call, tap .

### Call from Logs

All incoming, outgoing and missed calls are recorded in the Call log. You can place a call to numbers or contacts that display in this area.




1. Press  and tap  **Phone**.
2. Tap the **Logs** tab. A list of recent calls displays.
3. Tap the entry, and then tap  to the right of a number or contact to place a call.
  - For additional options, tap the name or number.

**Tip:** You can also swipe the entry from left to right to place a call, or from right to left to send a message.

## Call from Contacts

You can place calls directly from your Contacts list using either of the following procedures.

**Note:** You can access Contacts directly from the Phone app. Tap  and then tap the **Contacts** tab at the top of the screen.



1. Press  and tap  **Contacts**.
2. Tap a contact and then tap .

– or –

Swipe your finger across the contact from left to right.





## Call a Number in a Text Message

While viewing a text message, you can place a call to a number that is in the body of the message. For more information, see [Text and Multimedia Messaging](#).

1. Press  and tap  **Messaging**.
2. Open the message with the phone number and tap the phone number.
3. Tap **Call** to dial the number.


## Call a Number in an Email Message




While viewing an email or Gmail message, you can place a call to a number that is in the body of the message.

1. Press  and tap  >  **Email**.
2. Open the message with the phone number and tap the phone number.
3. The Phone screen opens with the phone number automatically entered and ready to be dialed. To place the call, tap .

## Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

**Note:** To call the 9-1-1 emergency number when the phone's screen is locked, press  to turn the screen on, and then touch **Emergency call** at the bottom of the lock screen.

1. Press  and tap  **Phone**.
2. Tap    .

## Enhanced 9-1-1 (E9-1-1) Information

This phone features GPS (Global Positioning System), which is used for E9-1-1 emergency location service, where available.

When you place a call to 9-1-1, the GPS feature of your phone provides information about your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important!** Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.


## Receive Phone Calls

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in Contacts, only the default caller ID icon and phone number appear on the Incoming call screen.

**Note:** If your phone is turned off, all calls automatically go to voicemail.

## Answer an Incoming Call

The following procedure shows you how to answer an incoming call.

- When the call comes in, touch and slide  to the right to answer the call.

## Mute the Ringing Sound

You can mute the ringtone without rejecting the call by doing either of the following.

- Press the **Volume Key** down.
- Place the phone face down on a level surface. See [Motions and Gestures](#) for options, including the Mute/pause Motion to mute incoming calls by turning over the phone.


## Reject an Incoming Call

The following procedure shows you how to reject an incoming call.

- When the call comes in, touch and slide  to the left.

## Reject a Call with a Text Message

You can automatically reject an incoming call by sending a text message to the caller.

1. Touch and drag **Reject call with message** toward the top of the screen.
2. Select an existing message and tap .




– or –

Tap **Create new message** to send a new text message.

## Phone Call Options

The Phone app provides many useful features and options to help you make the most of your calling experience.

### Dialing Options

1. Press  and tap  **Phone**.
2. While dialing a call, tap  for options, including:
  - **Send message:** Send a text message to the number you dialed.
  - **Add to contacts:** Save the number to a new contact, or update an existing contact. See [Add a Contact](#) for more information.
  - **Speed dial setting:** View speed dials.
  - **Add 2-sec pause:** Insert a 2-second pause into the number you are dialing. This can be useful when storing numbers for automated phone menus.
  - **Add wait:** Insert a pause into the number you are dialing, to wait for input from you. This can be useful when storing numbers for automated phone menus.
  - **Call settings:** Configure call settings. For more information, see [Call Settings](#).


## Caller ID

Caller ID identifies a caller while the phone is ringing, by displaying the number of the incoming call.

### Block Caller ID

You can block your Caller ID (visible to other when you make a call), before making a call. The blocking only lasts for that call, and then returns to regular Caller ID.


To permanently block your number, you must call Sprint Customer Service.

1. Press  and tap  **Phone**.
2. Tap  **P**  .

## Call Waiting





When you're on a call, Call Waiting alerts you to incoming calls by sounding a tone. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

1. Slide  to the right. (This puts the first caller on hold and answers the second call.)
2. To switch back to the first caller, tap **Swap**.

## 3-Way Calling

With 3-Way Calling (also known as Conference calling), you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.







1. Press  and tap  **Phone**.
2. Tap the number keys to enter a phone number, and then tap .
3. Once you have established the call, tap **Add call** and dial the second number. (This puts the first caller on hold and dials the second number.)
4. When you're connected to the second party, tap **Merge**. If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.
5. To end the three-way call, tap .

## Call Forwarding






 

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have Call Forwarding is activated.

**Note:** You are charged a higher rate for forwarded calls.

### Activate Call Forwarding

1. Press  and tap  **Phone**.
2. Tap  **P**  **PQRS**  **ABC**.
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap . (You will hear a tone to confirm the activation of Call Forwarding.)

### Deactivate Call Forwarding

1. Press  and tap  **Phone**.
2. Tap  **P**  **PQRS**  **ABC**  **+**.
3. Tap . (You will see a message and hear a tone to confirm the deactivation.)

## In-Call Options

While you're on a call, you will see a number of on-screen options. Tap an option to select it.


- **Add call:** Display the keypad so you can dial another call.
- **Keypad:** Display the keypad, where you can enter numbers using DTMF (Dual Tone Multi-Frequency). This can be useful if you need to enter an access code or other information while on an active call.
- **End call:** Ends the call.
- **Speaker:** Controls whether the call audio plays through the speaker or the earpiece.

**Warning!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Mute:** Turn the microphone on or off.

**Note:** You can't use Mute and Speaker at the same time. If Mute is active, the speaker mode is deactivated.




- **Headset:** Connect to a paired Bluetooth headset.

- Tap  for more options:
  - **Contacts:** Launch Contacts.
  - **Memo:** Launch Memo, to create memo during a call.
  - **Message:** Launch Messaging, to create a new message.





## Speed Dials

You can assign a shortcut number to a phone number in your Contacts List for speed dialing. There are one hundred available numbered spaces. Speed dial 1 is reserved for Voicemail.





### Assign Speed Dials

1. Press  and tap  **Phone**.
2. Tap  > **Speed dial setting**.
3. Tap an unused space and then select a contact to assign to the number. The selected contact number will display in the speed dial list.



### Remove Speed Dials

1. Press  and tap  **Phone**.
2. Tap  > **Speed dial setting**.
3. Tap  > **Remove**, and then tap the X next to the speed dials you want to remove.

### Edit Speed Dials

1. Press  and tap  **Phone**.
2. Tap  > **Speed dial setting**.
3. Tap  > **Change order**, and then tap the entry you want to move. This will highlight the entry.
4. Tap an unassigned space. (For example, if you select an entry in space 12, and space 8 shows "Not assigned," you can tap space 8 to move the entry.)

### Making a Call Using a Speed Dial

1. Press  and tap  **Phone**.
2. Touch the speed dial digits, holding the last digit until the number dials.

## Voicemail




Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access.

### Set Up Voicemail

The following steps will guide you through setting up your standard voicemail from the Phone app.

For information about setting up voicemail using the Visual Voicemail app, see [Visual Voicemail](#).




You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Press  and tap  **Phone**.
2. Press and hold .
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Note: Voicemail Password**—Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone can access your voicemail messages.

### Retrieve Your Voicemail Messages

You can access your voicemail by using the following process.


1. Press  and tap  **Phone**.
2. Press and hold .
3. Follow the system prompts to enter your voicemail password and manage voicemail.

**Note:** You can also access Visual Voicemail from the Phone keypad by tapping .

### Voicemail Notification

There are several ways your phone alerts you to a new message.



- By sounding the notification ringtone.
- By displaying  in the Notifications area of the Status bar when a new voicemail message(s) are received.
- By displaying the number of new voicemail message(s) on the Voicemail app icon.




**Note:** Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in a service area. You can check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, enter your password.

## Visual Voicemail

Visual Voicemail offers a new way to manage your voicemail. Use Visual Voicemail to:

- View your voicemails as text.
- Choose messages to view. You don't have to listen to them in the order they arrived.
- Archive important messages.
- Compose new messages, and send them to Email, as a text message, or directly to Voicemail.
- Share messages via Email and text message.
- With a Premium account, you can read your voicemails, have them auto-forwarded to Email, or share them with Facebook® or Twitter.

### Access Visual Voicemail

1. Press  and tap  **Apps** >  **Voicemail**.
2. Follow the prompts to set up an account and learn about using Visual Voicemail.

**Note:** You can also access Visual Voicemail from the Phone keypad by tapping .


## Logs

The Logs tab of the Phone application lists all recent incoming, outgoing, and missed calls.

### View Logs



The following procedures will guide you through viewing your call logs list.

1. Press  and tap  **Phone** > **Logs**.

2. To choose logs to display, tap  > **View**, and then tap **All calls**, **Missed calls**, **Dialed calls**, **Received calls**, or **Rejected calls** to filter the list.




## *Logs Options*

The following procedures will guide you through accessing and understanding your call log options.

1. Press  and tap  **Phone > Logs**.
2. Touch and hold a call to display the options list.
  - **Copy to dialing screen**
  - **Send number**
  - **Add to contacts/View contact**
  - **Delete**

## *Clear Logs*

Follow these steps to clear the Logs list.

1. Press  and tap  **Phone > Logs**.
2. Tap  > **Delete**.
3. Tap **Select all** or tap individual entries to select them.
4. Tap **Delete**.

# Contacts

---

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

## Get Started with Contacts

Before using Contacts, it's best to learn a few basics.

Your phone automatically sorts the Contacts entries alphabetically. You can create a Google contact, a phone contact, or a Corporate (Microsoft Exchange ActiveSync) contact.

- **Google** contacts are synchronized between your phone and a Google Account you set up on your phone.
- **Microsoft Exchange ActiveSync** contacts are synchronized between your phone and an Exchange Server or Microsoft® Outlook® account set up on your phone.
- **Device** contacts are stored locally on the phone.

**Note:** If the phone is ever reset to its factory default parameters, locally stored contacts (phone contacts) can be lost.

## Access Contacts

There are a few ways to display Contacts.




- Press  and tap  **Contacts**.

— or —

Press  and tap  **Phone > Contacts** tab.










**Tip:** To quickly move to a specific section in your contact list, tap a letter on the right side of the list to go directly to that letter in the alphabetical list.

## Contacts Options

1. Press  and tap  **Contacts**.
2. Tap  to display the contacts list options.
  - **Delete:** Allows you to choose contacts to erase.
  - **Import/Export:** Imports or exports the selected contact information from a specified location.
  - **Share namecard via:** Share contact(s) with others Bluetooth, Drive, Email, Gmail, Messaging, or Wi-Fi Direct.
  - **Merge accounts:** Combines phone contacts with a Google or Samsung Account.
  - **Accounts:** Displays accounts set up on your phone.
  - **Speed dial setting:** Allows you to assign a speed dial number to a selected contact.
  - **Send message/email:** Allows you to create a new text message or email to selected contacts.
  - **Contacts to display:** Allows you choose contacts to display, from accounts set up on your phone, or other sources.
  - **Settings:** Displays options for viewing contacts, including whether to show only contacts with phone numbers and whether to list or display by first name or last name. There is also an option to specify how contacts are transferred to another device, either individually or as a full group.
  - **Help:** Displays information about how to use Contacts.



## Add a Contact

You can add contacts directly from the Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. Press  and tap  **Contacts**.
2. Tap  at the top of the screen.
3. Tap **Device** to store the contact on your phone, or tap an account to store the contact.
4. Touch contact fields to enter information.
  - Tap  and assign a picture to the new entry:
    - **Image**: Choose a picture from Gallery.
    - **Pictures by people**: Choose pictures by tags.
    - **Take picture**: Take a new picture.
    - **S Memo**: Choose an image from S Memo.
  - Tap the **Name** field and use the on-screen keyboard to enter the full name. Tap  next to the Name field to display additional name fields.
  - Tap the **Phone number** field, and then enter a phone number. Tap , and then choose a label for the number. Tap  to add another phone number.
  - Tap the **Email** field, and then enter an email address. Tap , and then choose a label for the number. Tap  to add another email address.
  - Tap **Groups** to assign the contact to a group.
  - Tap **Ringtone** to choose a ringtone to play for calls from the contact.
  - Tap **Message alert** to choose a ringtone to play for new messages from the contact.
  - Tap **Vibration pattern** to choose a vibration to play for new calls or messages from the contact.
  - Tap **Add another field** to add new fields for the contact.
5. Tap **Save** to save the new contact.

## Save a Phone Number

You can save a phone number to Contacts directly from the phone keypad.

1. Press  and tap  **Phone**.
2. Enter a phone number using the on-screen keypad.
3. Tap **Add to contacts**, and then tap **Create contact** or **Update existing**.
4. Select an account for the contact, and then continue adding information for the contact, as desired.
5. Tap **Save** to save the contact.




**Note:** If you have accounts set up on your phone, you can save the contact to an account.

## Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize with a unique ringtone, and more.

### Add or Edit Information for a Contact

You can modify existing contact information to keep your information up-to-date.





1. Press  and tap  **Contacts**.
2. Tap a contact to display it, and then tap  > **Edit**.

**Tip:** You can also touch and hold the contact and then tap **Edit**.

3. Tap any field you want to change or add. See [Add a Contact](#).
4. Add or edit the information, and then tap **Save**.

## Assign a Picture to a Contact



Adding a picture to a contact entry creates a more personal and easily recognized entry. For example, when receiving a call from one of your contacts, the associated picture will display. You can assign a picture from Gallery, or take a new picture with Camera.

1. Press  and tap  **Contacts**.
2. Tap a contact to display it, and then tap  > **Edit**.
3. Tap , or the currently assigned picture, and then choose an option:
  - **Image**: Choose a picture from Gallery. See [Gallery](#) for more information.
  - **Pictures by people**: Choose a picture from tagged pictures in Gallery.
  - **Take picture**: Launch Camera to take a new picture.
  - **S Memo**: Launch S Memo to create a memo image.
4. Follow the prompts to save the picture to the contact.
5. Tap **Save**.

**Tip:** You can also touch and hold the contact and then tap **Edit**.




## Assign a Ringtone to a Contact

You can assign a special ringtone to individual contacts for more personalization.

1. Press  and tap  **Contacts**.
2. Tap a contact to display it.
3. Tap the **Ringtone** field and choose a ringtone. You can choose a ringtone preloaded on your phone, or tap Add to choose a sound from Music.
4. Tap **OK** to assign the ringtone.

## Link a Contact




When you have contacts from various sources (Gmail, phone, Facebook, etc.), you may have multiple similar entries for a single contact. Your phone's Contacts application lets you link multiple entries into a single contact.

1. Press  and tap  **Contacts**.
2. Tap a contact to display it, and then tap  > **Link contact**.
3. Tap another entry to link it to the original contact.

**Note:** You can link up to five contacts in a single entry.

## Delete a Contact

You can delete a contact from the contacts details page.



1. Press  and tap  **Contacts**.
2. Tap a contact to display it, and then tap  > **Delete**.

**Tip:** You can also touch and hold the contact and then tap **Delete**.

3. Tap **OK**.

## Add Contacts to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and tap  **Contacts**.
2. Touch and hold the entry name from the Contacts tab listing.
3. From the **Contacts Entry** context menu, tap **Add to favorites**.




**Note:** You can also use the star icon on the Contact's details page to indicate favorites. Tap the star; the star turns yellow when the contact is a favorite.






# Groups

This feature allows you to add a new or existing contact to a call group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.





## Create a New Group

1. Press  and tap  **Contacts**.
2. Tap the **Groups** tab, and then tap  > **Create**.
3. Tap fields to enter information about the group:
  - Tap **Group name** to enter a name for the new group.
  - Tap **Group ringtone** to select a ringtone for notifications for incoming calls from group members.
  - Tap **Message alert** to select a ringtone for notifications for new messages from group members.
  - Tap **Vibration pattern** to select a vibration pattern for alerts to incoming calls or messages from group members.
4. Tap **Add member** and select a member or members to add to the new group, and then tap **Done**.
5. Tap **Save**.

## Add a Contact to a Group




1. Press  and tap  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  at the top of the screen.
4. From the list of contacts, tap the contact(s) you want to add.
5. Tap **Done**.

## Send a Message to a Group

1. Press  and tap  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  > **Send message**.
4. Select the recipients of the new message and then tap **Done**.
5. Type your message, and then tap .

## *Share a Contact*

You can quickly share contacts using Bluetooth, Drive, Email, Gmail, Messaging, or Wi-Fi Direct.

1. Press  and tap  **Contacts**.
2. Tap a contact to display it, and then press  > **Share namecard via**.
3. Choose a sending method, and then follow the prompts to send the contact.

# Accounts and Messaging

---

With Sprint service and your phone's messaging capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, text and multimedia messaging, social networking accounts, and Google Hangouts.

## Gmail/Google

Many of your phone's applications—such as Gmail, Google Hangouts, and the Google Play Store—require a Google Account. To use these applications, you must set up your Google Account on your phone. Setting up your account on your phone syncs your phone and your online Google Account.

### Create a Google Account

If you do not already have a Google Account, you can create one online or on your phone.



**Note:** You can also create and sign into your Google/Gmail account through your phone's Setup application.

**Note:** Although you need a Gmail account to use certain features of your phone, such as Google Play, you do not need to use Gmail as the default account for your phone.

#### Create a Google Account Online



1. From a computer, launch a Web browser and navigate to [google.com](http://google.com).
2. Follow the on-screen prompts to create your free account.

#### Create a Google Account Using Your Phone

1. Press  and tap  > **Settings** > **Accounts** tab.
2. Tap **Add account** > **Google** > **New**.
3. Follow the on-screen prompts to create your free account.





## Sign in to Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. Press  and tap  > **Settings**.
2. Tap **Accounts** tab > **Add account** > **Google** > **Existing**.
3. Follow the prompts to enter your Google Account and password, and choose options for your account on your phone.





## Access Gmail

After you set up your Google Account on your phone, you are automatically signed in to your Gmail account, and you can access Gmail from your phone.





1. Press  and tap  **Apps** >  **Gmail**.
2. Do any of the following:
  - **Read a new email message:** Tap a message or conversation with an new message (unread items display in bold).
  - **View more email messages:** If the Inbox is full, swipe your finger up the screen to view more messages and conversations.
  - **Select messages and conversations:** Tap the box before the email or conversation.
  - **View the Inbox of another Gmail account:** If you have more than one Google Account set up on your phone, tap **Inbox** at the top of the screen and then choose an account to view.
3. Tap  > **Refresh** to sync to the service and update the Inbox.

## Send a Gmail Message

Send and receive Gmail from your phone.




1. Press  and tap  **Apps** >  **Gmail**.
2. From the Inbox, tap .
3. Enter the message recipient's email address in the **To** field. You can add as many message recipients as you want.


**Note:** To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the email to other recipients, tap  > **Add Cc/Bcc**.





4. Tap the **Subject** field and enter the email subject.
5. Tap the **Compose email** field and type your message. To add an attachment, tap  > **Attach picture** or **Attach file**.
6. To send the message, tap .
  - To save the current email as a draft, tap  > **Save draft**. To view your draft email messages, from the Inbox, tap **Inbox** and then tap **Drafts**.
  - To delete the current email message, tap  > **Discard**.

## *Read and Reply to Gmail Messages*

Below are procedures for reading and replying to Gmail messages.



1. Press  and tap  **Apps** >  **Gmail**.
2. Tap a message to display its contents.

**Tip:** You can also access new messages through the Notifications bar. When a new Gmail message arrives, you'll see  in the Notifications bar. Touch and hold the bar and slide it down to display notifications. Tap a message to display it.

3. Reply options:
  - Tap  **Reply** to reply back to the sender.
  - Tap  > **Reply all** to reply back to the sender as well as everyone else who received the message (Cc).
  - Tap  > **Forward** to send the message to a new recipient.
4. To send the message, tap .

## *Samsung Account*

Create a Samsung Account for access to Samsung apps and services, such as Samsung Hub, Samsung Apps, Samsung Link, and much more.

1. Press  and tap  > **Settings**.
2. Tap **Accounts** tab > **Add account** > **Samsung Account**, and then tap **Sign in** or **Create new account**.
3. Follow the prompts to sign into your account, or create a new account.




**Note:** Tap **Help** for more information about Samsung Accounts, or for help with your account.

## Email

Use the Email application to send and receive email from your webmail or other accounts. You can also access your Exchange ActiveSync email on your phone.

### Add an Email Account

Email allows you to send and receive email using various email services. You can also receive text message alerts when you receive an important email.



1. Press  and tap  > **Settings** > **Accounts** tab > **Add account** >  **Email**.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field. To see your password as you enter it, tap **Show password**.
4. Tap **Next** to start automatic email setup. If you need to configure custom settings, tap **Manual setup** and then enter your settings. These may include mail type, user name, password, server, security type, etc.
5. Follow the on-screen prompts to configure options for the account.
6. Tap **Done** to complete setup.

### Add a Microsoft Exchange ActiveSync Account

The Email application also provides access to your Microsoft Exchange account from your phone. If your company uses Microsoft Exchange Server 2003, 2007, or 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and Task information directly with your company's Exchange server.

Use the following procedure to synchronize your phone with a corporate email account.






**Note:** You can set up multiple Microsoft Exchange ActiveSync accounts on your phone.

1. Press  and tap  > **Settings** > **Accounts** tab > **Add account** > **Microsoft Exchange ActiveSync**.
2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field. To see your password as you enter it, tap **Show password**.
4. Touch **Next**, and follow the on-screen prompts to configure options for the account.


**Note:** Consult your network administrator for assistance in configuring your account.

## Compose and Send Email

Compose and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.








1. Press  and tap  **Apps** >  **Email**.
2. From the Inbox, tap .
3. Tap **fields** to compose your message:
  - Tap the **To** field and enter the recipient's email address. You can add multiple message recipients.
  - To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** field.
  - Tap the **Subject** field and enter the email subject.
  - Tap the text entry field and compose your email.
  - To add an attachment, tap , and then select a file to attach:
    - **My Files**: Choose a file from your phone or optional memory card.
    - **Images**: Choose a picture from Gallery.
    - **Take picture**: Launch the Camera to take a photo, and then add it to your email by tapping **Save**.
    - **Video**: Choose a video from Gallery.
    - **Record video**: Launch the Camera to record a video, and then add it to your email by tapping **Save**.
    - **Audio**: Choose a sound from Music.
    - **Record audio**: Launch Voice Recorder to record a new sound.
    - **S Memo**: Launch S Memo to choose or create a memo. For more information, see [S Memo](#).
    - **Calendar**: Add an event from your calendar.
    - **Contacts**: Add a contact entry (namecard) to the message.
    - **Location**: Attach a map showing your location.

- Tap  for more options, including **Send email to myself**, **Schedule sending**, **Priority**, **Tracking options**, and **Security options**.

4. To send the message, tap .

## *Reply or Forward Email*




Reading and replying to email on your phone is as simple as on your computer.

1. Press  and tap  **Apps** >  **Email**.
2. On the email account Inbox, tap a message to view it.
3. Tap  (**Reply**),  (**Reply all**) to reply to the original recipient list, or tap  (**Forward**) to forward the message to new recipient(s) in the **To** field.
4. Enter a message (if desired) and then tap .

## *Manage Your Email Inbox*





The following procedures allow you to view, refresh, sort, and delete your email messages.

### *View Your Email Inbox*

1. Press  and tap  **Apps** >  **Email**.
2. If you have multiple accounts set up on your phone, tap the toolbar at the top of the screen and then choose one from the menu.





### *Synchronize an Email Account*

Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.





1. Press  and tap  **Apps** >  **Email**.
2. Select an email account.
  - If you are already in an email account, tap the account name field (upper-left) to open the complete email account list page.
  - Select an available email account.
3. Tap  **Sync**.



## Sort Email Messages

1. Press  and tap  **Apps** >  **Email**.
2. On the email account Inbox, tap  > **Sort by**.
3. Select an option to sort email messages.

## Delete Email Messages





1. Press  and tap  **Apps** >  **Email**.
2. On the email account Inbox, tap the check boxes beside each email message you want to delete.
3. Tap .

## Email Settings

You can edit general preferences, which apply to all email accounts, or configure settings for specific email accounts, such as email address and password, name display and signature, frequency of retrieval, etc.

### Edit General Preferences

Settings listed below **General settings** affect all email accounts.





1. Press  and tap  **Apps** >  **Email**.
2. Tap  > **Settings** to configure settings. Available settings depend on the type of email account, and may include:
  - **Display:**
    - **Auto fit content:** Shrink email content to fit the screen.
    - **Message preview line:** Choose the number of lines displayed in the email list to give you a preview of an email's contents.
    - **Title line in list:** Choose the title line (in bold for unread messages), to display the sender or the subject.
  - **Composing and sending:**
    - **Quick responses:** Create and edit text strings that you can add to an email to respond quickly.
    - **Default image size:** Set the default size of images you attach to emails.

- **Delay email sending:** Delay the sending of emails so that they can be cancelled if needed. When enabled, you'll have the option to cancel sending for a specified time after you tap **Send**. If you enable Delay email sending, use the Set length of delay option to choose how long to delay.
- **Auto advance:** Choose how the email list displays after you delete or move an email.
- **Confirm deletions:** Choose whether the phone prompts you to confirm the action when you mark emails for deletion.
- **Priority senders:** Maintain a list of email addresses to ensure that emails from the addresses receive priority handling.
- **Spam addresses:** Create a list of email addresses and domains, to block emails from these senders.
- **Rules for filtering:** Set filters and manage filtered email.

## Edit Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, etc.

**Note:** Accounts settings may vary, depending on the type of email account and service provider. Listed below are some common email account settings. Your settings may vary. For more information, contact your email service provider.






1. Press  and tap  **Apps** >  **Email**.
2. Tap  > **Settings**, and then tap an account to configure. Some common options are:
  - **Sync settings:**
    - **Sync Email:** Maintain synchronization with your email account. The last synchronization is displayed.
    - **Sync schedule:** Set options for synchronizing your phone with your email account (available when Sync Email is enabled).
    - **Period to sync Email:** Choose a period of time to maintain synchronization between your phone and email account.
    - **Size to retrieve emails:** Choose a maximum size for emails your phone will automatically retrieve during synchronization. For larger emails, your phone will prompt you to download the contents when you open them.
  - **Signature:** Automatically add a text signature to emails you send. Tap **Signature** to edit the default text signature.

- **Out of office settings:** Send out of office auto-replies during a set period.
- **Default account:** Assign an account as the default email account for outgoing messages. When you launch an email from other apps, the email will automatically be from this account.
- **Password:** Update your password to match the email server.
- **Email notifications:** Display an icon in the Status bar when you receive new emails.
- **Select ringtone:** Choose a ringtone to play for new email notifications.
- **Vibrate:** Set a vibration to occur for new email notifications.
- **More settings:** Configure other options.
  - **Account name:** Enter a name to identify this email account.
  - **Always Cc/Bcc myself:** Choose options for sending a copy of emails you send to yourself, as a copy (Cc) or blind copy (Bcc).
  - **Show images:** Display embedded images in the body of an email.
  - **Auto download attachments:** Automatically download email attachments when you are connected to Wi-Fi. You might use this option to control how and whether you use your plan's data services to download attachments.
  - **Auto resend times:** Set the number of attempts to resend an email after a delivery failure.
  - **Folder sync settings:** Choose folders to synchronize between your phone and account.
  - **Period to sync Calendar:** Choose the period for synchronizing calendar events between your phone and account.
  - **In case of sync conflict:** Choose whether information from the server or phone has priority when there is a conflict.
  - **Empty server trash:** Delete contents in server trash.
  - **Security options:** Configure advanced security options, including encryption.
  - **Sync Contacts:** Synchronize contacts between your phone and the account.
  - **Sync Calendar:** Synchronize calendar events between your phone and the account.

- **Sync Task:** Synchronize emails between your phone and the account.
- **Exchange server settings:** Configure Exchange server settings.

## *Delete an Email Account*

If you no longer want an email account on your phone, you can remove it.

1. Press  and tap  **Apps** >  **Email**.
2. Tap  > **Settings** > **Account settings**, and then tap .
3. Tap an account to mark it for deletion.
4. Tap **Delete**.

## *Text and Multimedia Messaging*





With Text Messaging (SMS), you can send and receive text messages between your phone and another phone that supports messaging.

Multimedia messages, (MMS), can contain text and pictures, recorded voice, audio or video files, picture slideshows, contact namecards (vCard), or calendar events (vCalendar).

See your service plan for applicable charges for messaging.

## *Send a Message*

Quickly compose and sent text and multimedia messages on your phone.



1. Press  and tap  **Messaging**.
2. Tap .
3. Tap **Enter recipient**, and then enter a contact name, a mobile phone number, or an email address. As you type, possible matches from your accounts and contacts display on the screen. Touch a match to add it to the message.
4. Tap the **Enter message** field and type your message.
5. To add an attachment, tap  and select a file:
  - **Image:** Choose a picture from Gallery.
  - **Take picture:** Launch the Camera to take a photo, and then add it to your message by tapping **Save**.
  - **Video:** Choose a video from Gallery.

- **Record video:** Launch the Camera to record a video, and then add it to your message by tapping **Save**.
- **Audio:** Choose a sound from Music.
- **Record audio:** Launch Voice Recorder to record a new sound.
- **S Memo:** Launch S Memo to choose or create a memo. For more information, see [S Memo](#).
- **Calendar:** Add an event from your calendar.
- **Location:** Attach a map showing your location.
- **Contacts:** Add a contact entry (namecard) to the message.

6. When done, tap  to send the message.

## *New Messages Notification*

Depending on your notification settings, the phone will play a ringtone, vibrate, or display the message briefly in the Status bar when you receive a new message. To change the notification for new messages, see [Messaging Settings](#) for details.



A new message icon  also appears in the notifications area of the Status bar to notify you of a new message. The Messaging application icon  also displays the number of new messages.

To open the message, touch and hold the Status bar, and then slide the Status Bar down to open the Notifications panel. Tap the new message to open and read it. For information on reading and replying to messages see [Managing Messages](#).

## Managing Messages




Messages that are sent to and received from a contact (or a number) are grouped into conversations or 'threads' in the All messages screen. Threads let you see all exchanged messages with a contact.

### View a Message



1. Press  and tap  **Messaging**.
2. From the message list, tap a message to display it.
  - To view the details of a particular message, in the message thread, touch and hold the message to open the options menu, and then tap **View message details**.
  - If a message contains a link to a Web page, tap the message and then tap the link to open it in the Web browser.
  - If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.
3. While viewing a MMS message, tap the play icon (on a video or audio file) to play back the file or tap an image to view a picture.


**Note:** File attachments on a MMS message can be saved to an optional memory card (not included). Touch and hold on the attachment, and then tap **Save attachment**. Select the attachment and tap **Save**.

### Reply to a Message

1. Press  and tap  **Messaging**.
2. From the message list, tap a message to display it.
3. Tap the **Enter message** field and then type your reply message.
4. When finished, tap .



### Delete a Message

1. Press  and tap  **Messaging**.
2. Touch and hold the message or thread that you want to delete.
3. From the pop-up menu, tap **Delete message** or **Delete thread**.

**Tip:** To delete several message threads at once, tap  > **Delete threads**. Select the threads you want to delete and tap **Delete**.




## Protect a Message from Deletion

You can lock a message so that it will not be deleted even if you delete the other messages in the thread.

1. Press  and tap  **Messaging**.
2. On the Messaging screen, tap a message thread.
3. Touch and hold the message that you want to lock.
4. Tap **Lock message** on the options menu. A lock icon displays at the lower right hand side of the message.

## Messaging Settings

The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. Press  and tap  **Messaging**.
2. Tap  > **Settings**.
3. Configure message settings:
  - **Default messaging app:** Set the default app for messaging with your phone. This app will launch when you choose messaging from another app on your phone.
  - **Delete old messages:** Automatically delete the oldest messages when the maximum number of messages is reached. Set the maximum number of messages with the Text message limit and Multimedia message limit settings below.
  - **Text message limit:** Set the maximum number of text messages per conversation.
  - **Multimedia message limit:** Set the maximum number of multimedia messages per conversation.
  - **Text templates:** Create and manage text strings that you can add to messages.
  - **Auto combination:** Determine whether long messages that are received in multiple parts are automatically re-assembled to display as a single message.
  - **Group messaging:** Control how messages to multiple recipients are handled. When enabled, a single message is sent to multiple recipients. When disabled, a separate message is sent to each recipient.
  - **Auto retrieve:** Control whether message attachment(s) are automatically downloaded when you display a multimedia message. If you disable this option, only

the message header displays in the message list, and you'll be prompted to download the attachment(s).

- **MMS alert:** Set the phone to alert you when you make a change to a message that will convert the message to a multimedia message (MMS).
- **Bubble style:** Control how messages appear on the screen. Bubbles are the boxes that surround each message.
- **Background style:** Set the background of the message screen.
- **Use the volume key:** Enable changing the text size while reading a message by pressing the **Volume Key** up or down.
- **Notifications:** Control whether notifications for new messages display in the Status bar.
- **Select ringtone:** Set the ringtone for your message notifications.
- **Vibrate:** Set whether vibration plays along with the ringtone for new message notifications.
- **Message alert repetition:** Set how often your phone notifies you of new message(s).
- **Preview message:** Control whether a preview of a new message appears in the Status bar with the message notification.
- **Emergency Alerts:** Configure emergency alert settings. You can enable or disable some alerts: Extreme Alert, Severe Alert, Amber Alert, and Emergency alert test messages. You cannot disable Presidential alerts.

**Important!** The Commercial Mobile Alert System (CMAS) system provides the government the ability to send geographically targeted notifications of emergencies, such as threats to public safety, severe weather events, a hazardous material spill or a missing child in the phone user's area.

- **Emergency notification preview:** Plays a sample emergency alert tone. Tap **Stop** to cancel the playback.
- **Vibrate:** Sets vibrate options for emergency messages.
- **Alert reminder:** Sets the reminder interval.
- **Add signature:** Adds a text signature to all messages you send.
- **Signature text:** Creates the text signature, when Add signature is enabled.
- **Spam settings:** Filters incoming messages for spam messages.






- **Add to spam numbers:** Enables you to add telephone numbers which will be automatically flagged as spam, when Spam settings is enabled.
- **Add to spam phrases:** Enables you to add text phrases which will be automatically flagged as spam, when Spam settings is enabled.
- **Block unknown senders:** Automatically blocks messages from numbers that are not stored as contacts on your phone.

## Social Networking Accounts

Stay in touch on the go with all your social networking accounts.

### Flipboard

Use Flipboard to create a personalized digital “magazine” out of everything being shared with you. Access news stories, personal feeds and other related material. Flip through your Facebook newsfeed, tweets from your Twitter account, photos from friends and much more.




1. Press  and tap  **Apps** >  **Flipboard**.
2. Follow the prompts to configure and use Flipboard.

### Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

Visit [google.com/mobile/+](http://google.com/mobile/+) for more information.

**Note:** You must be currently signed into your Google account to use Google+.

1. Press  >  **Apps** >  **Google+**.
2. Follow the on-screen instructions to use Google+.

### Hangouts

Previously known as Google Talk, Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.




**Note:** You must be currently signed into your Google account to use Hangouts.

- Press  and tap  **Apps** >  **Hangouts**.

## YouTube

YouTube is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos.

**Note:** YouTube is a data-intensive feature. Sprint recommends that you upgrade to an unlimited data plan to avoid unexpected data charges.




1. Press  >  **Apps** >  **YouTube**.
2. Follow the prompts to configure and use YouTube.

## Facebook



Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

### Install the Facebook App on Your Phone

Before you use Facebook on your phone, you must download and install the app from the Google Play Store app.

1. Press  >  **Play Store**.
2. Touch the Search icon and search for "facebook".
3. Touch **Facebook** from the results list.
4. Touch **Install**, and then touch **Accept**.
5. When the download and installation is complete, touch **Open**. To open the app from the home screen, touch  **Apps** > **Facebook**.

### Sign in to Your Facebook Account from Settings

1. From home, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **Add account**.
3. Touch **Facebook**, and then follow the prompts to enter your Facebook account details and complete sign-in.

# Apps and Entertainment

---

All your phone's features are accessible on the Apps screen.

## Google Play Store

The Google Play™ Store app is the place to go to find new Android apps, games, movies, music, and books for your phone. Choose from a wide variety of free and paid apps ranging from productivity apps to games. When you find an app you want, you can easily download and install it on your phone.




To access the Google Play Store app, you must first connect to the Internet using your phone's Wi-Fi or Sprint 4G or 3G data connection and sign in to your Google Account. See [Web and Data](#) and [Create a Google Account](#) for details.

**Important!** Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

## Find and Install an App

When you install apps from the Google Play Store app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

**Note:** You need a Google Wallet™ account to purchase items from the Google Play Store app. See [Create a Google Wallet Account](#) to set up a Google Wallet account if you do not have one.

1. Press  and tap  **Apps** >  **Play Store**.
2. Browse through the categories to find an app you're interested in, and tap the name.
3. Read the app descriptions.
4. Tap **INSTALL** or **Download** (for free applications) or the price (for paid applications).
5. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone. If you agree to the conditions, tap **ACCEPT** to begin downloading and installing the app.

**Warning! Read the notification carefully!** Be especially cautious with apps that have access to many functions or a significant amount of your data. Once you agree to the download and installation on this screen, you are responsible for the results of using this item on your phone.

## Create a Google Wallet Account

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

The first time you turn on your phone, the setup process will prompt you to create a Google Wallet account. If you did not create one at setup, you can create an account at any time using one of these methods:

- On your computer, go to [google.com/wallet](https://google.com/wallet) to create a Google Wallet account.

— or —

The first time you use your phone to buy an item from Google Play, follow the prompts to enter your billing information to set up a Google Wallet account.

**Warning!** When you've used Google Wallet once to purchase an application from the Google Play Store app, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission. For more information, see [Lock Screen](#).



## Open an Installed App

There are several options for opening an installed app.

- Press  and tap  **Apps**, and then tap the app icon.

## Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. Press  and tap  and tap **Settings > More > Application manager > DOWNLOADED** tab.
2. Tap the app you want to uninstall, and then tap **Uninstall**.
3. When prompted, tap **OK** to remove the app from your phone.
4. Once the app is removed, tap **OK** again to return to the Application manager.

## Google Play Books




Discovering your favorite books and authors has never been easier. With Google Play Books, you can shop the world's largest selection of e-books and read them anywhere you like—on a tablet, phone, e-reader, or the Web.

- Press  and tap  **Apps** >  **Play Books**.

## Google Play Games

Google Play Games app is the easiest way for you to discover new games, track achievements and scores, and play with friends around the world. Bring all your gaming on Google Play together in a unified Android experience.

### KEY FEATURES

- Discover great games
  - Play with your friends, and see what they're playing
  - Join multiplayer games
  - Track your achievements
  - Compare scores with other players
- Press  and tap  **Apps** >  **Play Games**.

## Google Play Newsstand

With Google Play Newsstand, discover more of the news and magazines you care about all in one app on your Android tablet or phone. Enjoy breaking news and in-depth articles featuring audio, video and more. From sports, business, cooking, entertainment, fashion and more - now get both free and paid news plus subscribe to vibrant full HD magazines, all in one place. With hundreds of premier publishers - it's all there, easy to follow, read, and share.

- Enjoy Read Now to find more of the articles you care about and discover new ones you will love.
- Explore categories like Arts & Photography, Business & Finance, Food & Drink and more and subscribe to topics tagged to the articles that interest you most
- Go Offline with any news edition, topic or magazine without missing a page. Bookmark news stories you don't have time to read for later.
- All in one - Google Play Newsstand is the new home for all your Google Currents subscriptions and Google Play Magazines. Now with one app and one tap, it's never been easier to stay informed on the news of the day.

- Press  and tap  **Apps** >  **Play Newsstand**.

## *Movies, TV, and Media*

### *Google Play Movies & TV*


The Google Play Movies & TV application allows you to connect to the Google Play Store and download a movie or TV show to watch instantly. Choose from thousands of movies and TV shows, including new releases and HD titles in Google Play and stream them instantly on your Android phone. Previously rented movies are automatically added to your My Movies library across your phones.

To learn more about Google Play Movies & TV, visit [play.google.com/about/movies](http://play.google.com/about/movies).

- Press  and tap  **Apps** >  **Play Movies & TV**.

### *Group Play*

Use Group Play to share media from your phone to other devices, via Wi-Fi, using your phone as an AP (Access Point).




Many of your phone's apps offer sharing via Group Play. Tap  to find sharing options, usually from the **Share via** list of options.

To use Group Play, all participants must be connected to the same Wi-Fi network.

**Important!** If you are using Group Play via an unsecured Wi-Fi network, your information may be vulnerable to unauthorized third parties while being transferred. Use Group Play only for personal and non-profit purposes. Using Group Play for commercial use violates copyright law. The company is not responsible for copyright infringement by users.

### *Create a Group and Share*




**Note:** To use Group Play, all participants must be connected to the same Wi-Fi network.

1. Press  and tap  **Apps** >  **Group Play**.
2. Check **Set group password**, and then tap **Create group** and then follow the prompts to create a group. You'll need to set up a group password, which participants will use to join your Group Play session.
3. After you create the group, your phone turns on the mobile AP (Access Point). Follow the on-screen directions to bring other devices back-to-back with your phone to join the group.
4. Choose options for sharing:

- **Share music:** Select music stored on your phone or on an optional installed memory card (not included).
- **Share images:** Select pictures stored on your phone or on an optional installed memory card (not included).
- **Share documents:** Select documents stored on your phone or on an optional installed memory card (not included).
- **Play games and more:** Play games with other participants.

**Note:** For more information about using Group Play, tap  > **Help**.

## Join a Group

1. Press  and tap  **Apps** >  **Group Play**.
2. Tap **Join Group**. Your phone scans for nearby available groups. Your phone can only detect groups on the same Wi-Fi network your phone is connected to.
3. Select a group to join. After connecting, you can see and interact with the group's shared media.

## Music

Your phone lets you discover, download, and listen to your favorite music through a variety of applications.

**Note:** For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).

## Google Play Music

Google Play Music lets you browse, shop, and play back songs purchased from the Google Play Store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

For more information about Google Play Music, visit [music.google.com](http://music.google.com).

**Note:** For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).

- Press  and tap  **Apps** >  **Play Music**.




## Music

 
The Music app plays music files. Use Music to browse your music library, play songs, and create playlists. You can also set songs as ringtones for incoming calls, or as alarm tones.

**Note:** For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).



When you close the Music screen, playback will continue in the background, so you can listen to music while you use other features of your phone. When music is playing in the background, you can access playback controls from Notifications.

### Play Music

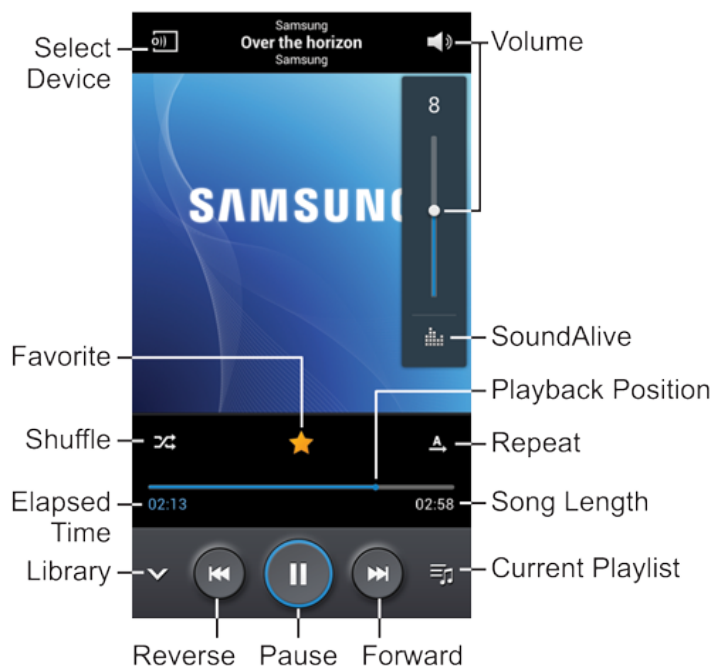1. Press  and tap  **Apps** >  **Music**.
2. Tap the category tabs at the top of the screen. The default tabs are **Songs**, **Playlists**, **Albums**, **Artists**, and **Folders**. You may have to swipe your finger right or left along the tabs to see all of them.
3. Scroll through the list and tap a song to begin.










4. While playing music, use these controls:
  - **Select Device:** Streams the current music file to another device using Screen Mirroring. For more information, see [Screen Mirroring](#).
  - **Favorite:** Assign the current song as a Favorite.
  - **Shuffle:** Shuffles the current list of songs randomly, or play songs in order.
  - **Elapsed Time:** Amount of time the song has been playing.
  - **Library:** Return to the song library.
  - **Reverse:** Touch and hold to rewind the song. Touch to go to previous song.
  - **Pause:** Pause playback of the song. Touch  to play the song after pausing.
  - **Forward:** Touch and hold to fast-forward the song. Touch to go to next song.
  - **Current Playlist:** Touch to display songs in current playlist.
  - **Song Length:** Length of the song.
  - **Repeat:** Repeat the current song, repeat all songs, or disable repeat mode.
  - **Playback Position:** Touch and drag the dot to move anywhere in the song.
  - **SoundAlive:** Enhance the music with effects.
  - **Volume:** Display the volume control. Slide the dot up and down to adjust the volume. The Volume Key can also be used to adjust the volume.
5. To close Music and stop playback, tap  > **End**.

## Playlists




Create playlists to group songs, so you can listen to them together.

1. Press  and tap  **Apps** >  **Music**.
2. Tap the **Playlists** tab, and then use these options:
  - Tap an existing playlist to play its songs.
  - Tap  > **Create playlist** to create a new playlist. Follow the prompts to name the playlist, and then select songs for the playlist.
  - Tap  for other options, including **Edit title**, to rename playlists.





**Note:** While playing music, you can touch and hold on a song to choose **Add to playlist**.

## Set a Song as a Ringtone or Alarm Tone

You can set a song as a ringtone for all incoming calls, or for a contact. You can also set a song as an alarm tone.

1. Press  and tap  **Apps** >  **Music**.
2. Scroll through the list to find a song, and then touch and hold on the song.
3. Tap **Set as**, and then choose:
  - **Phone ringtone**: Plays the song for all incoming calls.
  - **Caller ringtone**: Plays the song for calls from a Contact.
  - **Alarm tone**: Plays the song as the notification for alarms.
4. After choosing options, tap **Done**, and then follow the prompts to complete the setup.

## Music Options

1. Press  and tap  **Apps** >  **Music**.
2. Tap  for options. Available options depend on the tab:
  - **Add to playlist/Create playlist**: Depending on the tab, you can add songs to a playlist, or create a new playlist.
  - **Via Bluetooth**: Share music with another Bluetooth-compatible device. For more information about using Bluetooth, see [Bluetooth](#).
  - **Edit title**: Rename a playlist.
  - **Delete**: On the Songs or Playlists tabs, you can choose songs to delete, or delete playlists.
  - **Thumbnail view/List view**: Display entries in a list or as thumbnails.
  - **Search**: Enter keywords to search for songs.
  - **Scan for nearby devices**: Search for nearby DLNA-compatible devices, to share music. For more information, see [Nearby Devices](#).
  - **Settings**: Configure settings for music and playback, including:
    - **Music menu**: Choose categories for the tabs on the main Music screen.
    - **SoundAlive**: Choose a setting to match the type of music.

- **Adapt Sound:** Customize sound output when you are listening with earphones. Only available when earphones are inserted into the earphone jack.
  - **Play speed:** Touch and drag the slider to set the default speed for music playback.
  - **Music auto off:** Choose a time period for music to play, after which Music will end.
  - **Lyrics:** When enabled, lyrics display for songs as they play, if the lyric information is stored in the music file.
  - **Smart volume:** When enabled, Music automatically adjusts the volume of all songs to an equal level.
  - **Voice control:** When enabled, you can control music playback by speaking commands. Follow the prompts to configure Voice control settings.
- **End:** Close Music.

## Navigation

Your phone offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

### Google Maps

Use the Google Maps app to find directions, location information, business addresses, etc. Determine your current location with or without GPS, get driving and transit directions and get phone numbers and addresses for local businesses.

For more information about Google Maps, visit [maps.google.com](https://maps.google.com).

To use Google Maps, enable your phone's GPS location services and agree to share location information with Google.

#### Enable Your Phone's GPS Location Feature




1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Location** > **Mode** > **GPS only**.

#### Launch Google Maps

- Press  and tap  **Apps** >  **Maps**.

### TripAdvisor

Get assistance finding hotels, restaurants, and attractions in any destination. See millions of reviews, opinions and candid photos from travelers just like you.

1. Press  and tap  **Apps** >  **TripAdvisor**.
2. Follow the on-screen instructions.

## Samsung Apps

Browse, search, and find apps to download and install on your phone. Log in to your Samsung Account to manage your downloads.

- Press  and tap  **Apps** >  **Samsung Apps**.

## Samsung Hub




Samsung Hub is your one stop for the hottest movie and TV content. With hundreds of titles available, entertaining your family on the go was never easier. You can rent or purchase your favorite content and watch from any location. Featuring the stunning viewing quality Samsung is known for, Samsung Hub is your gateway to mobile video like you've never experienced it before.

You must be connected to Mobile data service, or to a Wi-Fi network, to preview and download a media file. Files you download or purchase are stored in the phone's internal memory.

Samsung Hub uses your Samsung Account to manage access and account information. For more information about creating or signing in to a Samsung Account, see [Samsung Account](#).

### Use Samsung Hub

The Samsung Hub screen provides an overview of all the available categories on one page, such as Music, Video, Books, and Games. The overview page also displays recently-added media that you can rent or purchase.

1. Press  and tap  **Apps** >  **Samsung Hub**.
2. Scroll across the screen to select from the following available pages:
  - **Overview:** Main access for all available categories and recently available content for purchase or rental.
  - **MUSIC:** Display music that is available for purchase and allows you to search for new music.
  - **VIDEO:** Display videos and TV shows that are available for purchase/rental and allows you to search for new content.
  - **BOOKS:** Display books and magazines that are available for purchase and allows you to search for new content.

- **GAMES:** Display games that are available for purchase or as trials and allows you to search for new content.
- 3. Scroll through the media listings. You can tap items to buy or rent them. As you tap some items, you can listen or watch a preview.
- 4. Follow the prompts to buy or rent media.

## Samsung Hub Notices

- Any media item (Media Content) may be rented or purchased after you create an account in Samsung Hub.
- Media Content that is purchased and downloaded may be viewed concurrently on up to five (5) devices with Samsung Hub (or “the service”) that are also registered to the same account.
- You may remove a device from your account no more than once every 90 days.
- You may remove Media Content from a device as many times as you’d like. You will have the ability to re-download the Media Content later subject to content re-download availability and content provider permissions.
- You may need network coverage to access Media Content you have acquired through the Service.
- You can use 3G, 4G, or Wi-Fi connectivity to download Media Content.
- Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account at a time.
- Media Content is downloaded and saved to your authorized device's SD card. No SD Card included out of box.
- Your Media Content may pause/stop or not download in networks where there is a weak signal.
- You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
- You must finish watching Media Content within the time limit set out for each piece of content (which may be as short as 24 consecutive hours).
  - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
  - In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (e.g., if you begin viewing rented Media Content on the 29th day after the rental

transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).

Unless otherwise restricted by the Content Providers, you can download Media Content to your TV using HDMI connections; otherwise, you cannot play Media Content downloaded from your mobile device output. (4/1/2013)

## Samsung Link

Samsung Link makes staying connected easy. You can wirelessly synchronize your Samsung phone with your TV, stream content, and even keep tabs on who calls or sends text messages with real-time, on-screen monitoring.



Samsung Link allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer.

Samsung Link uses your Samsung Account. For more information, see [Samsung Account](#).




Both your phone, and the devices that connect to your phone, must be on the same Wi-Fi access point (AP). For more information about using Wi-Fi, see [Wi-Fi](#).

### Install the Samsung Link app on Your Phone

Before you use Samsung Link on your phone, you must download and install the app from Samsung Apps.

1. Press  and tap  **Apps** >  **Samsung Link**.
2. Tap **Download** and follow the prompts to download and install the app.





### Launch Samsung Link

1. Press  and tap  **Apps** >  **Samsung Link**.
2. Follow the prompts to sign in to your Samsung Account and learn about Samsung Link.
3. On the Samsung Link screen, swipe your finger left or right across the screen to scroll between:
  - **ALL CONTENT:** Media you've recently viewed.
  - **DEVICES & STORAGE:** Choose an option:
    - **Registered storage:** Add storage service(s) to view multimedia files anywhere. Storage services include Web storage, such as Dropbox or other services. Web storage is sometimes referred to as the "cloud."

- **Registered devices:** Stream or share multimedia content from your phone to other DLNA-compliant devices connected to the same Wi-Fi network. When you launch Samsung Link, compatible devices on the same Wi-Fi network display automatically in Registered devices.

## Configure Samsung Link Settings





Configure Samsung Link options, such as storage location, account information, and registered storage services.

1. Press  and tap  **Apps** >  **Samsung Link**.
2. Tap  > **Settings** for options:
  - **Registered storage:** Add a Web storage service, to view or share files.
  - **Save to:** Choose a default file storage location. You can save to your phone's internal memory or to an optional installed memory card (not included).
  - **Auto upload:** When turned On, photos and videos from your phone will be automatically uploaded to a Web storage service. You can also choose how files are uploaded. Turn On Use mobile network to allow your phone to use your phone's connection to the wireless data network, or turn it Off to only allow uploads when connected to Wi-Fi.
  - **Video optimization:** When turned On, video quality for streamed video content is optimized depending on current network conditions.
  - **Password lock:** When turned On, access to Samsung Link on your phone is password-protected. You must enter your Samsung Account password to start Samsung Link.
  - **My account:** Access information about your Samsung Account.
  - **About this service:** Learn about Samsung Link.

## Use Samsung Link to Share Media with Another Device

Share media with another DLNA-compliant device via Samsung Link.

Both your phone, and the device(s) that connect to your device, must be on the same Wi-Fi access point (AP). For more information about using Wi-Fi, see [Wi-Fi](#).

1. Press  and tap  **Apps** >  **Samsung Link**.
2. Launch AllShare Play or Samsung Link on the target device.
3. On the DEVICES & STORAGE screen, tap your phone, and then tap media file(s) to select them for streaming.
4. Tap , and then choose a device for sharing. Your phone requests permission for sharing from the target device.
5. Follow the prompts on the target device to allow sharing.

## Sprint Zone

The Sprint Zone app will keep you up-to-date on all the Sprint information that matters most to you. This includes access to your account information, the latest Sprint promotions and customer news, help with your device and account, and Sprint's suggestions for apps.

- Press  and tap  **Apps** >  **Sprint Zone**.

## Story Album

With Story Album, you can create a digital album of your story in media. Special moments will be on a timeline, and if you wish, you can have your album published as a hard copy.

- Press  and tap  **Apps** >  **Story Album**.

**Note:** Tap  > **Help** to learn more about Story Album.






# WatchON

Use WatchON and your phone to control your TV and other devices.

## Set Up WatchON




Configure basic WatchON settings, to identify your TV provider and sign in to your accounts.

1. Press  and tap  **Apps** >  **WatchON**.
2. Follow the prompts to configure WatchON options, such country/region, TV service provider, channel list setup, etc.

**Note:** Tap  > **Help** to learn more about WatchON.

## Set Up Your Phone as a Remote

Use WatchON and your phone to control your TV, set-top box, DVR, Blu-ray or DVD player, stereo, and other electronic devices.

1. Press  and tap  **Apps** >  **WatchON**.
2. From the toolbar, tap the icon, and then tap **Set up now**.
3. Follow the prompts to find your TV or other devices and configure your phone to control their operation.

**Note:** Tap  > **Help** to learn more about WatchON.

# Web and Data

---

The following topics address your phone's data connections and the built-in Web browser. Additional data-related features can be found in [Accounts and Messaging](#), [Apps and Entertainment](#), and [Tools and Calendar](#).

Your phone's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including:

## Wi-Fi



Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot".

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

### *Turn Wi-Fi On and Connect to a Wi-Fi Network*

By default, your phone's Wi-Fi feature is turned off. Turning Wi-Fi on makes your phone able to discover and connect to compatible in-range Wi-Fi networks (or WAPs - wireless access points).



#### Turn Wi-Fi On

1. Press  and tap  > **Settings** > **Connections** > **Wi-Fi**.
2. Tap the **ON/OFF** switch to turn Wi-Fi on.



**Tip:** You can also turn Wi-Fi on and off through the Notifications panel. Drag the Notifications panel down and tap **Wi-Fi**.

**Note:** Wi-Fi networks are self-discoverable, which means no additional steps are required for your phone to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed Wi-Fi networks.

## Scan and Connect to a Wi-Fi Network

1. Press  and tap  > **Settings** > **Connections** > **Wi-Fi**.
2. The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed.
  - When you select an open network, you will be automatically connected to the network.
  - When you select a secured network, you will need to enter the wireless password to connect to the network. Enter the password and tap **Connect**. You can use the **show password** option to display the password as you enter it.



## Add a New Wi-Fi Network Manually

1. Press  and tap  > **Settings** > **Connections** > **Wi-Fi**.
2. Tap **Add Wi-Fi network**.
3. Enter the Network SSID. This is the name of the Wi-Fi network.
4. Tap the **Security** field and select the security method used by the Wi-Fi network. If a password is required, enter it in the Password field.
5. Tap **Connect** to store the new information and connect to the Wi-Fi network.

**Note:** The next time your phone connects to a previously accessed or secured Wi-Fi network, you won't prompted to enter the password again (unless you reset your phone back to its factory default settings).

## Connect to a Different Wi-Fi Network

The following information is designed to help you connect your phone to a different Wi-Fi network.

1. Press  and tap  > **Settings** > **Connections** > **Wi-Fi**.
2. Detected Wi-Fi networks are displayed. To manually scan for available Wi-Fi networks, on the Wi-Fi settings screen, tap **Scan**.
3. Tap another Wi-Fi network to connect to it.

**Note:** If the Wi-Fi network you want to connect to is not in the list of detected networks, scroll down the screen, and tap **Add Wi-Fi network**. Enter the Wi-Fi network settings and tap **Save**.

## Connections Optimizer



The Connections Optimizer is a tool that automatically selects the best mobile network for your phone, including "remembered" Wi-Fi networks.

### About Connections Optimizer

The Connections Optimizer helps you manage and enhance your data experience by finding and connecting to "remembered" Wi-Fi networks on your phone. Remembered Wi-Fi networks are networks with which you have previously chosen to connect. Active Wi-Fi connections may offer improved performance and generally improve battery life while allowing you to talk on the phone and use data at the same time.

The Connections Optimizer works by searching for available "remembered" Wi-Fi networks. If you do not leave your Wi-Fi antenna on all the time, you will only notice the Connections Optimizer operating at certain times of the day in a small number of locations on the network. Your Wi-Fi antenna will conserve battery by scanning for connections periodically (not continuously), and if no connection is achieved, the antennas will be turned off. You may also manually turn the antennas off during the scan period.

To facilitate quality assurance and enable feature enhancements, information is collected about your battery levels, Wi-Fi and network connections and usage. No personal information is collected.

1. Press  and tap  > **Settings** > **Connections** tab > **More networks** > **Mobile networks** > **Connections optimizer**.
2. Tap the check box to enable Connections optimizer.

## Data Services General Information (3G and 4G Networks)

With your Sprint service, you are ready to start enjoying the advantages of data services. The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

**Important!** Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen keyboard may appear unresponsive when in fact it is functioning properly. Allow the phone some time to process your data usage request.



### Your Data Services User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com". (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name is automatically programmed into your phone. You don't have to enter it.

## Update Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your phone.

1. Press  and tap  > **Settings** > **More** tab > **System Update**.
2. Tap **Update Profile**.

## 4G Services

4G is a service that must be included in your service plan and also available within your area. 4G coverage is currently available in only certain markets. For more details on 4G availability go to: [sprint.com/4G](http://sprint.com/4G) and click the **See the coverage map** link.



**Note:** If 4G service is not included in your service plan, the 4G icon will not appear in the Notifications area.

4G is up to 10x faster than 3G (based on download speed comparison of 3G's ~ 600 kbps vs. 4G's ~ 6 Mbps). (Actual speeds may vary.)

Not all services are available on 4G and coverage may default to 3G/separate network where 4G is not available.

**Important!** 4G service must be added to your account before attempting a connection to the 4G network.

Depending on which icons appear within the Notifications area, your services and features will change. The following table indicates what functions and features are available when combinations of these service icons appear:

Icon	Description
	<b>3G Coverage:</b> The phone is connected to the Sprint 3G network. The icon spins when data is being transferred.
	<b>4G Coverage:</b> The phone is connected to the Sprint 4G network. The icon spins when data is being transferred.

## Virtual Private Networks (VPN)

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.



## Prepare Your Phone for VPN Connection

Depending on the type of VPN, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

To connect to a VPN, you must have Mobile data enabled, or your phone must be connected to a Wi-Fi network. For information about setting up and using these connections on your phone, see [Data Usage](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).




### Set a Screen Lock

Before setting up a VPN, you must set a screen lock to prevent access to your phone by unauthorized users. PIN or password screen locks provide sufficient security to set up trusted credential storage.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Lock screen** > **Screen lock**.
3. Choose **PIN** or **Password** screen lock.
4. Follow the prompts to configure the screen lock. For more information, see [Screen Lock](#).



## Add a VPN

Configure a connected to a VPN. You must have a PIN or Password screen lock set before adding a VPN.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **VPN**.
3. Tap  to add a VPN with these options:
  - **Name:** Enter the name of the VPN.
  - **Type:** Choose the type of VPN, from PPTP, L2TP/IPSec PSK, L2TP/IPSec RSA, IPSec Xauth PSK, IPSec Xauth RSA, or IPSec Hybrid RSA.
  - **Server address:** enter the VPN server address.
  - **PPP Encryption (MPPE):** Tap to enable, if applicable for the VPN.
  - **Show advanced options:** Tap to set other options, depending on the type of VPN.
4. Tap **Save** to save the VPN.

## Connect to a VPN

Connect to a VPN that's already set up on your phone.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **VPN**.
3. In the VPNs section, tap a VPN.
4. Follow the prompts to enter your login credentials, and connect. When you are connected, the VPN connected icon appears in the notifications area of the Status Bar.

## *Disconnect from a VPN*

The following describes how to disconnect from a VPN connection.

1. Touch and hold the title bar, and then drag down to open the Notifications panel.
2. Tap the VPN connection to return to the VPN settings screen, and then tap the VPN connection to disconnect from it.

When your phone has disconnected from the VPN, the VPN disconnected icon displays in the notification area of the title bar.

## *Chrome*

Use Chrome for Mobile to browse fast and sign in to bring your Chrome experience from your computer, anywhere you go.

For more information, visit [google.com/intl/en/chrome/browser/mobile](http://google.com/intl/en/chrome/browser/mobile).

- Press  and tap  **Apps** >  **Chrome**.

## *Internet Browser*

Your phone's Internet browser gives you full access to both mobile and traditional websites on the go, using your phone's 3G or 4G Mobile data or Wi-Fi connections.

- Press  and tap  **Apps** >  **Internet**.

**Note:** The first time you launch Internet, you may be prompted to enter your 10-digit wireless phone number to access the Sprint Web home page.

## *Lumen Toolbar*

The Lumen Toolbar makes the mobile web more social and more useful than ever before. Extensions like Facebook, Twitter, Related Apps, Offers, Readability and many more allow you to stay connected, find deals, browse apps and save browsed content for later—all without leaving the page you're currently on.

- Press  and tap  **Apps** >  **Lumen Toolbar**.





# Camera and Video

 
---

## Camera

You can use the camera or camcorder to take and share pictures and videos.

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the camera, and then pressing the camera key.



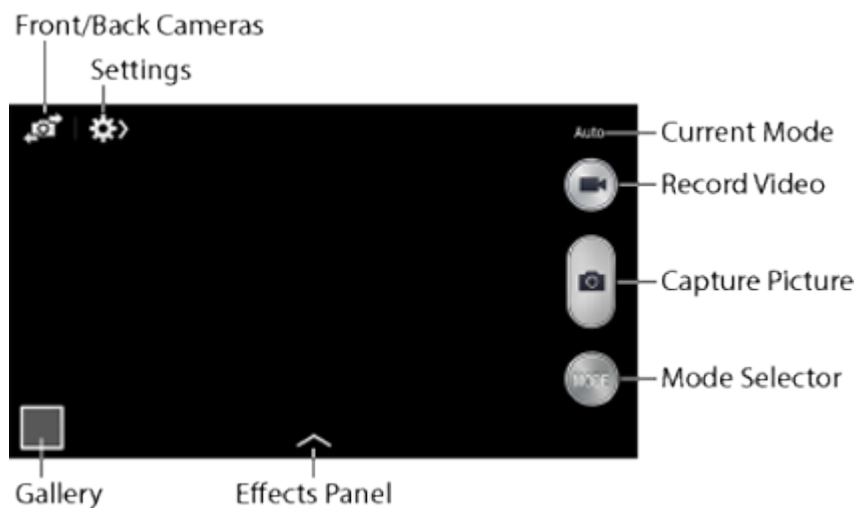

- Press  and tap  **Apps** >  **Camera**.



- **Front/Back Camera:** Switch between the front and back cameras.
- **Settings:** Access camera settings.
- **Current Mode:** Displays the current shooting mode, chosen with Mode Selector. Shooting modes allow you to choose modes for automatically adjusting settings to suit conditions, or to access special features like panorama or other specialty shots.
- **Record Video:** Tap to record video.
- **Capture Picture:** Tap to take a picture.
- **Mode Selector:** Tap to choose a shooting mode. The current mode displays on the camera screen.
- **Effects Panel:** Choose an effect to add to pictures or videos as you take them.
- **Gallery:** View your pictures or videos.

## Take a Picture

You can take pictures with your phone's front or back camera, or combine shots with Dual mode.


1. Press  and tap  **Apps** >  **Camera**.
2. Using the phone's screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the on-screen options, or these gestures:
  - Press the **Volume Key** up or down to zoom in or out, or touch the screen with two fingers and pinch or spread them on the screen to zoom in or out.
  - Tap the screen to focus on the area you tapped.
3. Tap  **Capture** to take the picture.


**Note:** To include your location in photos, turn on GPS tag in Settings. For more information, see [Advanced Camera Settings](#).

## Record Videos

In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

1. Press  and tap  **Apps** >  **Camera**.

**Note:** When the Camera app is initially launched, the screen displays on-screen camera controls, including  **Record Video**. While recording video, video camera controls are temporarily displayed. For more information about the Camera screen, see [Camera](#).

2. Using the phone's screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your shot, use the on-screen options, or these gestures:
  - Press the **Volume Key** up or down to zoom in or out, or touch the screen with two fingers and pinch or spread them on the screen to zoom.
  - Tap the screen to focus on the area you tapped.
3. Tap  **Record Video** to begin recording. While recording, you can use these options:



- Tap the screen to change the focus area to the area you tapped.
- Tap **Capture** to take a still picture while continuing recording.
- Tap **Pause** to temporarily stop recording.
- Tap **Stop** to stop recording.

## Camera Options












Camera options are special options that you can choose, right on the camera screen, to make your pictures or videos special.

1. Press and tap Apps > Camera.
2. Tap an option:
  - **Front/Back Camera:** Tap to switch between the front and back cameras. With the front camera, you can take self-portraits or record yourself. With the back camera, you can take pictures or record what's in front of you.
  - **Mode:** Tap to choose a shooting mode. Scroll available modes, and then tap a mode to select it. Modes include:
    - **Auto:** Automatically adjusts the exposure to optimize the color and brightness of pictures. In Auto mode, you can take single or burst shots (take burst shots by holding **Capture** to take multiple shots until you lift your finger).
    - **Beauty face:** Automatically enhances facial features.
    - **Best photo:** Allows you to select the best shot from multiple shots you take at the same time.

- **Continuous shot:** Captures a series of photo continuously at a rate of 3 per second for as long as you touch and hold **Capture** (maximum of 20 photos at a time). These photos are saved together as a group in a folder in Gallery.
- **Best face:** Allows you to select the best shot of each subject, to get the best possible group shot.
- **Sound & shot:** Adds a few seconds of background sound to enhance pictures.
- **Rich tone (HDR):** Allows you to take pictures in various exposures and merge them to create pictures with rich color.
- **Panorama:** Take multiple pictures to merge into one expansive panoramic picture.
- **Sports:** Allows you to capture clear shots of a moving subject.
- **Night:** Allows you to take clearer, brighter pictures in low light.









## Quick Camera Settings

Use Quick settings to quickly configure settings while you take pictures and record videos.

1. Press  and tap  Apps >  Camera.
2. Tap  to access settings:
  - **Advanced settings:** Tap  to access advanced camera settings. For more information, see [Advanced Camera Settings](#).
  - **Flash:** Tap  to choose a flash setting.
  - **Voice control:** Tap  to access voice control settings, for using voice commands to take pictures and record video. For more information, see [Voice Control](#).
  - **Timer:** Tap  to choose a timer setting to delay the taking of pictures or recording.
  - **Recording mode:** Tap  to choose a mode for recording. Choose Limit for MMS to restrict recordings to a size that can be attached to a multimedia message. Choose Normal to control the speed of recording.
  - **Share:** Tap  to choose a method for sharing pictures and videos. You can choose Share shot, Buddy photo share, or Remote viewfinder.
  - **Hide Settings:** Tap  to hide Quick camera settings.

## Advanced Camera Settings

Use Advanced settings to configure default options for pictures and videos.

1. Press  and tap  Apps >  Camera.
2. From the Camera screen, tap  > and then tap  for these settings:
  -  **Photos:**
    - **Photo size:** Choose the default size for pictures.
    - **Face detection:** Set the camera to automatically adjust settings for taking pictures of faces.
    - **Metering modes:** Set how the camera measures the light source.
    - **ISO:** Set the sensitivity of the camera's light meter.
    - **Anti-Shake:** Allow the camera to compensate for movement of the phone when taking pictures.
    - **Save as:** Select how your device should handle saving rich tone photos—save both the Rich tone photo and the original photo, or save only the Rich tone photo. This option is only accessible when you have selected Rich tone (HDR) from the camera modes.
  -  **Videos:**
    - **Video size:** Choose the default size for videos.
  -  **General Settings:**
    - **Location tag:** When On, GPS location information is stored in picture files.
    - **Review pics/videos:** When On, pictures and videos display briefly after you take them so you can review them.
    - **Volume Key:** Choose a function for the Volume Key while using the Camera.
    - **Timer:** Choose a timer setting to delay the taking of pictures or recording.
    - **White balance:** Choose a setting for current light conditions.
    - **Exposure value:** Adjust the brightness of pictures.
    - **Guidelines:** When On, guidelines display on the screen to aid in composition.
    - **Flash:** Choose a flash setting.

- **Voice control:** When On, you can take pictures or record videos by speaking commands. For more information, see [Voice Control](#).
- **Contextual filename:** When On, filenames include GPS information. GPS tag must be enabled to use contextual filenames.
- **Storage:** If you have an optional memory card installed (not included), you can choose whether to save files to device memory or to the memory card.
- **Reset:** Return settings to the factory defaults.

## Gallery







Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera, downloaded, or copied to an optional memory card (not included).


For pictures stored on an optional memory card, you can do basic editing such as rotating and cropping. You can also set a picture as your contact picture or wallpaper and share pictures with your friends.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply tap an album to view the photos or videos in that album.

If you have pictures or videos stored on an optional memory card (not included), they will be display folders they are stored in, and folders are treated as albums. The actual folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **All downloads** album.










**Note:** Tap  > **Help** to learn about Gallery.

1. Press  and tap  **Apps** >  **Gallery**.
2. Browse files stored in your phone's memory, or on an optional installed memory card (not included). From the main Gallery screen, you have these options:
  - Tap the menu in the toolbar to display files by **Albums**, **All**, **Locations**, **People**, or **Favorites**.
  - Tap a picture or video to display it in full screen view.
  - Touch and hold thumbnails to select them (indicated by a check mark).
  - Tap  to create a **New album**. Give the album a name, and then select and drag thumbnails to the album to move or copy files to the new album.
  - Tap  to launch the **Camera** app.
  - Tap  for **Gallery options** (options vary depending on the view):

- **Select album/Select item:** Depending on the view, tap albums or items to select them. After selection, you can tap  again for options you can use with the selected item.
- **Slideshow:** Choose options to create a slideshow for viewing your pictures and videos.
- **Sort by oldest/latest:** Sort items by date.
- **Content to display:** Select content to display. Options are **All content**, **Content in device**, **Content in Dropbox**, **Content in Facebook**, and **Content in Picasa**.
- **Scan for nearby devices:** Scan for Wi-Fi devices to share photos and videos.
- **Settings:** Configure Gallery settings.
- **Help:** Get help using Gallery.

## View Photos and Videos

After selecting an album from the Albums tab, you can browse the photos and videos of that album in either photo pile or grid view. Tap a photo or video to view it in full screen.

1. Press  and tap  **Apps** >  **Gallery**.
2. Tap a thumbnail to view the photo or video. While viewing, you can use these options:
  -  **Select device:** Send the photo or video to a nearby device.
  -  **Share via:** Choose an option for sharing the photo or video. Available options depend on the type of item, and may include Group Play, Dropbox, Bluetooth, Drive, Email, Flipboard, Gmail, Google+, Hangouts, Messaging, Photos, Picasa, S Memo, Wi-Fi Direct, or YouTube. For more information, see [Share Photos and Videos](#).
  -  **Trim:** Remove the beginning and ending frames of a video.
  -  **Delete:** Delete the photo or video.
  -  **Camera:** Launch the Camera app.
3. Tap  for more options (options vary according to item being viewed):
  - **Edit:** Edit the photo using Photo Editor (available for download from Samsung Apps).
  - **Play continuous shot:** View Continuous shot photos in quick succession. For more information, see “Continuous shot” under [Camera Options](#).

- **Create animated photo:** Create an animated photo using up to eight Continuous shot photos. For more information, see “Continuous shot” under [Camera Options](#).
- **Favorite:** Mark the photo or video as a favorite.
- **Slideshow:** View a slideshow of your photos and videos.
- **Photo frame:** Add a decorative frame to the photo.
- **Photo note:** Write a note on the ‘back’ of the photo.
- **Copy to clipboard:** Place the photo on the clipboard for pasting into other apps.
- **Print:** Print the photo to a compatible Samsung Wi-Fi printer (not included).
- **Rename:** Rename the photo or video.
- **Buddy photo share:** Share the photo with people tagged in the photo.
- **Rotate left:** Rotate the photo 90 degree to the left.
- **Rotate right:** Rotate the photo 90 degree to the right.
- **Crop:** Crop the photo.
- **Set as:** Set the photo as a Contact photo, or as wallpaper for the Home screen and Lock screen.
- **Details:** View file details about the photo or video.
- **Settings:** Configure Gallery settings:
  - **Accounts:** Manage your Google Account information.
  - **SNS data management:** Enable **Sync only via Wi-Fi** to only sync photos and videos when connected to a Wi-Fi network.
  - **Tags:** Enable **Tag buddy** and **Face tag**. Tag buddy identifies each photo with information such as the weather, location, people in the photo, or date created. Face tag scans each photo to detect people’s faces, which you can then tag with their name.
  - **Sound & shot:** Enable **Auto play sound** to automatically play the recorded sound when viewing pictures taken in Sound and & shot mode.

## *Zoom In or Out on a Photo*

There are two ways you can zoom in or out of a photo.

- Tap the screen twice quickly to zoom in and then tap the screen twice quickly again to zoom out.



– or –





You can also use “pinch” and “spread” gestures to zoom in or out. See [Pinch and Spread](#).

## *Edit Photos*

You can touch and hold on a photo to open a selection menu and choose what to do with it. You can choose to delete the photo, rotate or crop it, and more.

### **Rotate and Save a Photo**





To rotate or save your photo, follow the below procedures.

1. Press  and tap  **Apps** >  **Gallery**.
2. Select a folder location (such as Camera) and tap an image to view your picture.
3. Tap  > **Rotate left** or **Rotate right**.

The rotated picture is saved in your default storage location as a copy.

### **Crop a Photo**

To crop your photos, follow the below procedures.

1. Press  and tap  **Apps** >  **Gallery**.
2. Select a folder location (such as Camera) and tap an image to view your picture.
3. Tap  > **Crop**.
4. To adjust the crop box size, touch and drag the edges of the box.
5. To move the crop box to the part of the photo that you want to crop, touch anywhere inside the box and drag it to the desired position.
6. Tap **Done** to apply the changes to the picture.





The cropped picture is saved along with the original copy in your default storage location.

## *Share Photos and Videos*

The Gallery application lets you send photos and videos using email or multimedia messages. You can share photos on your social networks (such as Facebook, Picasa, and Twitter) and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.

## Send Photos or Videos by Gmail or Email





You can send several photos, videos, or both in a Gmail or email message. They are added as file attachments.

1. Press  and tap  **Apps** >  **Gallery**.
2. Tap the album that contains the photos or videos you want to share, and then tap the photos you want to send.
3. Tap the screen and then tap  > **Gmail** or **Email**.
4. Compose your email. For more information, see [Compose and Send Email](#) and [Send a Gmail Message](#).

**Note:** If you selected **Email** and you have multiple email accounts, the default email account will be used.





## Send a Photo or Video by Multimedia Message

Although you can send several photos or videos in a multimedia message, it may be better to send one at a time—especially if the files are large in size.






1. Press  and tap  **Apps** >  **Gallery**.
2. Tap the album that contains the photos or videos you want to send, and then tap the photo or video you want to send.
3. Touch the screen and then tap  > **Messaging**.
4. Compose your message. For more information, see [Send a Message](#).

## Send Photos or Videos Using Bluetooth

You can select several photos, videos, or both and send them to someone's phone or your computer using Bluetooth.





1. Press  and tap  **Apps** >  **Gallery**.
2. Tap the album that contains the photos or videos you want to send, and then select the photos or videos you want to send.
3. Touch the screen and then tap  > **Bluetooth**.
4. Follow the prompts to enable Bluetooth on your phone and connect to the receiving Bluetooth device. For more information, see [Bluetooth](#).

## Share Photos or Videos on Google+

1. Press  and tap  **Apps** >  **Gallery**.
2. Tap the album that contains the photos or videos you want to send, and then select the photo or video you want to send.
3. Touch the screen and then tap  > **Google+**.
4. Compose your message and then tap .





## Share Photos on Photos

**Note:** You need to be signed in to a Google Account to upload pictures to Photos.

1. Press  and tap  **Apps** >  **Gallery**.
2. Tap the album that contains the photos or videos you want to share, and then select the photos you want to share.
3. Touch the screen and then tap  > **Photos**.
4. Select the online album where you want to upload the pictures.
5. Tap **Upload**.

## Share Videos on YouTube

You can share your videos by uploading them to YouTube. Before you do this, you must create a YouTube account and sign in to that account on your phone.

1. Press  and tap  **Apps** >  **Gallery**.
2. Tap the album that contains the videos you want to share, and then select the video you want to share.
3. Touch the screen and then tap  > **YouTube**.
4. At the prompts, enter information, such as description and tags, and select a privacy option.
5. Tap **Upload**.




# Photos

Manage your Google+ photos, albums, and videos with the Photos app.


- Press  and tap  **Apps** >  **Photos**.

## Video







Play videos stored on your phone, and share them via Bluetooth, Drive, Dropbox, Email, Gmail, Google+, Messaging, Picasa, Wi-Fi Direct, and YouTube.







1. Press  and tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your phone. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

### Viewing Thumbnails





- While viewing thumbnails, tap  for options:
  - **Scan for nearby devices:** Discover and connect directly to nearby devices.
  - **Sort by:** List videos by **Title** (default), **Date**, **Size**, or **Type**.
  - **View as:** Display videos as a **List**, **Thumbnails**, or as **Folders**.
  - **Share via:** Share the video.
  - **Delete:** Delete videos.
  - **Auto play next:** Enable or disable automatic playing of videos in the order they appear.

### Viewing Videos

1. Touch a video to play it. While playing a video, touch the screen to display or hide playback controls:
  -  **Select device:** Send the video to a nearby device.
  -  **Pause:** Pause the video.
  -  **Play:** Start the video after being paused.
  -  **Reverse:** Touch and hold to rewind the video. Tap to go to previous video.
  -  **Forward:** Touch and hold to fast-forward the video. Tap to go to next video.
  -  **Volume:** Tap to display the volume slider control.





-  **Pop-Up Play:** The video plays in a small window so you can use your phone for other purposes while watching the video. To return to previous size, double-tap the screen.
2. Adjust the size of the video image to better fit on the display screen:
-  **Full-screen view.** The entire screen is used, which may cause some image distortion.
  -  **Original size view:** The video plays in its original size.
  -  **Rotational view:** The video is enlarged as much as possible without becoming distorted. When the display screen auto rotates, the video is automatically resized to fit the current screen size without distortion.
  -  **Ratio view:** The video is enlarged as much as possible without becoming distorted. When the display screen auto rotates, the video remains the same size and does not adjust to fit the current screen size.
3. During playback, touch  for options:
- **Share via:** Share the video.
  - **Chapter preview:** Display chapter information (if embedded in the video file).
  - **Trim:** Adjust the beginning and ending points of the video.
  - **Via Bluetooth:** Share video using Bluetooth.
  - **Video auto off:** Set the option Off or set your video to turn off automatically by touching one of the time values.
  - **Subtitles (CC):** View subtitles for the video (if available).
  - **Settings:** Touch this option to view the following:
    - **Brightness:** Adjust the brightness of the display screen.
    - **Capture:** Turn on or off the Capture mode.
    - **Play speed:** When turned on, the playback speed is displayed during playback.
    - **SoundAlive:** Enhance audio with SoundAlive effects when using headphones.
    - **Tag buddy:** View tagged information such as the weather, location, or date created for the video file (if available).
  - **Details:** Provides details about the video, such as Name, Size, Resolution, etc.

## Share Videos

1. Press  and tap  **Apps** >  **Video**.
2. Tap  > **Share via**.
3. Tap video(s) to select them for sharing, and then tap **Done**.
4. Choose a sharing option, and then follow the prompts to share the video.

## Use Pop-Up Play

Multitask with Pop-up Play—transform your video player into a pop-up window floating on the screen. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. Press  and tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  to continue playing the video in a floating window. Drag the window to any location on the screen, and use two fingers to pinch or spread to resize the floating window.

# Tools and Calendar

---

Learn how to use many of your phone's productivity-enhancing apps and features.




## Calendar


Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your phone's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, and Outlook calendar.

### Add an Event to the Calendar

Add events to your Calendar to help you organize your time and remind you of important events.

**Note:** To synchronize calendar events among your Google and Corporate accounts, make sure they are being managed by your phone. See [Accounts and Messaging](#) for more information.

1. Press  and tap  **Apps** >  **Calendar**.
2. Double-tap a day to which you would like to add an event to reveal the Add event/Add task screen.
3. Assign the new calendar event to sync with an email account (such as Gmail) by tapping the **Calendar** field and selecting an account.
  - **My calendar** stores calendar entries locally on the phone and not as part of an email account.
  - **Google/Gmail** are calendar entries that are synchronized between your phone and your online Google Account.
  - **Corporate** are calendar entries that are synchronized between your phone and either an Exchange Server or available from within Microsoft Outlook.
4. Tap the **Title** field and enter a title for the event.
5. Tap **OK** to save the event, or tap **Edit event details** to enter more information about the event:
  - Assign the new calendar event to sync with an email account (such as Gmail) by tapping the **Calendar** field and selecting an account.
  - Select a **From/To** time for the event by tapping the corresponding fields, and adjusting the month, day, and year.

- Select a time for the event by tapping the time field and then adjusting the hour and minute. Tap the **All day** field to assign this as an all day event. If assigned as an all day event, the time fields are removed as options.
- Select a recurrence cycle for the event by tapping the **Repeat** field.
- Select an alarm time by tapping the **Reminder** field.
- Enter a location for the event in the **Location** field or tap  to select the location on the map.
- Enter a description for the event in the **Description** field.
- Tap **Participants** to enter participant names, or choose contacts as participants.
- Tap **Show me as** to choose how the event appears to others if they can view your calendar.
- Tap **Privacy** to choose a privacy setting. When an event is private, its details are not shown on your calendar for others to see. When an event is public, it appears to anyone who can view your calendar. The default setting is for the event to be visible only to those who have access to add to your calendar.
- Tap **Memos** to add an **S Memo** file as an attachment. For more information, see [S Memo](#).
- Tap **Images** to add an image from the Gallery or take a new picture using the camera.

6. Tap **Save** to store the new event and synchronize it with your selected account.

## *Event Alerts*

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringtone.
- By showing the **Alert** screen.

## **Event Reminders**

When your phone is turned on and you have an event alarm scheduled, there are several ways your phone alerts you to scheduled events:

- By playing a short beep.
- By indicating an icon within the Status bar.






To view additional options:

1. Tap the **Status** bar, and then slide your finger down the screen to open the **Notifications** panel.
2. Tap the upcoming event name from the on-screen list to display the event within the **Calendar** notifications screen.
3. Tap an option.
  - **Set snooze duration** to set the length of time to allow before you are reminded of the event. Choose from: **3 minutes**, **5 minutes**, **10 minutes**, **15 minutes**, or **30 minutes**.
  - **Snooze** to be reminded of the event at a future time.
  - **Dismiss** to dismiss the reminder.




## View Events


The following procedure helps you view your calendar events.

1. Press  and tap  **Apps** >  **Calendar**.
2. To view a Calendar event farther out, tap either **Week** or **Month**.
3. Tap a day to view its events.
  - Events are displayed in chronological order.
  - The color bars indicate the type of calendar the event belongs to.
  - Slide up, down, left, or right across the screen to view earlier or later dates and times.
  - Tap an event to display its details.
  - Touch and hold a day or time slot to create a new event.

## Delete Events

The following procedures show you how to delete your calendar events.

1. Press  and tap  **Apps** >  **Calendar**.
2. Open the calendar event details:
  - In **List**, **Day**, and **Week** views, tap the calendar event you want to delete.
  - In **Month** view, tap the date where the calendar event occurs, and then tap the calendar event.




- In **Year** view, tap the month in which the event is located.
3. Tap  > **Delete**.
  4. In the Delete confirmation box, tap **OK**.

– or –

If the calendar event is recurring, select **Only this event** or **All repetitive events**.





## Clock

The Clock app offers features for keeping track of time and setting alarms.




1. Press  and tap  **Apps** >  **Clock**.
2. Swipe your finger along the tabs at the top of the screen to view features. Tap a tab to use a feature:
  - **Alarm:** This feature allows you to set an alarm to ring at a specific time.
  - **World clock:** allows you to view the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
  - **Stopwatch:** You can use this option to measure intervals of time.
  - **Timer:** You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).
  - **Desk clock:** Display a clock and calendar on the screen, with shortcuts to your favorite apps.

### Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified for the alarm.

1. Press  and tap  **Apps** >  **Clock** > **Alarm** tab.
2. Tap  **Create alarm**, and then enter information for the alarm.




### Delete an Alarm

1. Press  and tap  **Apps** >  **Clock** > **Alarm** tab.
2. Touch and hold an alarm, and then tap **Delete** from the pop-up menu.

## Calculator

Use the Calculator app to perform mathematical calculations.

**Note:** Rotate the phone to switch to a scientific calculator.




1. Press  and tap  **Apps** >  **Calculator**.
2. Tap the keypad to enter your equation. You can touch and hold **C** to clear all numbers.

## Dropbox

Dropbox works to provide access to your desktop files directly from your phone. This app allows you to bring your files with you when you're on the go, edit files in your Dropbox from your phone, upload photos and videos to Dropbox, and share your selected files freely with family and friends.





The app works in conjunction with a partner program placed on a target computer using an active Internet connection.

Dropbox creates a folder that automatically synchronizes its contents across all of your connected devices on your account. Update a file to your Dropbox on your computer, and it's automatically updated to the same folder on your other devices.

1. Press  and tap  **Apps** >  **Dropbox**.
2. Follow the prompts to set up and use Dropbox.

## Manually Uploading a Picture to Dropbox

Follow the below procedures to manually upload pictures to the Dropbox app.

1. Press  and tap  **Apps** >  **Camera**.
2. After the photo is taken, view the photo in the Gallery.
3. Tap screen to reveal the image options.
4. Tap  > **Dropbox**, select a folder location, and tap **Upload**.

**Note:** If your share folder is located on your computer, you will momentarily receive an on-screen popup notifying you that a new image was uploaded to your shared Dropbox folder.

## Google Search

Use Google Search to search the Internet.

- Press  and tap  **Apps** >  **Google**.

## Google Settings

Use Google Settings to manage your Google apps and account settings.

- Press  and tap  **Apps** >  **Google Settings**.




## Help

Help provides online information to help with your questions.

- Press  and tap  **Apps** >  **Help**.

## My Files




My files allows you to manage your manage your sounds, images, videos, Bluetooth files, Android files, and other memory card data in one convenient location. This application allows you to launch a file if the associated application is already on your phone.

1. Press  and tap  **Apps** >  **My files**.
2. Folders display, including:
  - **All files:** Tap to choose Device storage, or SD memory card, to show files stored in the phone's internal memory, or on an optional installed memory card (not included).
  - **Images:** Pictures stored on your phone.
  - **Videos:** Videos stored on your phone.
  - **Music:** Songs stored on your phone.
  - **Documents:** Other files stored on your phone.

**Note:** Different folders may appear depending on how your phone is configured.

## POLARIS Office 5

POLARIS Office 5 is a Microsoft Office compatible office suite. The application provides a central place for managing your documents online or offline. The application can also open Adobe PDF (Portable Document Format) files.







1. Press  and tap  **Apps** >  **POLARIS Office 5**.
2. Follow the prompts to set up and use Polaris Office.

# S Memo

The S Memo application allows you to create memos using the keyboard, your finger, or both. You can add images, voice recordings, and text all in one place.





## Create a New Memo

Follow the steps below to create a new memo or expand or reply to an existing memo using the S Memo app.

1. Press  and tap  **Apps** >  **S Memo**.
2. Tap  to start a new memo in text mode, or tap  to start a new memo in drawing mode. You can change back and forth in a memo to add text with the keyboard and by writing with your finger.
3. Tap  to access memo options. Available options depend on whether you have saved the memo, or are in keyboard mode. Memo options may include:
  - **Share via:** Share your memo using Group Play, Photos, Drive, Wi-Fi Direct, Bluetooth, Add to Dropbox, Flipboard, Picasa, Messaging, Google+, Hangouts, Gmail, or Email.
  - **Delete:** Erase the memo.
  - **Export:** Save the memo to your Gallery or as a PDF.
  - **Save as:** Save the memo with a different name.
  - **Add tag:** Set tags to add in searches.
  - **Add to Favorites:** Tag the current memo as a favorite.
  - **Change background:** Set the background for your memo. Swipe the screen to the left or right to select a background and then tap **Done**.
  - **Edit pages:** Drag pages to a new order.
  - **Create event:** Launch Calendar to create a new event.
  - **Set as:** Set a memo as a contact icon, Home screen wallpaper, Lock screen wallpaper, or a widget.
  - **Print:** Print a memo to a compatible Samsung printer (not included) via Wi-Fi.
4. When you are finished creating your memo, tap **Save** on the top menu bar.

## S Memo Options

Configure S Memo options.

1. Press  and tap  Apps >  S Memo.
2. From the S Memo screen, tap  to access the following options:
  - **Search:** Search for a saved memo.
  - **Delete:** Permanently delete a memo.
  - **Sort by:** Sort the memo list by Date (most recent), Date (oldest), Name, Tag, Favorites, or User settings.
  - **List view/Thumbnail view:** Tap to view your existing memos in a list or thumbnail (default) view.
  - **Import/Export:** Export a memo as an S Note or S Memo file, or import an S Note or S Memo file.
  - **Create folder:** Enter a name for a folder in the Folder name field and touch **OK**.
  - **Change order:** Rearrange your memos. Touch and hold a memo, and then drag it to a new location and release.
  - **Move:** Move a memo to a folder.
  - **Copy:** Copy the selected memo to the clipboard.
  - **Settings:** Tap **Accounts** to add accounts which can sync memos with S Memo.
  - **Help:** Learn about S Memo.
  - **Backup and restore:** Back up your memos to an optional memory card (not included). You can also retrieve memos backed up on a memory card.

## S Translator

Easily translate words and phrases, either spoken or in text.

- Press  and tap  Apps >  S Translator.




## Voice Services

The following information will guide you through using your voice to interact with your phone.

## S Voice


Your phone's S Voice is a voice recognition application used to activate a wide variety of functions on your phone. This is a natural language recognition application.

This goes beyond the Google Search Voice Actions feature that simply recognizes Google commands and search terms. You can ask it questions (Is it raining in Dallas?) or give it commands (Show me where to find cheap gas).

1. Press  and tap  **Apps** >  **S Voice**.
2. Navigate through the following on-screen tutorial screens by reading the information and tapping **Next**, or tap **Skip** to continue without reading the information.
3. Wake up the application by repeating the phrase "Hi Galaxy."








**Note:** The wake-up command/phrase can be changed from "Hi Galaxy" to anything else.

4. Tap  if the phone does not hear you or to give it a command.

**Tip:** You can also launch S Voice by quickly pressing the **Home Key** twice. To enable this setting, tap  > **Settings**, and check **Open via the home key**.

## Voice Recorder

The Voice recorder allows you to record an audio file up to one minute long and then immediately share it using AllShare, Messaging, Gmail, or via Bluetooth. Recording time will vary based on the available memory within the phone.

1. Press  and tap  **Apps** >  **Voice Recorder**.
2. To start recording, tap  and speak into the microphone.
3. To pause recording, tap . To end the recording, tap .
4. Tap  for options:
  - **Share via:** Share your recording. Options may include Drive, Dropbox, Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
  - **Delete:** Delete one or more voice recordings. Tap the recordings to delete and tap **Delete**. Tap **OK** to confirm the deletion.
  - **Settings:**
    - **Storage:** Choose where your recordings will be saved. Select between Phone or memory card.
    - **Recording quality:** Set the recording quality to High or Normal.

- **Limit for multimedia message:** Choose whether voice recordings you make are limited to a size that can be attached to a multimedia message.
  - **Contextual filename:** Choose whether the phone automatically creates a filename that includes GPS location information. When turned On, contextual filenames are assigned when the GPS tag options is turned On in the Camera, and the phone is connected with a network.
  - **Default name:** Choose the name prefix for your recordings. For example, if your Default name is Voice, your recordings would be named Voice 001, Voice 002, Voice 003, etc.
  - **Noise reduction:** Choose whether the phone uses noise reduction during recording, to improve recording quality.
  - **Recording volume:** Choose the default volume for recordings.
  - **Channel:** Choose whether recordings are made in Stereo or Mono.
  - **Skip interval:** Choose the number of seconds to skip when you tap **Forward** and **Back** during playback.
- **End:** Close the app.

## Voice Search

Search the Web by speaking your search criteria.

- Press  and tap  **Apps** >  **Voice Search**.

## Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth phones, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

### Turn Bluetooth On or Off

When Bluetooth is On, you can scan and find other Bluetooth devices, to share information between the devices. Turn Bluetooth Off when not in use to conserve battery power.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **Bluetooth ON/OFF** switch to turn Bluetooth on or off.


**Note:** For details on your phone's Bluetooth settings, see [Bluetooth Settings](#).


**Tip:** You can also turn Bluetooth on or off from the Notifications Panel. Drag down from the top of the screen, and then tap **Bluetooth**.



## Pairing with a Bluetooth Device

Pairing initiates a connection between your phone and the target device, usually by using a passcode or PIN. After pairing, your phone and the target device recognize each other and exchange information without having to enter a passcode or PIN.



1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Make sure that the target device is discoverable, so that your phone can find it. Refer to the instructions that came with the target device to find out how to set it to discoverable mode.
4. Tap **Scan**. Your phone will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your phone then automatically tries to pair with the target device.
  - If automatic pairing fails, enter the passcode supplied with the target device.

The pairing and connection status is displayed below the target device in the Bluetooth devices section. When you are connected to the target device,  (Bluetooth connected) displays in the Status bar.

**Note:** Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

## Reconnect to a Bluetooth Device



When you have paired your phone with another device, you should be able to reconnect it automatically by turning on Bluetooth on your phone.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Make sure that the target device is discoverable.
4. Tap the target device's name in the Bluetooth devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the target device's documentation to find the passcode.
  - If you still cannot reconnect, follow the instructions in [Disconnect or Unpair from a Bluetooth Device](#), and then follow the instructions in [Pairing with a Bluetooth Device](#).

## *Disconnect or Unpair from a Bluetooth Device*




Follow these instructions to disconnect or unpair your phone from a Bluetooth device.

### Disconnect from a Bluetooth Device

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Tap the connected device, and then touch **OK** to disconnect.

### Unpair from a Bluetooth Device

You can make your phone forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.

1. Press  and tap  > **Settings**.
2. Tap the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. In the Bluetooth devices section, tap  next to the device, and then tap **Unpair**.

## *Send Information Using Bluetooth*





You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or notebook computer. The first time you transfer information between your phone and another device, you need to enter or confirm a security passcode. After that, your phone and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.

### Send Information from Your Phone to Another Device

You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Calendar events
- Contacts
- Audio files



**Note:** Your phone must already be paired to the Bluetooth device in order to receive files. See [Pairing with a Bluetooth Device](#) for more information.

1. Press  and tap  > **Settings** > **Connections** > **Bluetooth**.
2. If Bluetooth is not on, tap the **ON/OFF** switch to turn it on.
3. Set the receiving device to discoverable mode. Refer to the device's documentation for instructions on receiving information over Bluetooth.
4. On the phone, open the application that contains the information or file you want to send. Some common ways of sharing files via Bluetooth include:
  - While viewing photos or videos in the Gallery, tap  > **Bluetooth**.
  - While playing music using the Music app, tap  > **Via Bluetooth**.
5. Tap the name of the receiving device.
6. On the receiving device, accept the file.


## *Receive Information Using Bluetooth*

Your phone is capable of receiving a wide variety of file types with Bluetooth, including photos, music tracks, and documents such as PDFs.

**Note:** Your phone must already be paired to the Bluetooth device in order to receive files. See [Pairing with a Bluetooth Device](#) for more information.

1. Press  and tap  > **Settings** > **Connections** > **Bluetooth**.
2. If Bluetooth is not on, tap the **ON/OFF** switch to turn it on.
3. When your phone receives a file transfer request notification, tap **Accept**.
4. When the file is transferred, a notification displays. To open the file immediately, slide down the notifications panel, and then tap the relevant notification.

When you open a received file, what happens next depends on the file type:

- Media files and documents are usually opened directly in a compatible application. For example, if you open a music track, it starts playing in the Music Player application.
- For a vCalendar file, select the calendar where you want to save the event, and then tap .
- The vCalendar is added to your Calendar events. (For more information on using the Calendar, see [Calendar](#).)
- For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

## Memory Card

A microSD™ memory card is an optional accessory (not included) that allows you to store images, videos, music, documents, and other data on your phone.

**Important:** You can damage a microSD card by improper installation. Please be careful when inserting, removing, or handling it.

### Install a microSD Card

Follow the instructions below to install an optional memory card (not included).



1. Using the slot provided, gently lift the cover off the phone.
2. With the gold contacts facing down, slide the card into the slot.
  - Note that the microSD card slot is on top of the SIM card. The SIM card holds information about your phone and service, and should remain installed.
3. Replace the battery compartment cover, making sure all the tabs are secure and there are no gaps around the cover.

### Remove a Memory Card

Use the following procedures to remove an optional memory card from your phone.

1. Remove the cover.
  - Grasp the phone firmly and locate the cover slot on the back at the top of the phone.
  - Place your fingernail in the opening and firmly “pop” the cover off the phone (similar to a soda can).
2. Firmly press the memory card into the slot and release it. The card should pop partially out of the slot.

3. Remove the memory card from the slot.
4. Replace the cover.

**Important!** You can damage the memory card by improper installation. Please be careful when inserting, removing, or handling it.



## *View Memory Card Usage*

Use the following procedure to view memory usage information for an optional installed memory card.

- Press  and tap  > **Settings** > **More** > **Storage**. The total space, the amount of space occupied by files, and available space are displayed. See [Storage](#) for more information.

## *Format a Memory Card*



Formatting a memory card permanently removes all files stored on the card.

1. Press  and tap  > **Settings** > **More** > **Storage**.
2. Scroll down the screen, tap **Format SD card** > **Format SD card** > **Delete all**.

**Warning!** Formatting erases all the data on an installed memory card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

## *Unmount a Memory Card*


When you need to remove an optional installed microSD card, you must unmount the card first to prevent corrupting the data stored on it or damaging the card.

1. Press  and tap  > **Settings** > **More** > **Storage**.
2. Tap **Unmount SD card**.
3. Remove the microSD card. See [Remove a Memory Card](#).

## *Transfer Files Between Your Phone and a Computer*

You can use the supplied USB cable to connect your phone directly to your computer and transfer music, pictures, and other content files. For example, if you have a music album stored on your computer that you want to listen to on your phone with the Music app or Google Play Music, just attach your phone to the computer and copy the files to the Music folder.

1. Connect your phone to your computer using the supplied USB/charging cable. You may need to remove the USB cable from the Charging Head.
  - Insert the smaller end of the cable to the USB Charger/Accessory jack at the bottom of the phone.

- Insert the larger end of the cable into an available USB port on your computer.
- 2. Your phone will automatically detect the connection. When  appears in the Status bar, swipe your finger down from the Status bar to open the Notification Panel.
- 3. On the Notification Panel, the type of connection is displayed:
  - **Media device (MTP):** Connected as a media device. Used for most transfers. You can transfer files in Windows or from a Mac.
  - **Camera (PTP):** Connected as a camera, used for transfers of photos using camera software on your computer.

To change the connection type, tap **Connected as [xxx]** on the Notification Panel and tap the desired connection.

- 4. Follow the prompts on your computer to begin transferring files.



## *Update Your Phone*

From time to time, updates may become available for your phone. Use System update options to update your phone's internal software.



### *Before Updating Your Firmware*

Updating your phone firmware will erase all user data from your phone. You must back up all critical information before updating your phone firmware.

### **Back Up Information to Your Google Account**

1. Press  and tap  > **Settings** > **Accounts** > **Backup and reset**.
2. Tap **Back up my data** to turn on the feature (checkmark).
  - Tap **Backup account** to choose or sign in to a Google Account to use for backups.
  - Tap **Automatic restore** if you want information saved to the Google Account above to be restored when you reinstall apps, such as after a firmware update, or when setting up a new device.



### **Back Up Your Microsoft Exchange ActiveSync Information**

1. Press  and tap  > **Settings**.
2. Tap **Accounts**, and then tap your Microsoft Exchange ActiveSync account.
3. Tap **Sync all**.

## Preserve Data on an Optional Installed Memory Card

As an added precaution, to preserve any data on an optional installed memory card (not included), please remove it from your phone prior to starting the update process.

## *Update Your Phone*

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **System Update** to use these options:
  - **Update now:** Manually check for software update.
  - **Auto update:** Check for updates automatically.
  - **Wi-Fi only:** Download software updates only when connected via Wi-Fi.
  - **Update PRL:** Download the latest PRL, used by your phone to access the network.
  - **Update Profile:** Update the user profile related to your wireless service account. If you choose to change your user name online, use this option to update the user name on your phone.
  - **UICC Unlock:** Unlock your phone's Universal Integrated Circuit Card.







# Settings

---

Use Settings to configure your phone to your preferences.

## Access Settings

Settings are arranged on tabs by category, to quickly access options.

1. Press  and tap  > **Settings**.
2. Tap a tab to access settings by category:
  -  **Connections** tab: Connect to wireless networks, including 3G, 4G, and Wi-Fi, and to other devices.
  -  **My device** tab: Personalize your phone, including sounds and the display, accessibility, and input.
  -  **Accounts** tab: Set up accounts on your phone, like your Google and Samsung Accounts, and your email and social networking accounts. You can also set up backup options.
  -  **More** tab: Set permissions for locations and security, and manage your phone.

## Wi-Fi Settings

Use Wi-Fi settings to control your phone's connections to Wi-Fi networks, and for using Wi-Fi Direct to connect directly to other Wi-Fi Direct devices.

### Turn Wi-Fi On or Off

When Wi-Fi is turned On, your phone will notify you of available Wi-Fi networks, and you can connect to the Wi-Fi networks. Turn Wi-Fi Off when not in use, to conserve battery power.



1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **ON/OFF** switch beside **Wi-Fi** to turn Wi-Fi on or off.

**Note:** You can also turn Wi-Fi on or off from the Notifications Panel. Drag down from the top of the screen, and then tap **Wi-Fi**.






## Configure Wi-Fi Settings

Set up and manage wireless access points.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap the **ON/OFF** switch beside **Wi-Fi** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Configure these settings:
  - **Add Wi-Fi network:** Connect to a new Wi-Fi network. For more information, see [Wi-Fi](#).
  - **Scan:** Search for available Wi-Fi networks.
  - **Wi-Fi Direct:** Connect to other Wi-Fi Direct devices. For more information, see [Wi-Fi Direct](#).

## Other Wi-Fi Settings



Set up and manage wireless access points.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap the **ON/OFF** switch to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap  to configure these settings:
  - **Advanced:**
    - **Network notification:** Phone alerts you when a new Wi-Fi network is available.
    - **Sort by:** Choose how available Wi-Fi networks are listed on the screen after a scan.
    - **Keep Wi-Fi on during sleep:** Specify when to switch from Wi-Fi to mobile data for data communications, when the phone goes to sleep (when the backlight goes out). This setting can affect data usage, and the behavior of devices you connect to your phone.
    - **Always allow scanning:** When enabled, Google Location Service and other applications can scan for Wi-Fi networks, even when Wi-Fi is turned off.
    - **Smart network switch:** Auto switch between Wi-Fi networks and mobile networks.
    - **Wi-Fi timer:** Automatically connect or disconnect from a Wi-Fi network, using the Starting time and Ending times you set.

- **Install certificates:** If you have certificates stored on an installed optional memory card (not included), you can use this option to install the certificates.
- **MAC address:** View your phone's MAC address (not configurable).
- **IP address:** View your phone's IP address (not configurable).
- **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
- **WPS PIN entry** (not configurable): View the PIN used by your phone to set up a PIN-secured connection to a Wi-Fi router or other equipment.
- **Help:** Learn about setting up and using Wi-Fi networks, and other settings.

## Wi-Fi Direct

Wi-Fi Direct allows devices to connect to each other directly via Wi-Fi, without a Wi-Fi network or hotspot, and without having to set up the connection. For example, your phone can use Wi-Fi Direct to share photos, contacts and other content with other Wi-Fi Direct devices.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap the **ON/OFF** switch beside **Wi-Fi** to turn Wi-Fi on. Wi-Fi must be on to configure Wi-Fi Direct settings.
3. Tap **Wi-Fi Direct** at the bottom of the screen. Your phone automatically scans for nearby Wi-Fi Direct devices, or you can tap **Scan** to start scanning.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.


– or –

Touch **Multi-connect** to create a connection to devices that support multi-connect.

Touch **Scan** to search for available multi-connect devices, and then select the devices and follow the prompts to complete the connection.



## Bluetooth Settings

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet. You don't need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them, even if they are in different rooms.

Your phone can use Bluetooth to share photos, contacts and other content with other Bluetooth devices. Many of the apps on your phone provide options for sharing via Bluetooth under  **Menu**.

## Turn Bluetooth On or Off





When Bluetooth is On, you can scan and find other Bluetooth devices to share information between the devices. Turn Bluetooth Off when not in use to conserve battery power.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **ON/OFF** switch beside **Bluetooth** to turn Bluetooth on or off.

**Note:** You can also turn Bluetooth on or off from Notifications. Drag down from the top of the screen, and then tap **Bluetooth**.

## Pairing with Other Bluetooth Devices




Pair with other Bluetooth devices, manage your Bluetooth connections, and control your phone's visibility to other devices.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap the **ON/OFF** switch to turn Bluetooth on. Bluetooth must be on to configure settings.
3. From the Bluetooth screen, configure these settings:
  - Tap the **ON/OFF** switch to turn Bluetooth on.
  - Tap your phone's name to enable or disable visibility to other Bluetooth devices. When your phone is visible, other devices can find your phone during a scan. Your phone remains visible for the period of time set in the Visibility timeout setting.
  - Tap a paired device to connect to it, or touch  beside a device to change its settings.
  - Tap **Scan** to search for visible Bluetooth devices. After searching, tap a device to pair with it.
4. Tap  for more settings:
  - **Visibility timeout:** Set the length of time your phone is visible to other devices when you turn on visibility.
  - **Received files:** View files transferred to your phone via Bluetooth.
  - **Help:** Learn about Bluetooth, and other settings.

# Data Usage

Monitor data usage, and control your phone's connection to mobile data service.

**Note:** Data is measured by your phone. Your service provider may account for data usage differently.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Data usage** to set options:
  - **Mobile data:** Enable or disable Mobile data. You can also control Mobile Data at Notifications.
  - **Limit mobile data usage:** Disable the mobile data connection when the specified limit is reached. After enabling the setting, drag the red limit line on the graph below to set the data usage limit.
  - **Alert me about data usage:** Receive an alert when mobile data usage reaches the warning limit you set. After enabling the setting, drag the orange warning line on the graph below to set the data usage warning limit.
  - **Data usage cycle:** Choose a time period for limiting data usage. Data usage for the period displays on the graph, along with usage by application below.
3. Tap  to set other options:
  - **Restrict background data:** Prevent the phone from connecting to the network in the background for synchronization or other services.
  - **Auto sync data:** Synchronize with accounts automatically, at any time.
  - **Show Wi-Fi usage:** Displays data usage while connected to Wi-Fi.
  - **Mobile hotspots:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.

## More Networks Settings



More networks settings provide additional options for configuring connections between your phone and other devices.

### Airplane Mode

Enabling Airplane mode turns off calling, messaging, and data network features. It also turns off other connectivity features, such as Wi-Fi and Bluetooth.

While in airplane mode, you can use other features of your phone, such as playing music, watching videos, or other applications.



To use Wi-Fi and Bluetooth when Airplane mode is enabled, turn them on in Settings, or on the Notifications panel.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks**, and then tap the check box next to **Airplane mode** to enable or disable the option.

**Note:** You can also control Airplane mode from the **Device options** menu. Press and hold the **Power/Lock Key**, and then tap **Airplane mode**.

### Default Messaging App

If you have multiple messaging apps installed on your phone, you can choose the app your phone uses for messaging. The app you select here will be used when you choose Messages in other apps, such as when sharing items like pictures or video.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **Default messaging app**.
3. Choose a messaging app. The default Messaging app included with your phone is available, along with any other messaging apps you've installed.



**Note:** If you choose a default messaging app other than Messages (for example, Google Hangouts), you will not be able to use the standard Messages app unless you restore it as the default messaging app.

### Printing

You can print from your phone, via Wi-Fi, to an optional compatible printer (not included). Your phone and the optional printer must be connected to the same Wi-Fi network.





#### Turn Print Services On or Off

Before you can print from your phone, a print service must be turned on. The print service communicates with the printer when you select something to print.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **Printing**, and then choose a print service from the list. The Samsung Print Service Plugin is available by default.
3. Tap the **ON/OFF** switch to turn the service on or off. The service must be on to configure settings or print.

## Add a Printer




Before you can print to a printer, you must set it up on your phone. You'll need to know the IP address of the printer; consult the printer's documentation for this information.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **Printing**.
3. Choose a print service from the list, and then tap the **ON/OFF** switch to turn the service on or off. The service must be on to add a printer.
4. Tap  > **Add printer** > , and then enter a name and the IP address of the printer.

## Configure Print Settings

Choose options for printing from your phone.



**Note:** Below settings are examples only. Available settings will differ depending on the type of print service and printer you are using.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **Printing**.
3. Choose a print service from the list, and then tap the **ON/OFF** switch to turn the service on or off. The service must be on to add a printer.
4. Tap  > **Settings** to configure options. Available options may vary depending on the type of printer, and not all printers support all options.
  - **2-Sided printing for documents:** Choose Simplex to print one page per piece of paper, or choose Long edge or Short edge to print on both sides. Short edge and Long edge refer to how the pages flip when moving through multiple pages.
  - **Secure Release:** If the optional printer supports secure release, and it is enabled, you must enter a User ID to retrieve your printouts. Tap **Secure release**, and then enter a User ID.

- **Confidential Print:** If the optional printer supports confidential printing, and it is enabled, you must enter a User ID and Password to retrieve your printouts. Tap **Confidential Print**, and then enter a **User ID** and **Password**.
- **Job Accounting:** If the optional printer supports job accounting, and it is enabled, you must enter a User ID and Password when printing, to track printing by group or other set.
- **Version:** View the version of the print service software.
- **Open source licenses:** View licenses related to the print service software.

## Mobile Networks




Set options for network selection and data service.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **Mobile networks**.
3. Configure options:
  - **Mobile data:** Connect to the mobile data network.
  - **Network mode:** Choose a preferred network mode.
  - **Connections optimizer:** Configure network operators.

## VPN Settings

Set up and manage Virtual Private Networks (VPN).

**Note:** VPN settings include storage of login credentials on your phone. You must configure a screen unlock pattern, PIN or password before setting up a VPN.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **More networks** > **VPN**.
3. Tap  to add a VPN, with these options:
  - **Name:** Enter the name of the VPN.
  - **Type:** Choose the type of VPN: PPTP, L2TP/IPSec PSK, L2TP/IPSec RSA, IPSec Xauth PSK, IPSec Xauth RSA, or IPSec Hybrid RSA.
  - **Server address:** Enter the VPN server address.
  - **PPP Encryption (MPPE):** Tap to enable, if applicable for the VPN.
  - **Show advanced options:** Tap to set other options, depending on the type of VPN.

4. Tap **Save** to save the VPN.

## NFC



Use NFC (Near Field Communication) to share information between your phone and another NFC device by touching the devices together, typically back-to-back.

NFC is used with S Beam and Android Beam, and must be turned on to use these features.

**Note:** Tap  > **Help** for information about using NFC.



### Turn NFC On or Off

Enable NFC (Near Field Communication) on your phone.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **ON/OFF** switch beside **NFC** to turn NFC on or off.



### Android Beam

When Android Beam is activated, you can beam app content to another NFC-capable device by holding the devices close together. You can beam browser pages, YouTube videos, contacts, and more. The app determines what kind of data is beamed.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **NFC**, and then tap the **ON/OFF** switch beside **Android Beam** to turn Android Beam on or off.

### Tap and Pay

Use Tap and pay to configure payment service apps, so you can pay for purchases by tapping your phone at the point of sale.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **ON/OFF** switch beside **NFC** to turn NFC On. NFC must be on to use Tap and pay.
3. Tap **Tap and pay** to access settings.

### S Beam

Share more and share it faster with S Beam. From photos to documents, large video files to maps, you can share almost anything instantly with one touch, simply by placing your devices back-to-back.



S Beam uses your phone's NFC (Near Field Communication) feature to send, or "beam", content to other NFC devices.



S Beam works in the background. Use the sharing options from your favorite apps to select content to share via S Beam. For example, you can beam pictures or videos from Gallery, or songs from Music player. Just bring the devices together (typically back to back), and then tap the screen.

## *Turn S Beam On or Off*

When S Beam is turned On, you can send or receive data by touching your phone to another NFC-capable device.



1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap the **ON/OFF** switch beside **S Beam** to turn S Beam on or off.

## *Nearby Devices*

Share files with devices using DLNA (Digital Living Network Alliance) standards, over Wi-Fi.

To use Nearby devices, you must connect to the same Wi-Fi network as the devices you wish to share with, and the other devices must support DLNA.



**Note:** Use care when enabling file sharing. When enabled, other devices can access data on your phone.

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Nearby devices** to configure these options:
  - Touch the **File sharing** check box to enable or disable file sharing.
  - Under **Advanced**, touch options to control how content is shared from your phone:
    - **Shared contents:** Choose the type of content to share, from Videos, Photos, or Music.
    - **Allowed devices list:** View and manage a list of devices allowed to connect to your phone.
    - **Denied devices:** View and manage a list of devices restricted from connecting to your phone.
    - **Download to:** Choose a location to save downloaded content, from USB storage (device memory) or optional installed SD card (not included).
    - **Download from other devices:** Choose how to handle incoming files from other devices, from Always accept, Always ask, or Always reject.

## Screen Mirroring

With Screen mirroring, you can share your phone's screen with another device, using an optional AllShare Cast accessory (not included).

### Turn Screen Mirroring On or Off

1. Press  and tap  > **Settings** > **Connections** tab.
2. Tap **Screen mirroring**, and then tap the **ON/OFF** switch beside Screen Mirroring to turn Screen mirroring on or off.



**Note:** Tap  > **Help** to find instructions for using Screen mirroring to connect to a device.

## Lock Screen

Configure settings for locking the screen, to improve security.

### Screen Lock

Choose a screen lock, to dim and lock the screen.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Lock screen**.
3. Tap **Screen lock** and follow the instructions to select a screen lock. Then configure the displayed options for that screen lock.
  - **Swipe:** Unlock your phone by swiping your finger across the screen. This is the default screen lock, and offers no security.
    - **Multiple widgets:** Display multiple widgets on your Lock screen.
    - **Lock screen widgets:** Customize your clock and personal message.
    - **Shortcuts:** Add app shortcuts to the lock screen.
    - **Unlock effect:** Show a ripple effect on the lock screen when you slide your finger over the screen.
    - **Help text:** Show help information on the Lock screen.
    - **Wake up in lock screen:** Wake up the screen by speaking a command.
    - **Set wake-up command:** Set a command to wake up the screen.

- **Face unlock:** Unlock your phone by looking at the screen. This option offers low security, because someone who looks similar to you could unlock your phone. Tap the option for more information, and to set up Face unlock.
  - **Lock screen widgets:** Customize your clock and personal message.
  - **Improve facial recognition:** Have your face captured in different conditions.
  - **Presence check:** Require a blink to unlock your phone.
  - **Make pattern visible:** Display the security pattern.
  - **Lock automatically:** Automatically lock your phone 5 seconds after the screen turns off.
  - **Lock instantly with power key:** Instantly lock your phone by pressing the **Power/Lock Key**.
- **Face and voice:** Unlock your phone by looking at the screen and speaking. This option offers low security, because someone who looks and/or sounds similar to you could unlock your phone. Touch the option for more information, and to set up Face and voice unlock.
  - **Lock screen widgets:** Customize your clock and personal message.
  - **Improve facial recognition:** Have your face captured in different conditions.
  - **Presence check:** Require a blink to unlock your phone.
  - **Make pattern visible:** Display the security pattern.
  - **Lock automatically:** Automatically lock your phone 5 seconds after the screen turns off.
  - **Lock instantly with power key:** Instantly lock your phone by pressing the **Power/Lock Key**.
- **Pattern:** Draw a pattern on the screen to unlock your phone. Tap the option, and then follow the prompts to create or change your screen unlock pattern.
  - **Lock screen widgets:** Customize your clock and personal message.
  - **Make pattern visible:** Display the security pattern.
  - **Lock automatically:** Automatically lock your phone 5 seconds after the screen turns off.
  - **Lock instantly with power key:** Instantly lock your phone by pressing the **Power/Lock Key**.



- **PIN:** Enter a numeric PIN (Personal Identification Number) to unlock your phone. With PIN screen lock, you can also set the With swipe lock and Lock screen options.
  - **Lock screen widgets:** Customize your clock and personal message.
  - **Lock automatically:** Automatically lock your phone 5 seconds after the screen turns off.
  - **Lock instantly with power key:** Instantly lock your phone by pressing the **Power/Lock Key**.
- **Password:** Enter an alphanumeric password to unlock your phone.
  - **Lock screen widgets:** Customize your clock and personal message.
  - **Lock automatically:** Automatically lock your phone 5 seconds after the screen turns off.
  - **Lock instantly with power key:** Instantly lock your phone by pressing the **Power/Lock Key**.
- **None:** Disable all custom screen lock settings, to use the default swipe unlock screen.

## Display Settings

Configure settings for your phone's display.

### Wallpaper

Customize the background of the Home and Lock screens.



1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display** > **Wallpaper**.
3. Tap a screen to customize, from **Home screen**, **Lock screen**, or **Home and lock screens**.
4. Choose a source for wallpaper:
  - **Gallery:** Select a picture from Gallery. Follow the prompts to crop the picture and save it as wallpaper.
  - **Live wallpapers:** Select a moving scene for the background (Home screen only).
  - **ID wallpapers:** Select a wallpaper from the currently assigned ID pack (Home screen only).
  - **Photos:** Choose a photo to use as wallpaper.

- **Travel wallpaper:** Set options to display images from the city of your choice (Lock screen only).
- **Wallpapers:** Select an image from the Wallpapers gallery.

## Notification Panel Settings



Configure options for the Notification panel, available when you swipe your finger down from Status bar at the top of the screen.

At the top of the Notification panel, you can control settings with the Quick settings. Choose quick settings to display in Notification panel settings.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display** > **Notification panel**.
3. Configure settings:
  - **Brightness adjustment:** Tap the check box to display a slider for adjusting the screen brightness on the notification panel.
  - **Set the quick setting buttons:** Quick settings display at the top of the Notification panel, to allow you to set favorite options quickly.
    - Tap buttons to add or hide them from the Notification panel.
    - Touch and hold a button, and then drag it into a new position in the list.



## Screen Mode

Choose a screen mode to match your type of viewing.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap **Screen mode** to configure these options:
  - **Adapt display:** Tap the check box to enable or disable automatic optimization of the screen to match the type of image being displayed and other criteria, such as battery level.
  - When **Adapt display** is disabled, select a specific screen mode to match the content you display.

## Brightness

Adjust the screen brightness to suit your surroundings, or to your personal preference.



1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display** > **Brightness** to configure options:
  - Tap the checkmark next to **Automatic brightness** to allow the phone to adjust brightness automatically.

- To set a custom brightness level, clear the Automatic brightness checkmark and then touch and drag the **Brightness level**.

3. Tap **OK** to save the settings.

## *Auto Rotate Screen*

When Auto rotate screen is enabled, the screen automatically updates when you rotate the phone.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap **Auto rotate screen** to enable or disable the setting.






## *Screen Timeout*

Screen timeout lets you select how long the display screen remains lit after you press any key.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and the tap **Screen timeout** to choose a time period.



## *Daydream*

The Daydream setting controls what the screen displays when the phone is docked in an optional dock (not included), or while charging. You can choose to display a Colors screen, or display photos stored on your phone.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap the **ON/OFF** switch next to **Daydream** to turn the option on or off. When On, you can configure these options:
  - **Colors:** Tap the selector to enable or disable display of a colorful screen.
  - **Flipboard:** Display pictures from Flipboard. After enabling the option, tap  to choose pictures to display.
  - **Google Photos:** Display pictures from Photos.
  - **Photo Frame:** Tap the selector to enable or disable display of pictures in a photo frame. After enabling the option, tap  to choose pictures to display.
  - **Photo Table:** Tap the selector to enable or disable display of pictures in a photo table. After enabling the option, tap  to choose pictures to display.
  - Tap **Start now** to switch to daydream.
  - Tap **Select dream time** to choose when daydream displays: While docked, While charging, or All.

## Font Style



You can set the font for all text that displays on the screen.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap **Font style** to choose a font. Follow the prompts to set it as the default.



**Tip:** To find new fonts, tap **Download** to access new fonts from Samsung Apps.



## Font Size

This option allows you to select which size of font is displayed.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap **Font size** to select a size.



## Touch Key Light Duration

This feature allows you to set the length of time the  **Menu Key** and  **Back Key** remain lit after you touch them.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap **Touch key light duration** to choose a duration period.



## Show Battery Percentage

The battery charge level displays as an icon on the Status bar by default. This feature allows you to display the battery icon plus the percentage of remaining charge.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap the check box beside **Show battery percentage** to enable or disable the option.



## Edit After Screen Capture

When *Edit after screen capture* is enabled, screen captures you take are automatically opened for editing.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap the check box beside **Edit after screen capture** to enable or disable the option.



## Auto Adjust Screen Tone

When *Auto adjust screen tone* is enabled, your phone automatically analyzes the screen and adjusts the brightness to conserve battery power.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Display**, and then tap the check box beside **Auto adjust screen tone** to enable or disable the option.

## LED Indicator

The LED indicator on the front of the phone displays when the phone is locked, to notify you of status changes and events. Use LED indicator settings to configure how the LED functions.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **LED indicator**, and then tap the check box beside options to enable or disable the option:
  - **Charging:** When enabled, the LED glows red during charging, and green when the battery is fully charged.
  - **Low battery:** When enabled, the LED blinks red to indicate low battery charge.
  - **Notifications:** When enabled, the LED blinks orange to show that you have missed calls, new messages, or application events.
  - **Voice recording:** When enabled, the LED glows blue when recording with the screen turned off.



## Sound Settings

Configure settings for your phone's sound and audio.

### Volume

Set the system volume level, and set default volume for call ringtones, notifications, and media playback.



**Note:** You can also set System volume from the Home screen by pressing the **Volume Key**.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap **Volume** to set volume levels. Drag the sliders to set the default volume for:
  - **Music, video, games, and other media**
  - **Ringtone**
  - **Notifications**
  - **System**





## Ringtones

Choose a ringtone for incoming calls.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap **Ringtones** to choose a ringtone:
  - Tap a ringtone to select it. As you tap a ringtone, a sample plays.
  - Tap **Add** to choose sound file from Dropbox, or use Sound picker to choose a song from Music player.



## Vibrations

Choose vibrations to play for notifications, such as for incoming calls, new messages, and event reminders.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap **Vibrations** to choose a vibration pattern.
3. Touch a vibration pattern to select it. As you touch a pattern, a sample of the vibration occurs.
4. To create your own pattern, touch **Create**. Touch **Tap** to create and tap on the screen to enter a new pattern.



## Notifications

Choose a sound for notifications, such as for new messages and event reminders.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap **Notifications** to choose a notification tone.
3. Tap a sound to play a sample and select the sound.



## Vibrate When Ringing

When *Vibrate when ringing* is enabled, a vibration plays for calls and notifications, along with the ringtone or sound. You can use the Vibration intensity and Vibrations settings to customize the vibration.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap the check box next to **Vibrate when ringing** to enable or disable the option.



## Dialing Keypad Tone

When Dialing keypad tone is enabled, tones play when you tap keys on the Phone keypad.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap the check box next to **Dialing keypad tone** to enable or disable the option.



## Touch Sounds

When *Touch sounds* is enabled, tones play when you tap or touch the screen to make selections.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap the check box next to **Touch sounds** to enable or disable the option.



## Screen Lock Sound

When *Screen lock sound* is enabled, tones play when you touch the screen to lock or unlock it.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap the check box next to **Screen lock sound** to enable or disable the option.



## Emergency Tone

You can choose to have a tone play, or have your phone vibrate, periodically during an emergency call.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap **Emergency tone** to select a tone:
  - **Off**: No tone or vibration plays during emergency calls.
  - **Alert**: A tone plays during emergency calls.
  - **Vibrate**: A vibration plays during emergency calls.

## Samsung Keyboard Settings

You can choose whether sounds and vibrations play when you tap keys on the Samsung Keyboard while entering text.



1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap an option to enable or disable it:

- **Sound when tapped:** When enabled, a sound plays when you tap keys.

## *Adapt Sound*

Find the best sound for you, to use during calls, and for media playback.

**Note:** This setting uses earphones to ensure the best sound during setup. You must connect optional earphones (not included) to the phone to configure this setting.



1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Sound**, and then tap **Adapt Sound**.
3. Read the information about My sound and connect optional earphones (not included).
4. Tap **Start**, and then follow the prompts to set My sound.

## *Home Screen Mode*

Your phone offers two Home screen modes:

- **Standard mode** provides a conventional layout for apps and widgets on the Home screen.
- **Easy mode** provides an easier experience for the first-time smartphone user.

You can choose the Home screen mode at any time.



1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Home screen mode**, and then choose a mode. Touch **Apply** to save your selection.

## *Call Settings*

Configure options for calling with your phone.



### *Set Up Call Rejection Messages*

Create and manage text messages to send to callers when rejecting incoming calls. Messages you create here are available from the incoming call screen when you use the **Reject with message** option.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Set up call rejection messages** to configure options:
  - To create new messages, tap **Create**, and then follow the prompts.
  - To modify an existing message, tap the message, and then edit the text.



## Answering/Ending Calls

Manage settings for answering and ending calls.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Answering/ending calls** to configure options:
  - **The home key answers calls:** Answer incoming calls by pressing the **Home key**.
  - **Voice control:** Answer calls by speaking commands. Tap the **ON/OFF** switch to turn Voice control On, and then tap **Voice control** to configure the **Incoming calls** option. When enabled, you can answer or reject calls with the voice commands “Answer” and “Reject”. When you answer a call with a voice command, the Speaker will automatically turn on for hands-free calls.
  - **The power key ends calls:** End calls by pressing the **Power/Lock Key**. In this case, pressing the power key during a call will not lock the screen.



## Turn Off Screen During Calls

When enabled, the screen automatically turns off during phone calls, and the proximity sensor on the front of the phone is used to turn the screen back on when the phone is moved or brought close to another surface, such as when you move the phone to your ear.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Turn off screen during calls** to enable the setting.



## Call Alerts

Set options for sounds and vibrations to occur during calls.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Call alerts** to configure options:
  - **Vibrate on connection to network:** Vibrate the phone when a call connects to the network.
  - **Call-end vibration:** Vibrate the phone when the other caller ends the call.
  - **Call connect tone:** Play a tone when the other caller answers a call.
  - **Minute minder:** Play once per minute during a call.
  - **Call end tone:** Play a tone when the other caller ends the call.
  - **Alerts on call:** Play notifications for alarms and new messages play during calls.



## Call Accessories

Configure options for using a headset.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Call accessories** to configure options:
  - **Automatic answering**: When enabled, and you have a headset connected to the Headset Jack, incoming calls are answered automatically after a delay, which you can set at Automatic answering timer. Tap to enable or disable the setting.
  - **Automatic answering timer**: Choose a time period to delay before automatically answering an incoming call when Automatic answering is enabled and a headset is connected to the phone. Tap to choose **2 seconds**, **5 seconds**, or **10 seconds**.
  - **Outgoing call conditions**: When the phone is paired with a Bluetooth headset, you can choose to make calls even when the phone is locked. Tap to choose **Even when device locked**, or **Only when device unlocked**.



## Ringtones and Keypad Tones

Choose tones and vibrations to play for incoming calls and keypad taps.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Ringtones and keypad tones** to configure options:
  - **Ringtones**: Select a ringtone for incoming calls.
  - **Vibrations**: Select a vibration pattern for incoming calls when the *Vibrate when ringing option* is enabled. You can tap **Create** to create a custom pattern.
  - **Vibrate when ringing**: Set a vibration for incoming calls.
  - **Keypad tones**: Play tones for keypad taps.

## Personalize Call Sound

Choose options for call audio, in cases where you might need the sound softer or more clear, or optimized for your right or left ear.


1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Personalize call sound**.
3. Tap **In-call sound EQ** to configure options:
  - **Off**: Use the default call sound settings.
  - **Soft sound**: Use softer sounds during calls.

- **Clear sound:** Use clearer sounds during calls.
- **Adapt Sound left:** Optimize audio for the left headphone speaker.
- **Adapt Sound right:** Optimize audio for the right headphone speaker.

4. Tap **Adapt sound** and then follow the on-screen prompts to find the best sound for you.

## *Noise Reduction*

When enabled, Noise reduction suppresses background noise from your environment during calls.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Noise reduction** to enable the setting.


## *Increase Volume In Pocket*

When enabled, this setting uses the proximity sensor to detect when the phone is in a pocket or other close-fitting location such as a purse or bag, and increases the volume for incoming call ringtones.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Increase volume in pocket** to enable the setting.



## *US Dialing*

When enabled, the US dialing option replaces “+” with the international access code for your location.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **US dialing** to enable the setting.

## *International Dialing*



When US dialing is enabled, it uses the International dialing code to replace “+”. US dialing must be disabled to access the International dialing code.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **US dialing** to disable the setting. US dialing must be disabled to access the International dialing setting.
3. Tap **International dialing**, and then use the keypad to enter the international dialing code.

## TTY Mode



A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect using a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **TTY mode** to choose a mode: **TTY Off**, **TTY Full**, **TTY HCO**, or **TTY VCO**.



## Hearing Aids

Enable hearing aid compatibility.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Hearing aids** to enable the setting.

## DTMF Tones

Set the length of Dual-tone Multi-frequency (DTMF) tones, which play when you use the keypad during a call, such as when navigating menus.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **DTMF tones** to choose a tone length: **Normal** or **Long**.



## Voicemail Settings

Set options for voicemail.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Voicemail settings** to configure options.



## Voice Privacy

When enabled, Voice privacy improves the security of voice calls.

1. Press  and tap  > **Settings** > **My device** tab > **Call**.
2. Tap **Voice privacy** to enable the setting.

## Blocking Mode



When Blocking mode is enabled, notifications for selected features are blocked, and you only receive the notifications you choose. You can choose to block notifications by feature or contact, and choose blocking all the time, or during a specific time period.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap the **ON/OFF** switch next to **Blocking mode** to enable or disable the setting. Blocking mode must be enabled to configure options.
3. When Blocking mode is enabled, choose features to block:
  - **Block incoming calls:** When enabled, notifications for incoming calls will not display. Tap the check box next to the option to enable or disable it.
  - **Turn off notifications:** When enabled, notifications for new messages will not display. Tap the check box next to the option to enable or disable it.
  - **Turn off alarm and timer:** When enabled, notifications for alarms and timers will not display. Tap the check box next to the option to enable or disable it.
  - **Turn off LED indicator:** When enabled, the LED indicator will not light for notifications, even when the screen is off. Tap the check box next to the option to enable or disable it.
4. Set a time period for blocking mode:
  - Tap the check box next to **Always**, to block notifications at all times.
  - To set a specific time period to block notifications each day, disable the Always option, and then set a starting time (**From** field) and ending time (**To** field).
5. Set up Allowed contacts (contacts whose notifications will not be blocked):
  - Tap **Allowed contacts**, and then choose an option:
    - **None:** Block all notifications from all contacts.
    - **All contacts:** Allow notifications from any contact.
    - **Favorites:** Only allow notifications from contacts tagged as favorites.
    - **Custom:** Allow notifications from contacts you specify. Create a list of allowed contacts by tapping **Add** and selecting contacts.
  - If you have created a Custom list of allowed contacts, you can tap **Allowed contact list** to modify the list of allowed contacts. This option is only available when the Custom list is enabled.





## Hands-free Mode

When enabled, notifications and other information is read aloud.

1. Press  and then tap  > **Settings** > **My device** tab > **Hands-free mode**.
2. Tap the **ON/OFF** switch to enable the setting and configure options:
  - **Incoming call**: Read out callers' information when receiving incoming calls.
  - **Message**: Read out senders' information when new messages arrive.
  - **Alarm**: Read out alarm information when alarms sound.
  - **Calendar event info**: Read out scheduled alarm information when alarms sound.

## Power Saving Mode



Configure Power saving mode settings to conserve battery power.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap the **ON/OFF** switch to turn Power saving mode on, and then tap **Power saving mode** to set options:
  - **CPU performance**: Disable the maximum performance of the phone's CPU (Central Processing Unit).
  - **Screen output**: Reduce the frame refresh rate and brightness level.

**Note:** Tap **Learn about power saving** to view information about these settings.





## Accessories

Configure your phone's behavior when it is connected to an optional dock (not included).

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Accessories** to configure settings:
  - **Dock sound**: Play a sound when you insert and remove the phone from the dock.
  - **Audio output mode**: Play audio through the dock speakers when the phone is docked.
  - **Desk home screen display**: Display the desk home screen when the phone is docked.
  - **Automatic unlock**: Flip the S View cover open to unlock the screen when the secure lock is disabled and the phone is docked.

# Accessibility

Your phone offers features to make using the phone easier for those with certain physical disabilities. Use Accessibility settings to configure these features.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Accessibility** to configure options:
  - **Auto rotate screen:** Enable automatic rotation of the screen when you rotate the phone.
  - **Screen timeout:** Set a period of time for the screen to remain lit—after which it will dim and lock.
  - **Speak passwords:** Read aloud password information.
  - **Answering and ending calls:** Accept calls by pressing the  **Home Key** or end calls by pressing the  **Power/Lock Key**.
  - **Show shortcut:** Display a shortcut to Accessibility settings on the *Device options* menu. (The *Device options* menu displays when you press and hold the **Power/Lock Key**.)
  - **Manage accessibility:** Choose settings for exporting, updating, and sharing the accessibility settings as a file.
  - **TalkBack:** Activate the TalkBack feature and configure options.
  - **Font size:** Change the size of the fonts used on the screen.
  - **Magnification gestures:** Control whether your phone recognizes gestures to pan, and zoom in or out.
  - **Negative colors:** Reverse the display of on-screen colors from White text on a Black background to Black text on a White background.
  - **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Tap the **ON/OFF** switch to turn color adjustment on, and then tap **Color adjustment** for options.
  - **Notification reminder:** When turned on, your phone beeps at intervals you set, to remind you of unread notifications.
  - **Accessibility shortcut:** Control whether your phone recognizes a gesture to quickly enable accessibility features. To use the gesture, press and hold the **Power/Lock Key** until you hear a sound or feel a vibration, and then touch and hold two fingers on the screen until you hear an audio confirmation.

- **Text-to-speech options:** Configure options for converting text to speech. For more information, see [Text-to-speech Options](#).
- **Sound balance:** Control the signal sent to the left and right when using earphones.
- **Mono audio:** Enable stereo audio to be compressed into a single mono audio stream for use with a single earphone.
- **Turn off all sounds:** Mute every sound made by the phone during taps, selections, notifications, etc.
- **Flash notification:** Set the camera flash to blink when notifications occur.
- **Google subtitles:** Tap to choose options for subtitles. Tap the ON/OFF switch beside Google subtitles (CC) to turn the option on or off, and then configure options for language, text size, and caption style.
- **Samsung subtitles:** Tap to choose options for subtitles. Tap the ON/OFF switch beside Samsung subtitles (CC) to turn the option on or off, and then configure options for alignment, text font and size, and window appearance.
- **Assistant menu:** Display a special menu to improve phone accessibility for users with reduced dexterity. Tap the **ON/OFF** switch, and then tap **Assistant menu** for options.
  - **Dominant hand:** Display the Assistant menu on the left or right side of the screen.
  - **Edit:** Reorder or remove items on the Assistant menu.
- **Press and hold delay:** Select a time interval for using the Tap and Hold gesture.
- **Interaction control:** Adjust how your phone interprets motions and screen touches. You can turn motions and screen timeout on or off. You can also block areas of the screen from touch interaction, turn Auto rotate and hard key functions (Power/Lock Key, Volume Key, etc.) off, and display app notifications only on the Notification panel and Status bar. Tap the **ON/OFF** switch, and then tap **Interactive control** for options.

## Language and Input

Use Language and input settings to choose a default language for your phone's operations, plus settings for text entry and other inputs.

### Choose a Default Language



Choose the language for operating your phone.

1. Press  and tap  > **Settings** > **My device** tab.

2. Tap **Language and input**, and then tap **Language** to select a language.




## *Set a Default Input Method*

The following procedure allows you to select and set the default method you will use when accessing the keyboard.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap **Default** to select the default input method.




## *Google Voice Typing Settings*

Google voice typing allows you to speak your entries. When you enable Google voice typing, it's available for use when you touch a field to enter text.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap the check box next to **Google voice typing** to enable or disable the feature.
3. Tap  beside **Google voice typing** to configure options:
  - **Choose input languages:** Select language(s) to use for voice input, or choose **Automatic** to let Google decide.
  - **Block offensive words:** Tap the check box to control whether Google displays words generally recognized as offensive.
  - **Download offline speech recognition:** Download and install speech recognition engines, to allow you to use voice input while not connected to the network, such as during Airplane mode.

## *Samsung Keyboard Settings*

The Samsung Keyboard is an on-screen QWERTY keyboard, so you can enter text by “typing” on the keyboard. Samsung keyboard is enabled by default, and you can choose options for using it.




1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap  next to **Samsung keyboard** to configure these options:
  - **Input language:** Choose language(s) for use with Samsung keyboard. When you have more than one language enabled, you can slide your finger on the space bar while entering text to switch languages.

- **Predictive text:** Tap the **ON/OFF** switch to turn predictive text on or off. Predictive text suggests words matching your text entries, and optionally, complete common words automatically. Tap **Predictive text** to configure options:
  - **Live word update:** When enabled, Samsung Keyboard updates with popular new words every day.
  - **Personalised data:** When enabled, predictive text uses personal language data you have entered to make better predictions. Samsung keyboard can collect all the text you enter, including personal data and credit card numbers, in order to give better prediction results.
  - **Learn from Facebook:** Log into Facebook to allow your phone to learn from your Facebook postings.
  - **Learn from Gmail:** Log into Gmail to allow your phone to learn from your Gmail email.
  - **Learn from Twitter:** Log into Twitter to allow your phone to learn from your Twitter postings.
  - **Learn from Messages:** Allow your phone to learn from your text and multimedia messages.
  - **Learn from Contacts:** Allow your phone to learn from your Contacts entries.
  - **Clear server data:** Delete your information stored on the personalization server.
  - **Clear personalized data:** Remove all personalized data you have entered.
  - **Privacy policy:** Read the privacy policy.
- **Auto capitalisation:** When enabled, predictive text automatically capitalizes words in your text based on common usage, such as at the beginning of sentences.
- **Auto spacing:** When enabled, predictive text automatically inserts spaces between words.
- **Auto-punctuate:** When enabled, a period and space are automatically entered to end a sentence, when you touch the space bar twice.
- **Keyboard swipe:** Configure options for entering text by swiping your finger over the letters, instead of tapping each letter individually.
  - **None:** When enabled, the keyboard won't recognize swipes on the keyboard as text.
  - **Continuous input:** When enabled, you can enter text by sliding your finger across the keys on the keyboard.

- **Cursor control:** When enabled, you can slide your finger across the keyboard to move the cursor to begin entering text.
- **Key-tap feedback:** Choose options for the keyboard to indicate your entries.
  - **Sound:** When enabled, the keyboard plays a sound for your key taps.
  - **Character preview:** When enabled, the character displays in a bubble as you tap each key.
- **Help:** Learn about Samsung Keyboard.
- **Reset settings:** Return settings to the defaults.

## Swype Settings



Swype is a new way to enter text on touch screens. Instead of touching each key individually, use your finger to trace over the letters of a word. For each word, place your finger on the first letter and glide to the subsequent letters, lifting on the last letter.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap  next to **Swype** to configure these options:
  - **Settings:** Set Swype options:
    - **Vibrate on keypress:** When enabled, the phone plays a vibration for your Swype touches.
    - **Sound on keypress:** When enabled, the phone plays sounds for your Swype touches.
    - **Pop-up on keypress:** When enabled, characters display above keys as you enter text.
    - **Long-press delay:** Set the time needed to select alternate characters.
    - **Show complete trace:** When enabled, Swype displays the trace of each word until you start the next word.
    - **Auto-capitalization:** When enabled, Swype automatically capitalizes the first word of sentences.
    - **Auto-spacing:** When enabled, Swype automatically inserts spaces between words as you complete them.
    - **Next word prediction:** When enabled, Swype predicts the next word based on the previous word.

- **Show Voice key:** When enabled, a voice entry key displays on the keyboard. You can tap the key to speak your entries.
- **Themes:** Configure the appearance of the Swype keyboard.
  - **Landscape keyboard:** Choose the appearance of the keyboard when you rotate the phone to landscape orientation (on its side). You can have the keyboard span the bottom of the screen, choose to have it on the left or right side of the screen, or split across the screen.
  - **Keyboard height:** Choose the height of the keyboard in portrait and landscape orientations.
  - **Word choice list font size:** Choose the size of words Swype offers as you enter text.
- **My Words:** View and manage words in your Swype dictionary, used for word completion, suggestions, and spellchecking.
- **Languages:** Choose the current language for Swype, and download new languages.
- **Gestures:** Learn about shortcuts you can use on the keyboard to quickly accomplish common tasks.
- **Help:** Learn about using Swype.
- **Updates:** Check for updates to Swype, and install them if desired.

## Voice Search Settings




Voice Search performs Google searches by speaking the criteria.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap **Voice Search** for these options:
  - **Language:** Choose a language for voice searching.
  - **Speech output:** Choose options for speech output.
  - **Block offensive words:** When enabled, words many people find offensive are not shown in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
  - **Hotword detection:** When enabled, you can say “Google” to launch voice search.
  - **Download offline speech recognition:** Download speech recognition, to enable voice input while offline.

- **Personalized recognition:** Enable to have your phone improve recognition based on your speech. (This option is only available when you are signed in to a Google Account.)
- **Google Account dashboard:** View and manage your collected data. (This option is only available when you are signed in to a Google Account.)
- **Bluetooth headset:** Record audio through a Bluetooth headset, when using an optional Bluetooth headset (not included), paired with your phone.



## *Text-To-Speech Options*

Text-to-speech (TTS) provides audible readout of text, such as the contents of text messages.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap **Text-to-speech options**:
  - **Preferred TTS engine:** Select **Samsung text-to-speech engine**, or **Google Text-to-speech Engine**. Tap  to configure options.
  - **General:**
    - **Speech rate:** Choose a rate for text readouts.
    - **Listen to an example:** Play an example of speech used for readouts.



## *Pointer Speed*

Set the pointer speed for an externally connected mouse or trackpad (not included).

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Language and input**, and then tap **Pointer speed** to set the pointer speed. Tap **OK** to save your selection.

## *Motions and Gestures*

Configure various motion and gestures services.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Motions and gestures** to configure features. Tap the **ON/OFF** switch to turn a feature on, and then tap the feature to configure options:
  - **Motion:** Control your phone with natural movements, like putting the phone to your ear to call a displayed contact.
    - **Direct call:** Lift the phone to your ear while viewing a contact to call the contact.



- **Smart alert:** Lift the phone to receive notifications of missed calls and notifications that occurred while the phone was stationary.
- **Zoom:** Tilt the phone to zoom in or out when viewing pictures in Gallery.
- **Move an icon:** Move the phone left or right while touching an icon to reposition it to another page.
- **Browse an image:** Move the phone in a side-to-side motion to pan from side to side while viewing an image.
- **Mute/pause:** Mute incoming calls and pause playback by turning the phone screen-side down.
- **Palm motion:** Control the phone by touching the screen with the palm of your hand.
  - **Mute/pause:** Mute incoming calls and pause playback by covering the screen with your hand.

## Smart Screen

Use Smart screen options to have your phone automatically adjust screen timeout, rotation when it detects you are looking at the screen, and control scrolling and playback based whether you are facing the screen.



Smart screen options use the front camera to detect when you are facing the screen. Some factors that may affect the ability of the front camera to detect your face are:

- When the phone is not docked or held upright, for example when placed on a table.
- When the front camera cannot detect your face and eyes.
- When the front camera is being used for the current application.
- When the source of light is behind you, or when using the phone in the dark.

## Smart Stay

When Smart stay is enabled, the screen will not time out as long as you are looking at it.

When enabled, the Smart stay icon  displays in the Status bar.



1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Smart screen**, and then tap the check box beside **Smart stay** to enable or disable the option.

**Note:** Tap **Smart screen** for tips on using the feature.

## Voice Control

When Voice control is turned On, you can use voice commands to control your phone.

**Note:** If you set the alert type for calls or notifications to vibrate, voice command is not available.

1. Press  and tap  > **Settings** > **My device** tab.
2. Tap **Voice control**, and then tap the **ON/OFF** switch beside **Voice control** to turn the feature on or off.
3. After you turn the feature On, tap **Voice control** to set options:
  - **Incoming calls:** Answer or reject calls with the voice commands “Answer” and “Reject”. When you answer a call with the voice command, the Speaker will automatically be turned on for hands-free talking.
  - **Alarm:** Stop or snooze alarms with the voice commands “Stop” and “Snooze”.
  - **Camera:** Take pictures with the voice commands “Smile”, “Cheese”, “Capture” and “Shoot”. Record videos with the command “Record video.”
  - **Music:** Control the music player with the voice commands “Next”, “Previous”, “Pause”, “Play”, “Volume up”, and “Volume down”.



## Accounts

When you set up accounts on your phone, such as your Google or Samsung Accounts, and your email or social networking accounts, you can synchronize account information between your phone and the account. Types of information you can synchronize include contacts, pictures, videos, and other types of files.

You can also set up options for backing up information from your phone to the cloud, and back up or reset your phone.



### Add an Account

Add an account to your phone to share information between your phone and the account.

1. Press  and tap  > **Settings** > **Accounts** tab.
2. Tap **Add account**, and then choose a type of account.
3. Follow the prompts to enter your account credentials and complete the account set up.

## Backup Options

Set up a backup account on your phone to save information from your phone to the account.

1. Press  and tap  > **Settings** > **Accounts** tab.
2. Tap an option to configure backup features:
  - **Cloud:** Configure options for synchronizing and backing up information.
    - Tap **Add account** to sign in to your Samsung Account, or create a new Samsung Account. You can sync contacts, calendar events, memos, and Internet shortcuts. You can back up Logs, SMS and MMS messages, and current wallpaper settings.
    - Tap **Link Dropbox account** to sign in to your Dropbox account, or set up a new account, to sync pictures, videos and documents.
  - **Backup and reset:** Configure options for backing up data from your phone to a Google Account.
    - **Back up my data:** Tap the check box to turn On automatic backup to a Google Account, and then set up an account for the backups.
    - **Backup account:** When Back up my data is turned On, set up a Google Account for backups. You can set up a new Google Account, or sign in to an existing account.
    - **Automatic restore:** When Back up my data is turned On, you can also turn on Automatic restore to automatically restore settings and other information from the backup when you reinstall an app.
  - **Factory data reset:** Erase all your information from the phone, and return the settings to the factory defaults. All data will be erased, and cannot be recovered. A factory data reset also erases the key for decrypting files stored on an optional installed memory card, so files on the card cannot be used after the reset.

# Location Settings



Control apps' access to your location, and configure location sources.


Some apps may require one or more location services be turned On for full app functionality.

GPS signals may be affected by your surroundings, including:

- Buildings
- Tunnels or underground structures
- Weather conditions
- High-voltage or electromagnetic fields
- Tinted windows

**Note:** E9-1-1 location service is standard on all mobile phones, to allow sharing of GPS information with emergency personnel when you make a call to emergency services, such as 9-1-1.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Location** to configure options:
  - Tap the **ON/OFF** switch to turn location services On or Off. When on, you are allowing Google's location service to collect anonymous location data. Some data may be stored on your device, and collection may occur even when no apps are running. After you turn Location on, you can configure settings:
  - **Mode:** Choose the method your phone uses to determine your location.
    - **High accuracy:** When enabled, your phone uses GPS information, Wi-Fi, and mobile networks to estimate your location.
    - **Power saving:** When enabled, your phone uses Wi-Fi and mobile networks to estimate your location.
    - **GPS only:** When enabled, your only phone uses GPS information to estimate your location.
  - **Recent location requests:** View services or apps that have recently accessed your location information.
  - **Location services:** View the current location service. Tap a service to configure options, if available.
  - **Location sources:** Tap **My places** to save your favorite locations, to allow your device to provide relevant information by recognizing saved locations.

- Tap **Home**, **Office**, or **Car**, and then follow the prompts to configure options for identifying the location.
- Tap  to set up a new location.



## Security

Configure options for securing information on your phone.

### Encryption



You can encrypt accounts, settings, downloaded apps and their data, media, and other files. After encryption, you must enter the PIN or password you set each time you turn on your phone. You can also encrypt information stored on an optional installed memory card (not included).

Encryption may take an hour or more to complete. Start with a charged battery, and keep the phone on the charger until encryption is complete. Interrupting the encryption process may result in the loss of some or all data.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Security**, and then tap an option:
  - **Encrypt device:** Tap **Set screen lock type** to start, and then follow the prompts to encrypt information.
  - **Encrypt external SD card:** Tap **Set screen lock type** to start, and then follow the prompts to encrypt information.

### Passwords

Use the Make passwords visible setting to briefly display password characters as you enter them into password fields.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Security**, and then tap the check box beside **Make passwords visible** to enable or disable the setting.

### Device Administration



Some applications, such as Corporate email, may require you allow access to your phone by device administrators in certain circumstances, such as if your phone is lost or stolen.

Some features a device administrator might control include:

- Setting the number of failed password attempts before the phone is restored to factory settings.
- Automatically locking the phone.



- Restoring factory settings on the phone.

## Configure Device Administration

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Security**, and then tap an option:
  - **Device administrators**: View, add, or remove device administrators.
  - **Unknown sources**: Enable your phone to install apps from sources other than Google Play Store.
  - **Verify apps**: Display a warning before installing apps that may cause harm.



## Security Update Service

Configure options for updating your phone's SE for Android security features.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Security**, and then tap an option:
  - **Security policy updates**: Automatically check for changes to the security policy and download any updates, to improve security and service.
  - **Send security reports**: When enabled, your phone will send security reports to Samsung for threat analysis when connected to Wi-Fi.

## Credential Storage



You can install credentials from an optional installed memory card (not included), and use the Credential storage settings to allow applications to access the security certificates and other credentials.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Security**, and then tap an option:
  - **Storage type**: If you have an optional memory card (not included) installed in your phone, you can choose to store credentials in phone memory or on a card.
  - **Trusted credentials**: View credentials you've installed.
  - **Install from device storage**: Install encrypted certificates from an optional installed memory card (not included), or from Drive, Downloads, or internal device storage.
  - **Clear credentials**: Clear stored credentials and reset the password (only available when credentials are installed).

## Application Manager



You can download and install applications from the Google Play Store or Samsung Apps, or create applications using the Android SDK and install them on your phone. Use Application manager to manage applications on your phone.

**Warning!** Because this phone can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Application manager**, and then tap **Downloaded**, **SD card**, **Running**, or **All** to view the status of apps and services. Tap an app or service for more information, and for app options, such as stopping and uninstalling.

## Default Applications



If you have installed multiple apps that perform the same kind of task, for example more than one messaging app, you can choose the app you want to use as the default.

3. Press  and touch  > **Settings** > **More** tab.
4. Tap **Default applications** to configure options:
  - **Home:** Choose a default home screen mode. For more information, see [Home Screen Mode](#).
  - **Messages:** Choose a default app for messaging (SMS and MMS).

**Note:** If you choose a default messaging app other than Messages (for example, Google Hangouts), you will not be able to use the Messages app unless you restore it as the default messaging app.



## Battery

See what is using battery power.

1. Press  and tap  > **Settings** > **More** tab.
2. Touch **Battery** to view battery usage for apps and services.
  - Touch **Show battery percentage** to display the percentage of total battery power available on the battery icon in the Status bar.
  - Touch an item for more information, or to configure options for managing power use.



## Storage

Manage the use of memory resources in your phone's Device memory, and on an optional installed memory card (not included).

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Storage** to view information about memory usage, and for other options:
  - **Device memory:** View memory usage for the different types of information stored on your phone's memory. Tap an item for more information.
  - **SD card:** View memory usage for the different types of information stored on an optional installed memory card.
    - **Mount SD card:** Prepare the card for use as storage in the phone. This option is only available if an optional memory card is installed, and is not already mounted. Usually, your phone mounts a memory card as soon as you install it.
    - **Unmount SD card:** Prepare an installed optional memory card for safe removal or formatting.
    - **Format SD card:** Permanently remove all content from an optional installed memory card. After formatting, the content cannot be retrieved.

## Date and Time

By default, your phone receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the Date and time settings.



1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Date and time** to configure settings:
  - **Automatic date and time:** Receive date and time updates from the wireless network.
  - **Set date:** Enter the current date (only available when Automatic date and time is disabled).
  - **Set time:** Enter the current time (only available when the Automatic setting is disabled).
  - **Automatic time zone:** Receive the time zone from the wireless network.
  - **Select time zone:** Choose your local time zone (only available when the Automatic setting is disabled).
  - **Use 24-hour format:** Set the format for time displays.



- **Select date format:** Set the format for date displays.



## *Activate This Device*

Connect to the network and activate your phone. If your phone is already activated, use this option to view information about your plan and usage.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **Activate this device**, and then follow the prompts to activate your phone on the network.



## *System Update*

Use System update options to update your phone's internal software.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **System Update** to use these options:
  - **Update now:** Manually check for software update.
  - **Auto update:** Check for updates automatically.
  - **Wi-Fi only:** Download software updates only when connected via Wi-Fi.
  - **Update PRL:** Download the latest PRL, used by your phone to access the network.
  - **Update Profile:** Update the user profile related to your wireless service account. If you choose to change your user name online, use this option to update the user name on your phone.
  - **UICC Unlock:** Unlock your phone's Universal Integrated Circuit Card.

## *About Device*

View information about your phone, including status, legal information, hardware and software versions, and a tutorial.

1. Press  and tap  > **Settings** > **More** tab.
2. Tap **About device**, and then tap items for more details:
  - **Software version:** View your phone's software version.
  - **Hardware version:** View the hardware version of your phone.
  - **Status:** View information about your phone's current status.
  - **Legal information:** Display Open source licenses, Google legal, and Privacy Alert.

- **Device name:** View your phone's name, and enter a new name if desired.
- **Model number:** View your phone's model number.
- **Android version:** View the firmware version of your phone.
- **Baseband version:** View the baseband version of your phone.
- **Kernel version:** View the kernel version of your phone.
- **Build number:** View the build number of your phone.
- **SE for Android status:** View your phone's current status.
- **Secure boot status:** View your phone's secure boot status.

# *Copyright Information*

---

©2014 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

©2014 Samsung. Samsung, Galaxy S, and S Beam are trademarks of Samsung Electronics Co., Ltd.

©2014 Google Inc. All rights reserved. Google, the Google logo, Android, Chrome, Gmail, Google+, Google Books, Google Maps, Google Mobile Services, Google Play, Google Voice, Google Voice Search, Google Wallet, Hangouts, YouTube, and Picasa are trademarks of Google, Inc.

Other marks are property of their respective owners.

Screen images simulated.

Appearance of device may vary.

# Index

---

- 3-Way Calling, 34
- 4G Services, 82
- About Device, 158
- Accessibility Settings, 143
- Accessory Settings, 142
- Accounts, 48
  - Backup Options, 152
  - Email, 51
  - Gmail, 49
  - Google, 48
  - Samsung, 50
  - Settings, 151
  - Social Network, 62
- Activation, 3, 158
- Airplane Mode, 122
- Alarm, 103
- Android Beam, 125
- Answer a Call, 32
- Application Manager, 156
- Applications, 64
- Apps
  - Installing New Apps, 64
  - Uninstall, 65
- Back Key, 8
- Battery
  - Display Percentage Indicator, 132
  - Install, 1
  - Settings, 156
- Block Caller ID, 34
- Blocking Mode, 141
- Bluetooth, 109
  - Disconnect, 111
  - Pairing with a Bluetooth Device, 110
  - Receive Information, 112
  - Send Information, 111
  - Settings, 119
  - Turn Bluetooth On or Off, 109
  - Unpair, 111
- Brightness, 131
- Browser, 84
- Calculator, 104
- Calendar, 100
  - Add Event, 100
  - Delete Events, 102
  - Event Alerts, 101
  - View Events, 102
- Call Forwarding, 35
- Call Settings
  - Answering/Ending Calls, 137
  - Call Accessories, 138
  - Call Alerts, 137
  - Increase Volume In Pocket, 139
  - International Dialing, 139
  - Noise Reduction, 139
  - Personalize Call Sound, 138
  - Ringtones and Keypad Tones, 138
  - Turn Off Screen During Calls, 137
  - US Dialing, 139
  - Voice Privacy, 140
- Call Waiting, 34
- Caller ID, 34
- Camera, 8, 86
  - Advance Settings, 90
  - Gallery, 91
  - Modes, 88
  - Options, 88
  - Quick Settings, 89
  - Record Video, 87
  - Take Picture, 87
- Chrome, 84
- Clock (App), 103
- Commercial Mobile Alert System (CMAS), 61
- Connections Optimizer, 81
- Contacts, 40
  - Accessing, 40
  - Add, 42
  - Assign a Picture, 44
  - Assign a Ringtone, 44
  - Delete, 45

- Edit, 43
- Favorites, 45
- Groups, 46
- Linking, 45
- Options, 41
- Save a Number, 43
- Share, 47
- Cover Release, 8
- Credential Storage, 155
- Data, 84
- Data Services, 81
  - User Name, 81
- Data Usage, 121
- Date and Time Settings, 157
- Daydream, 131
- Device Administration, 154
- Digital Living Network Alliance (DLNA), 126
- Display Settings, 129
  - Auto Adjust Screen Tone, 133
- Drag Gesture, 12
- Dropbox, 104
- DTMF Tones, 140
- Earpiece, 7
- Editing Text, 29
- Email, 51
  - Add New Account, 51
  - Attachments, 52
  - Call Number in Email, 31
  - Compose, 52
  - Corporate Accounts, 51
  - Delete Account, 57
  - Forward Email, 53
  - Manage Inbox, 53
  - Reply/Reply to All, 53
  - Settings, 54
  - Sync Account, 53
- Emergency Alerts, 61
  - Commercial Mobile Alert System (CMAS), 61
- Emergency Numbers, 31
- Emergency Tone, 135
- Encryption, 154
- Enhanced 9-1-1 (E9-1-1), 32
- Enter Text, 26
- Extended Home Screen, 21
- Favorites, 45
- Files
  - Transfer to/from Computer, 114
- Flash, 8
- Flick Gesture, 14
- Flipboard, 62
- Front Camera, 7
- Gallery, 91
  - Edit Photos, 94
  - Settings, 93
  - View Photos and Videos, 92
  - Zoom In or Out, 93
- Gesture
  - Drag, 12
  - Flick, 14
  - Pinch, 14
  - Slide, 11
  - Spread, 14
  - Swipe, 11
  - Tap, 10
  - Touch and Hold, 10
- Gestures, 10
- Gmail, 49
  - Read and Reply to Messages, 50
  - Send Message, 49
- Google
  - Account, 48
  - Google+, 62
  - Hangouts, 62
  - Play Books, 66
  - Play Magazines, 66
  - Play Movies & TV, 67
  - Play Music, 68
  - Search, 104
  - Settings, 105
  - Sign in, 49
  - YouTube, 63
- Google Checkout, 65
- Google Maps, 72
- Google Play Store, 64
  - Install an App, 64
- Google Voice Typing
  - Settings, 145

- Using, 27
- Google Wallet, 65
- Google+, 62
- GPS, 153
- Group Play, 67
- Groups, 46
  - Add Contact, 46
  - Creating a New Group, 46
  - Send Message to Group, 47
- Hands-free Mode, 142
- Hangouts, 62
- Headset
  - Settings, 138
- Headset Jack, 8
- Hearing Aids, 140
- Help, 105
- Home Key, 8
- Home Screen, 19
  - Extended, 21
  - Primary Shortcuts, 20
  - Shortcuts, 19
  - Widgets, 21
- Home Screen Mode, 136
- In-Call Options, 35
- Incoming Call
  - Answer, 32
  - Reject, 32
  - Reject Call with a Text Message, 33
- Infrared Transmitter, 8
- International Dialing, 139
- Internet
  - Chrome, 84
  - Internet Browser, 84
  - Lumen Toolbar, 84
- Keyboard
  - Samsung Keyboard, 27
  - Samsung Keyboard Settings, 145
  - Swype, 28
  - Swype Keyboard Settings, 147
- Keys
  - Functions, 7
  - Touch Key Light Duration, 132
- Language and Input, 144
- LED Indicator, 8, 133
- Light Sensor, 7
- Location Settings, 153
- Lock Screen, 127
- Logs, 38
  - Clear, 39
  - Options, 39
- Lumen Toolbar, 84
- Maps, Google, 72
- Memory Card, 113
  - Format, 114
  - Remove, 113
  - Unmount, 114
  - View Usage, 114
- Menu Key, 8
- Messaging
  - Managing Messages, 59
- Messaging, 48, 57
  - Call Number in a Message, 31
  - New Message Notification, 58
  - Sending Messages, 57
- Messaging
  - Settings, 60
- Microphones, 8
- Microsoft Exchange ActiveSync, 51
- MMS Messaging, 57
- Mobile Networks, 124
- Motion
  - Settings, 149
- Motions and Gestures, 17
  - Enabling, 17
- Movies, TV, and Media, 67
- Music, 68
  - Google Play Music, 68
  - Music App, 69
- Music (App), 69
  - Options, 71
  - Play Music, 69
  - Set a Song as a Ringtone or Alarm, 71
  - Use Playlists, 70
- Mute Phone Ringing, 32
- My Files, 105
- Navigation Apps, 72
  - Google Maps, 72
  - TripAdvisor, 72

- Near Field Communication (NFC)
  - Android Beam, 125
- Near Field Communication (NFC), 125
- Near Field Communication (NFC)
  - S Beam, 125
- Notification Icons, 22
- Notification Panel, 24
  - Settings, 130
- Notifications
  - Default Sound Settings, 134
- Passwords, 154
- Phone, 30
  - About Device, 158
  - Activation, 3
  - Key Functions, 7
  - Keypad, 30
  - Layout, 7
  - Navigation, 10
  - Setup, 1
  - Setup Application, 4
  - Status, 158
  - Turn On and Off, 9
  - Update Firmware, 115
- Phone Calls
  - 3-Way Calling, 34
  - Block Caller ID, 34
  - Call Forwarding, 35
  - Call from Logs, 30
  - Call Number in a Message, 31
  - Call Number in Email, 31
  - Call Using Contacts, 31
  - Call Waiting, 34
  - Caller ID, 34
  - Dialing Options, 33
  - Emergency Numbers, 31
  - In-Call Options, 35
  - Make Calls, 30
  - Mute the Ringer, 32
  - Options, 33
  - Receive, 32
  - Recent Calls. See Logs
  - Rejection Messages, 136
  - Settings, 136
  - Speed Dialing, 36
  - Using Phone Keypad, 30
  - Using recent calls, 30
  - Voicemail, 37
- Photos, 86
  - Crop a Photo, 94
  - Editing, 94
  - Sharing, 94
  - Viewing. See Gallery
- Pinch Gesture, 14
- Play Books, 66
- Play Magazines, 66
- Play Movies & TV, 67
- Play Music, 68
- Play Store, 64
- Pointer Speed, 149
- Polaris Office 5, 105
- Power Saving Mode, 142
- Power/Lock Key, 8
- Primary Shortcuts, 20
- Proximity Sensor, 7
- Quick Settings, 25
- Recent Applications, 21
- Recent Calls
  - Make call from, 30
  - View, 38
- Reject Incoming Call, 32
  - Reject with a Text Message, 33
- Rejection Messages for Phone Calls, 136
- Rotate Screen, 15
- S Beam, 125
- S Memo, 106
  - Create a New Memo, 106
  - Options, 107
- S Translator, 107
- S Voice, 108
- Samsung Account, 50
- Samsung Apps, 73
- Samsung Hub, 73
- Samsung Keyboard
  - Settings, 145
  - Using, 27
- Samsung Link, 75
  - Settings, 76
  - Share Media with Another Device, 77

- Screen
  - Auto Rotate, 131
  - Brightness, 130
  - Daydream, 131
  - Font Size, 132
  - Font Style, 132
  - Rotate, 15
  - Timeout, 131
  - Turn On and Off, 9
- Screen Capture
  - Settings, 132
- Screen Lock, 127
- Screen Mirroring, 127
- Screen Mode, 130
- Search, Google, 104
- Security, 154
  - Encryption, 154
- Settings, 117
  - Access Settings, 117
  - Accessibility, 143
  - Data Usage, 121
  - Display, 129
  - Language and Input, 144
  - Wi-Fi, 117
- Shortcuts, 19
- Slide Gesture, 11
- Smart Screen, 18, 150
- Smart Stay, 150
- SMS Messaging, 57
- Social Network Accounts, 62
- Sound Settings
  - Emergency Tone, 135
  - Screen Lock Sound, 135
- Sound Settings, 133
  - Dialing Keypad Tone, 135
  - Touch Sounds, 135
- Sound Settings
  - Adapt Sound, 136
- Speaker, 8
- Speed Dialing, 36
- Spread Gesture, 14
- Sprint
  - Account Information, 5
  - Account Passwords, 5
  - Data Services Password, 5
  - Manage Account, 5
  - Sprint 3G and 4G, 81
  - Sprint Zone, 77
  - Status Bar, 22
  - Status Icons, 22
  - Stopwatch, 103
  - Storage
    - Settings, 157
  - Story Album, 77
  - Swipe Gesture, 11
  - Swype, 28
    - Settings, 147
    - Using, 28
  - System Update, 158
  - Tap Gesture, 10
  - Text Editing, 29
  - Text Entry, 26
  - Text Input
    - Google Voice Typing, 27
    - Methods, 26
    - Samsung Keyboard, 27
    - Swype, 28
    - Tips for Entering Text, 29
  - Text Messaging, 57
  - Text-To-Speech, 149
  - Timer, 103
  - Tools, 100
  - Touch and Hold Gesture, 10
  - Touchscreen
    - Turn on, 9
  - TripAdvisor, 72
  - TTY Mode, 140
  - Typing, 26
  - Update Phone Firmware, 115
  - US Dialing, 139
  - USB Charger/Accessory Port, 8
  - Vibrations
    - Settings, 134
    - Vibrate When Ringing, 134
  - Video App, 97
  - Videos, 86
    - Pop-Up Play, 99
    - Record, 87



- Sharing, 94
- Viewing. See Gallery
- Virtual Private Networks (VPN), 82
  - Add a VPN, 83
  - Connect to a VPN, 83
  - Disconnect from a VPN, 84
  - Prepare Phone, 83
- Visual Voicemail, 38
- Voice Control, 18
  - Settings, 151
- Voice Recorder, 108
- Voice Search, 109
  - Settings, 148
- Voice Services, 107
  - S Translator, 107
  - S Voice, 108
  - Voice Recorder, 108
- Voice Typing
  - Using, 27
- Voicemail, 37
  - Notification, 37
  - Password, 5
  - Retrieve Voicemail, 37
  - Set Up Voicemail, 37
  - Settings, 140
- Setup, 4
- Visual Voicemail, 38
- Volume
  - Ringtones, 134
- Volume
  - Settings, 133
- Volume Key, 8
- VPN
  - Settings, 124
- Wallpaper, 129
- WatchON, 78
- Web, 79
- Widgets, 21
- Wi-Fi, 79
  - Connect to a Different Network, 80
  - Connect to a Network, 80
  - Connect to Wi-Fi Network, 79
  - Manually Connect to a Network, 80
  - Settings, 117
  - Turn Wi-Fi On, 79
  - Wi-Fi Direct, 119
- Wi-Fi Direct, 119
- World Clock, 103
- YouTube, 63
- Zoom In and Out, 14